# **HITACHI**

# TECHNICAL CATALOGUE

#### -YUTAKI

R32 / R410A SERIES



#### MODELS

#### **SPLIT SYSTEM**

YUTAKI S: RWM-(2.0-10.0)(N/R)1E YUTAKI S COMBI: RWD-(2.0-6.0)(N/R)W1E-220S(-K)

OUTDOOR UNITS: RAS-(2-3)WHVRP1 / RAS-(4-10)WH(V)NPE



Cooling & Heating



Contents

## Contents

1	General information
2	General data
3	Capacity and selection data
4	Acoustic characteristic curves
5	Working range
6	General dimensions
7	Refrigerant cycle and hydraulic circuit
8	Refrigerant and water piping
9	Electrical and control settings
10	LCD Controller
11	Optional functions
12	Complementary system CASCADE CONTROLLER

#### **General Index**

1.	General information	1
1.1	General information	2
	1.1.1 General notes	2
	1.1.2 Introduction	
	1.1.2.1 Overview of YUTAKI system	
	1.1.2.2 Summary of operations	3
1.2	Applied symbols	4
1.3	Norms and Regulations	4
1.4	Product guide	5
	1.4.1 Classification of the units	5
	1.4.1.1 Split system - Outdoor unit	5
	1.4.1.2 Split system - Indoor unit	5
	1.4.2 Product guide	6
	1.4.2.1 Split system - Outdoor unit	
	1.4.2.2 Split system - Indoor unit	
	1.4.3 Accessory code list	
	1.4.4 Outdoor unit accessories code list	12
2.	General data	15
2.1	Capacity tables	16
2.2	ERP performance data (Preliminary data)	19
	2.2.2.2 ERP data - YUTAKI S COMBI	25
	2.2.2.3 ERP additional data - YUTAKI S	30
	2.2.2.4 ERP additional data - YUTAKI S COMBI	
	2.2.3 General ERP data for combi heaters	
	2.2.3.1 YUTAKI S COMBI	
0.0	2.2.3.2 General ERP data for hot water storage tanks (YUTAKI S)	
2.3	Cooling mode application (EN 14825) (Models with cooling kit accessory) (Preliminary data)	
	2.3.1 Cooling data (EN 14825) - YUTAKI S	
	2.3.2 Cooling data (EN 14825) - YUTAKI S COMBI	
	2.3.3 Additional Cooling data (EN 14825) - YUTAKI S	
2.4	General specifications	
<b>2.4</b>	·	
	2.4.2 Split system - Outdoor unit (Preliminary data)      2.4.4 Domestic Hot Water Tank	
2.5	Component data (Preliminary data)	
	2.5.1 Split system - Outdoor unit	
	2.5.2 Split system - Indoor unit	
	2.5.2.1 YUTAKI S	
	2.5.2.2 YUTAKI S COMBI	54
2.6	Electrical data	56
	2.6.2 Split system - Outdoor unit	
	2.6.3 Split system - Indoor unit	

	2.6.3.1 YUTAKI S	
3.	Capacity and selection data	59
3.1	YUTAKI S	60
	3.1.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)	
	3.1.2 Maximum heating capacity table (kW) (Integrated) (High Huimidity condition) (Only for RAS-(2-3)WH	HVRP1
	outdoor combination models)	
2.0	YUTAKI S COMBI	
3.2	3.2.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)	
	3.2.2 Maximum heating capacity table (kW) (Integrated) (High Huimidity condition) (Only for RAS-(2-3)WF outdoor combination models)	HVRP1 66
	3.2.3 Maximum cooling capacity table (kW)	67
3.3	Correction factors	68
	3.3.1 Piping length correction factor	
	3.3.2 Correction factor depending on the altitude	/1
4.	Acoustic characteristic curves	73
4.1	Considerations	74
4.2	Sound pressure level for Outdoor unit	75
5.	Working range	77
5.1	Power supply working range	78
5.2	Temperature working range	78
	5.2.1 Space heating	78
	5.2.2 DHW	
	5.2.3 Swimming pool heating	
5.3		
5.3	Hydraulic working range	
	5.3.2 Pump performance curves	
6.	General dimensions	85
6.1	Name of parts and Dimensional data	86
	6.1.1 Split system - Outdoor unit	86
	6.1.2.2 YUTAKI S COMBI	91
6.2	Service space	92
	6.2.1 Split system - Outdoor unit	
	6.2.2 Split system - Indoor unit	
	6.2.2.2 YUTAKI S COMBI	
7.	Refrigerant cycle and hydraulic circuit	97
7.1	Refrigerant cycle and hydraulic circuit for Split system	

	7.1.1 Outdoor units	98
	7.1.2 Indoor units	100
8.	Refrigerant and water piping	103
8.1	General notes before performing piping work	104
	8.1.1 Piping work	
	8.1.2 Suspension of refrigerant and water pipes	104
8.2	R32 refrigerant circuit	105
	8.2.1 General notes R32 refrigerant	105
	8.2.2 Refrigerant piping	
	8.2.3 Refrigerant charge	
	8.2.3.1 Refrigerant charge amount	
	·	
8.3	R410A refrigerant circuit	
	8.3.1 Refrigerant charge	
	8.3.2 Refrigerant piping	
	8.3.3 Refrigerant charge	
	8.3.3.2 Refrigerant charge before shipment ( $W_0$ (kg))	
	8.3.4 Precautions in the event of gas refrigerant leaks	
8.4	Space heating and DHW	110
	8.4.1 Additional hydraulic necessary elements for space heating	110
	8.4.2 Additional hydraulic necessary elements for DHW	
	8.4.3 Additional hydraulic optional elements (For DHW)	
	8.4.4 Additional hydraulic necessary elements for DHW (only for UK market)	
	8.4.5 Requirements and recommendations for the hydraulic circuit	
	8.4.7 Water quality	
	o	
9.	Electrical and control settings	117
9.1	General check	118
	9.1.1 Split system - Outdoor unit	118
	9.1.2 Split system - Indoor unit	118
9.2	System wiring diagram	120
9.3	Electrical connection	121
0.0	9.3.1 Wiring size	
	9.3.2 Minimum requirements of the protection devices	
9.4	Transmission wiring	125
	9.4.1 YUTAKI units	
9.5	Optional indoor unit wiring (accessories)	126
0.0	9.5.1 Summary of the terminal board connections for YUTAKI units	
9.6	Setting of DIP switches and RSW switches	
	9.6.1 Outdoor unit	
	9.6.1.1 Location of DIP switches and rotary switches	
	9.6.1.2 Function of DIP switches and rotary switches	132
	9.6.1.3 LED indication	135

	9.6.2 YUTAKI unit	136
	9.6.2.1 Location of DIP switches and rotary switches	
	9.6.2.2 Function of DIP switches and rotary switches	
	9.6.2.3 LED indication	139
10.	LCD Controller	141
10.1	General information	142
10.2	Display	142
	10.2.1 Main view	142
	10.2.2 Dual view	143
	10.2.3 Menu display	143
10.3	New features	144
	10.3.1 Live view	144
	10.3.2 Operational data list	145
	10.3.3 Lock controller	
	10.3.4 Communication status menu	
	10.3.5 Serial number	
	10.3.6 Alarm description	
	10.3.7 Alarm history	
	10.3.8 Pump down procedure	
	10.3.9 DHW tank position	
	10.3.10 Water pump operation	
	10.3.11 Electrical Heater limitation	
	10.3.12 Energy consumption data	
	10.3.13 Wizard start up	
	10.3.14 Fan coils control	
	10.3.15 Wizard to timer set	
	10.3.17 Override function	
	10.3.18 Display theme	
11.	Optional functions	153
11.1	Indoor unit	
	11.1.1 Optional functions by DSW setting	
	11.1.2 Optional functions by DSW setting	
	11.1.2.1 Optional functions for Space Heating or Space Cooling	
	11.1.2.2 Optional functions for DHW	
	11.1.2.3 Optional functions for Heat pump	
	11.1.2.4 Optional functions for Unit controller (PC-ARFH2E)	
	11.1.3 Optional external input/output configuration signals	
11.2	Additional functions by accessory sensor	
11.3	Change of defrost condition	
11.4	Output/input signals for outdoor units	
11.4	Output input signals for outdoor utilits	103
12.	Complementary system CASCADE CONTROLLER	165
12.1	Main features	166
	12.1.1 Multi configurations	166

	12.1.2 Installation benefits	167
	12.1.3 Maintenance benefits	169
	12.1.4 Control features	169
	12.1.5 CASCADE control	171
	12.1.6 Rotary token control	172
	12.1.7 Synchronized defrost	173
12.2	General data	173
12.3	Electrical data	173
12.4	Name of parts	174
12.5	Service space	175
12.6	Electrical wiring	176
12.7	Transmission wiring	177
	12.7.3 Summary of the terminal board connections for YUTAKI CASCADE CONTROLLER	179
	12.7.4 Location of DIP switches and rotary switches	180
	12.7.4.1 Function of DIP switches and rotary switches	181
	12.7.4.2 LED indication	184
12.8	Optional functions	185
	12.8.1 Optional functions by DSW setting	185
	12.8.2 Optional functions by Unit controller (PC-ARFH2E)	
	12.8.2.1 Optional functions for Space Heating or Space Cooling	186
	12.8.2.2 Optional functions for DHW	186
	12.8.2.3 Optional functions for Heat pump	187
	12.8.2.4 Optional functions for Unit controller (PC-ARFH2E)	
	12.8.3 Optional external input/output configuration signals	188
12 9	Additional functions by accessory sensor	190

## General information

#### Index

1.1	General information	2
	1.1.1 General notes	2
	1.1.2 Introduction	2
	1.1.2.1 Overview of YUTAKI system	2
	1.1.2.2 Summary of operations	3
1.2	Applied symbols	4
1.3	Norms and Regulations	4
1.4	Product guide	5
	1.4.1 Classification of the units	5
	1.4.1.1 Split system - Outdoor unit	5
	1.4.1.2 Split system - Indoor unit	5
	1.4.2 Product guide	6
	1.4.2.1 Split system - Outdoor unit	
	1.4.2.2 Split system - Indoor unit	
	1.4.3 Accessory code list	9
	1.4.4 Outdoor unit accessories code list	12

#### 1.1 General information

#### 1.1.1 General notes

© Copyright 2021 Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. – All rights reserved.

No part of this publication may be reproduced, copied, filed or transmitted in any shape or form without the permission of Johnson Controls-Hitachi Air Conditioning Spain, S.A.U.

Within the policy of continuous improvement of its products, Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. reserves the right to make changes at any time without prior notification and without being compelled to introducing them into previously sold products. This document may therefore have been subject to amendments during the life of the product.

Hitachi makes every effort to offer correct, up-to-date documentation. Despite this, printing errors cannot be controlled by Hitachi and are not its responsibility.

As a result, some of the images or data used to illustrate this document may not refer to specific models. No claims will be accepted based on the data, illustrations and descriptions included in this manual.

No type of modification must be made to the equipment without prior, written authorization from the manufacturer.



This air conditioner has been designed for standard air conditioning for human beings. For use in other applications, please contact your Hitachi dealer or service contractor.

#### 1.1.2 Introduction

Hitachi proudly announces the newest air-to-water heat pumps in its award-winning YUTAKI range.

YUTAKI units produce heating and domestic hot water like any oil or gas boiler, but transforming renewable energy from the outside air into heat. Air to water heat pumps extract the free energy present in the air, which is enough to heat a home up to a comfortable temperature, even on the coldest winter day. Every kW of electricity used to power the heat pump can yield up to more than 5 kW of energy for heating; this provides savings of up to 80% on heating expenses compared to a traditional fossil fuel boiler.

The new YUTAKI series, based on state-of-the-art technology, does not only achieve an outstanding performance in space heating but also provides domestic hot water with high efficiency. Additionally, cooling operation for summer can also be provided installing the dedicated "Cooling kit" accessory of Hitachi.

The system is simple to control; its new user controller (PC-ARFH2E) improves the acclaimed and successful design used with the existing LCD controller and provides a great deal of new functions like: live view, energy consumption data, fan coils control, weekly timer, wizard to set timer, override function, etc.

#### 1.1.2.1 Overview of YUTAKI system

#### ◆ Split system - YUTAKI S, YUTAKI S COMBI

It consists of one outdoor unit and one indoor unit. The outdoor unit extracts the heat present in the air, increases its refrigerant temperature and transmits it to the water circuit using the plate heat exchanger of the indoor unit, where the heat is taken to radiators (fan-coils), underfloor heating components or both (2nd temperature area).

Two types of indoor unit can be used in heating split systems:

#### **YUTAKI S**

The indoor unit of YUTAKI S is designed for space heating, in wall-mounted installation. It is convenient for new installations with low capacity requirements (Well insulated installations, high efficiency radiators...).

#### YUTAKI S COMBI

The indoor unit of YUTAKI S COMBI is conceived as a floor standing unit. It is prepared for heating operation as well as for domestic hot water production. For this purpose, it has a built-in domestic hot water 220 L tank. In line with YUTAKI S units, it meets the needs of installations with low capacity requirements.

Furthermore, new YUTAKI S COMBI models have been designed for the UK market that meet the UK requirements referred in the UK Building Regulations.

#### 1.1.2.2 Summary of operations

#### **Space heating**

YUTAKI units are factory-supplied ready for space heating operation. Different heating installation configurations can be selected, providing a comfortable atmosphere all year long, even in the coldest climates:

#### Mono-valent system

The air to water heat pump is sized to provide 100% of the heating requirements on the coldest day the year.

#### Mono-energy system

This is the most popular configuration. The air to water heat pump is sized to provide 80% of the heating requirements on the coldest days of the year. An auxiliary electric heater is used to provide the additional heating required on cold days. This option usually results in an ideal balance between installation costs and future energy consumption, as proven by its popularity in colder climates than ours, such as Sweden and Norway.

#### Alternating Bi-valent system

For installations with an existing heating system by boiler and when is needed to heat the supplied water temperature to the circuit up to high temperatures (80°C), the boiler can be configured to alternate with the air to water heat pump.

Selecting the different configuration types it is possible to adapt the system to all customer requirements, providing a wide application range from the simplest configuration to complete configuration: Radiator, heating floor or both (2nd temperature area).

#### **Domestic hot water production**

For YUTAKI S, the Hitachi accessory "DHWT-(200/300)S-3.0H2E" can be used for the production of DHW.

In case of YUTAKI S COMBI, the domestic hot water tank is built in the indoor unit.

An electric heater is incorporated inside both remote and integrated tanks in order to allow an immediate heating of the domestic hot water in accordance with the user's needs.

#### **Space cooling**

YUTAKI units can also be operated in cooling operation. The dedicated "Cooling kit" accessory has been designed for this purpose. Combining the heating only models with these cooling kits, the reversible models become available. In this case, combination with fan-coils, refreshing floor or both (2nd temperature area) can be applied.

#### **Combination with solar panels**

YUTAKI system can be combined with solar panel. The solar combination enables to heat up the DHW by means of the sun. The solar combination is designed to transfer the heat from the solar panels (sun radiation) to the heat exchanger of DHW tank.

#### Swimming pool water heating operation

For summer session period, YUTAKI system can be used to heat up the water temperature of swimming pools up to a value between 24 and 33°C.

#### 1.2 Applied symbols

During normal air conditioning system design work or unit installation, greater attention must be paid in certain situations requiring particular care in order to avoid damage to the unit, the installation or the building or property.

Situations that pose a risk to the safety of those in the surrounding area or to the unit itself are clearly indicated in this manual.

A series of special symbols are used to clearly identify these situations.

Pay close attention to these symbols and to the messages following them, as your safety and that of others depends on it.



#### DANGER

- The text following this symbol contains information and instructions relating directly to your safety.
- Not taking these instructions into account could lead to serious, very serious or even fatal injuries to you and others.

In the texts following the danger symbol you can also find information on safety procedures during unit installation.



#### ∠!\ CAUTION

- The text following this symbol contains information and instructions relating directly to your safety.
- Not taking these instructions into account could lead to minor injuries to you and others.
- Not taking these instructions into account could lead to unit damage.

In the texts following the caution symbol you can also find information on safety procedures during unit installation.



- The text following this symbol contains information or instructions that may be of use or that require a more thorough explanation.
- Instructions regarding inspections to be made on unit parts or systems may also be included.

#### 1.3 Norms and Regulations

Following Regulation EU No. 517/2014 on Certain Fluorinated Greenhouse gases, it is mandatory to fill in the label attached to the unit with the total amount of refrigerant charged on the installation.

Do not vent R32 / R410A into the atmosphere: R32 / R410A are fluorinated greenhouse gases covered by the Kyoto protocol global warming potential (GWP) R32 = 675 / R410A = 2088.

Tn of CO<sub>2</sub> equivalent of fluorinated greenhouse gases contained is calculated by indicated GWP \* Total Charge (in kg indicated in the product label and divided by 1000.

#### Appropriate refrigerant

The refrigerant used in each unit is identified on the specification label and manuals of the unit. Hitachi shall not be held liable for any failure, trouble, malfunction or accident caused by units illegally charged with refrigerants other than the specified one.

#### Consequences of charging non-specified refrigerant

It may cause mechanical failure, malfunction and other accidents. It may cause operational failure of protection and safety devices of air conditioners. It may also cause lubrication failure of the sliding part of the compressor due to deterioration of refrigerant oil.

In particular, hydrocarbon refrigerants (such as propane, R441A, R443A, GF-08, etc.) are not allowed, since these are combustible and may cause major accidents such as fire and explosion in case of improper handling.

Once a non-specified refrigerant has been charged, no further servicing (including draining of refrigerant) shall be performed, even in case of malfunction. Improper handling of refrigerant may be a cause of fire and explosion, and servicing in such cases may be considered an illegal act.

End clients and costumers shall be informed that servicing is not approved, and the installer who charged the nonspecified refrigerant shall be asked to fix the unit.


Hitachi will accept no responsibility for units that have been charged with non-specified refrigerant once.

market

#### 1.4 Product guide

#### 1.4.1 Classification of the units

#### 1.4.1.1 Split system - Outdoor unit

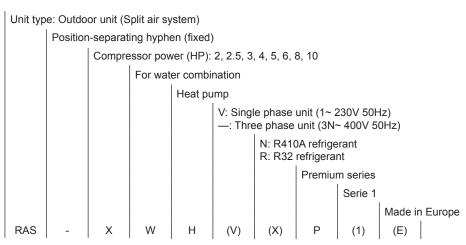

#### 1.4.1.2 Split system - Indoor unit

#### **♦ YUTAKI S**

Unit type: YUTAKI S (Split system - Single water module (Indoor unit) - Medium/Low temperature) Position-separating hyphen (fixed) Compressor power of the combined outdoor unit (HP): 2.0, 2.5, 3.0, 4.0, 5.0, 6.0, 8.0, 10.0 N: R410A refrigerant R: R32 refrigerant Serie 1 Made in Europe Ε **RWM** X.X

#### **YUTAKI S COMBI**

Unit type: YUTAKI S COMBI (Split system - Dual water module (Indoor unit + Domestic hot water tank) - Medium/Low temperature)

	Position	n-separat	ing hyph	en (fixed)	)						
		Compre	essor pov	ver of the	combine	ed outdoo	or unit (H	P): 2.0, 2	.5, 3.0, 4	.0, 5.0, 6	.0
			1	OA refrige refrigera							
				Water-to	o-water [	DHW hea	t exchan	ger			
					Serie 1						
						Made in	Europe				
							Position	n-separat	ing hyph	en (fixed)	
								Tank m	odel: 220	L	
									Tank m	aterial: St	tainless steel
										-K: Mod	el for UK marl
RWD	-	X.X	(X)	W	1	E	-	220	S	(-K)	

#### 1.4.2 Product guide

#### 1.4.2.1 Split system - Outdoor unit

1~ 230V 50Hz								
Unit	Code	Unit	Code					
RAS-2WHVRP1	60289258	RAS-4WHVNPE	7E350007					
RAS-2.5WHVRP1	60289259	RAS-5WHVNPE	7E350008					
RAS-3WHVRP1	60289260	RAS-6WHVNPE	7E350009					
	DECENTAGE OF THE PARTY OF THE P							


3N~ 400V	50Hz	
Unit	Code	
RAS-4WHNPE	7E350107	
RAS-5WHNPE	7E350108	
RAS-6WHNPE	7E350109	
RAS-8WHNPE	7E350110	
RAS-10WHNPE	7E350111	

#### 1.4.2.2 Split system - Indoor unit

#### **♦ YUTAKI S**



Icons between brackets mean possible extra operations to the factory-supplied operations. For cooling operation, refer to the Cooling kit accessory for YUTAKI S units.

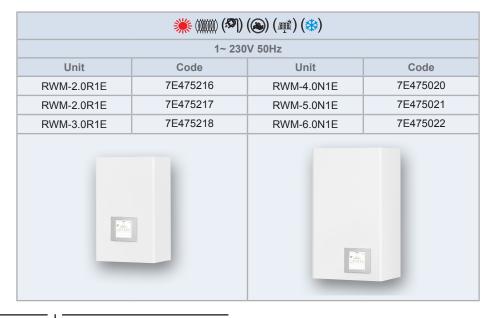

#### **♦ YUTAKI S COMBI**



Icons between brackets mean possible extra operations to the factory-supplied operations. For cooling operation, refer to the Cooling kit accessory for YUTAKI S COMBI units.

#### Standard model



#### Model for UK market



Model	Ref.
For YUTAKI S units (RWM-(2.0-10.0)(N/R)1E)	S
For YUTAKI S COMBI units (RWD-(2.0-6.0)(N/R)W1E-220S(-K))	SC

#### ♦ Cooling kit accessories

Accessory	Ref.	Name	Code	Figure
ATW-CKS-01	S	Cooling operation kit for YUTAKI S (For 2.0-3.0HP)	7E549927	
ATW-CKS-02	S	Cooling operation kit for YUTAKI S (For 4.0-6.0HP)	7E549928	
ATW-CKS-03	S	Cooling operation kit for YUTAKI S (For 8.0-10.0HP)	7E549929	
NEW ATW-CKSC-02	SC	Cooling operation kit for YUTAKI S COMBI - Insulations + Jumper	7E549959	
NEW ATW-CKSC-03	SC	Cooling operation kit for YUTAKI S COMBI - Insulations + Jumper + Drain Pump	7E549960	

#### **♦** Control accessories

Accessory	Ref.	Name	Code	Figure
NEW PC-ARFH2E	S SC	Unit controller Wired room thermostat	7E543016	
ATW-RTU-04	s sc	Wireless ON/OFF thermostat (Receiver + Room thermostat)	7E543003	
ATW-RTU-06	S SC	Wireless Intelligent thermostat for 2nd circuit (Only Room thermostat. For Intelligent thermostat application)	7E543005	2 %
ATW-RTU-07	S SC	Wireless Intelligent thermostat (Receiver + Room thermostat)	7E543015	* 2 10

Accessory	Ref.	Name	Code	Figure
AHP-SMB-01	S SC	SmartBox (Hi-Box)	70549919	WACH
ATW-KNX-02	S SC	KNX interface for YUTAKI units	7E549925	Interest of the second of the
ATW-TAG-02	S SC	Home automation gateway for YUTAKI units	70549926	
ATW-AOS-02	s sc	Auxiliary output signal box (Relay board for additional output signals)	7E549935	
HC-A16MB	S SC	MODBUS gateway for multi YUTAKI systems (up to 8 YUTAKI units max., with or without CASCADE CONTROLLER)	7E513210	
ATW-MBS-02	S SC	MODBUS gateway for single YUTAKI system	7E549924	ATYMASO? HITACHI
NEW ATW-YCC-03	s sc	YUTAKI CASCADE CONTROLLER (New controller generation (26 languages))	7E549963	

#### **♦** Temperature sensor accessories

Accessory	Ref.	Name	Code	Figure
ATW-2OS-02	S SC	2nd outdoor temperature sensor	9E500017	
ATW-ITS-01	S SC	Indoor wired room temperature sensor	7E549932	Ô.
ATW-WTS-02Y	S SC	Universal water temperature sensor	9E500004	

Accessory	Ref.	Name	Code	Figure
ATW-HSK-01	S SC	Hydraulic separator	7E549905	
NEW ATW-CP-05	SC	Active Anode (Impressed current)	7E549954	
ATW-2TK-07	S SC	2nd temperature kit (Wall mounted model)	7E549952	
NEW ATW-2TK-08	SC	2nd temperature kit (Integrable in YUTAKI S COMBI 220 L model)	7E549965	
DHWT-200S-3.0H2E		Domestic hot water tank (200 L)	70544002	• •
DHWT-300S-3.0H2E	S	Domestic hot water tank (300 L)	70544003	
ATW-AQT-01	S SC	Aquastat security	7E549907	
ATW-3WV-01	S SC	3-way valve (Internal thread and spring return)	7E549906	
ATW-WCV-01	S SC	Water check valve	9E500014	
ATW-DPOV-01	S SC	Differential pressure overflow valve	7E549916	

#### 1.4.4 Outdoor unit accessories code list

Model	Ref.
RAS-(2.0-3.0)WHVRP1	Α
RAS-(4.0-10.0)WH(V)NPE	В

Accessory	OU reference	Description	Code	Figure
DH-SP63A	А	Drain heater	60292335	-
DBS-12L	А	Drain discharge connection	60291491	
DBS-26	В		60299192	
AG-264	А		60209100	
AG-335A	В	Air flow guide	60291432	
WSP-264	А		60291831	
WSP-160A	В	Wind guard	60291753	

	1
	ı
	ı
	н

		Snow protection hood		
Accessory	OU reference	Description	Code	Figure
	ZINC P	LATE		
ASG-SP10FTB (Half)	A		60292336	
ASG-SP11FTB (Full)		Air outlet	60292339	
ASG-NP335F1 (Half)	В		60291771	
ASG-SP11FC (Full)			60291783	
ASG-SP10BTB	А		60292337	
ASG-NP160B (Half)	В	Air inlet of rear side	60291777	
ASG-SP11BA (Full)			60291785	
ASG-SP10LTB	A	60292338		
ASG-NP160L (Half)	_	Air inlet of side face	60291779	
ASG-SP11LA (Full)	В		60291787	
	STAINLES	S PLATE		
ASG-SP10FTBS (Half)	Α		60292352	
ASG-SP11FTBS (Full)		Air outlet	60292355	
ASG-NP335FS4 (Half)	В	All oddet	60291940	
ASG-SP11FCS2 (Full)			60291948	
ASG-SP10BTBS (Half)	А		60292353	
ASG-NP280BS4 (Half)	В	Air inlet of rear side	60291945	
ASG-SP11BAS2 (Full)	В		60291949	
ASG-SP10LTBS (Half)	А		60292354	
ASG-NP280LS4 (Half)	В	Air inlet of side face	60291946	
ASG-SP11LAS2 (Full)			60291950	

# 2. General data

## Index

2.1	Capacity tables	16
2.2	ERP performance data (Preliminary data)	19
	2.2.2.2 ERP data - YUTAKI S COMBI	25
	2.2.2.3 ERP additional data - YUTAKI S	30
	2.2.2.4 ERP additional data - YUTAKI S COMBI	31
	2.2.3 General ERP data for combi heaters	32
	2.2.3.1 YUTAKI S COMBI	32
	2.2.3.2 General ERP data for hot water storage tanks (YUTAKI S)	33
2.3	Cooling mode application (EN 14825) (Models with cooling kit accessory) (Preliminary data)	34
	2.3.1 Cooling data (EN 14825) - YUTAKI S	34
	2.3.2 Cooling data (EN 14825) - YUTAKI S COMBI	38
	2.3.3 Additional Cooling data (EN 14825) - YUTAKI S	40
	2.3.4 Additional Cooling data (EN 14825) - YUTAKI S COMBI	42
2.4	General specifications	43
	2.4.2 Split system - Outdoor unit (Preliminary data)	43
	2.4.4 Domestic Hot Water Tank	50
2.5	Component data (Preliminary data)	51
	2.5.1 Split system - Outdoor unit	51
	2.5.2 Split system - Indoor unit	53
	2.5.2.1 YUTAKI S	53
	2.5.2.2 YUTAKI S COMBI	54
2.6	Electrical data	56
	2.6.2 Split system - Outdoor unit	56
	2.6.3 Split system - Indoor unit	57
	2.6.3.1 YUTAKI S	57
	2.6.3.2 YUTAKI S COMBI	58

#### 2.1 Capacity tables

#### 2.1.1 Nominal capacity-performance tables (Preliminary data)

#### 2.1.1.1 Considerations

- The heating capacity tables show the capacity and performance data in integrated values (with defrost correction factor included).
- The nominal heating and cooling capacities are based on the EN 14511 standard: Piping length: 7.5 meters; Piping lift: 0 meters.

#### Keywords:

- · CAP: Nominal capacity (kW)
- · COP: Coefficient of performance
- · EER: Energy efficiency ratio
- DB: Dry bulb; WB: Wet bulb (°C)
- OAT: Outdoor ambient temperature (°C)
- WIT: Water inlet temperature (°C)
- WOT: Water outlet temperature (°C)

#### 2.1.1.2 Capacity-performance data

Preliminary Performance Subject to Change

#### **♦ YUTAKI S**

		HP		2.0 HP	2.5 HP	3.0 HP				
	Outdoo	r unit model		RAS-2WHVRP1 RAS-2.5WHVRP1 RAS-3WHV						
Indoor unit model				RWM-2.0R1E RWM-2.5R1E RWM-3.0R1E						
OAT (DB/WB)	WIT / - Unit				Heating operation					
	30 / 35 °C	CAP 30 / 35 °C (Min./Nom./Max.)		1.85 / 4.30 / 6.50	1.8 / 6.00 / 8.0	2.1 /8.00 / 11.0				
7 / 6 °C		COP (Nom.)	-	5.25	4.80	4.60				
	4= / == 00	CAP (Nom./Max.)	kW	4.30 / 6.00	6.00 / 7.50	8.00 / 9.50				
	47 / 55 °C	COP (Nom.)	-	3.00	2.85	2.80				
	30 / 35 °C	CAP (Nom./Max.)	kW	4.50 / 5.30	5.30 / 6.20	5.80 / 7.50				
7 / 0 00	30 / 35 %	COP (Nom.)	-	2.8	2.70	2.70				
-7 / -8 °C	4= / == 00	CAP (Nom./Max.)	kW	4.00 / 4.20	4.7 / 5.00	5.00 / 5.50				
	47 / 55 °C	COP (Nom.)	-	2.00	1.80	1.75				

OAT (DB/WB)	WIT / WOT	-	Unit	Cooling operation (Using cooling kit accessory)			
	40 / 7 00	CAP (Nom./Max.)	kW	4.00 / 5.00	5.30 / 6.00	6.50 / 7.00	
35 / °C	12 / 7 °C	EER (Nom.)	-	4.00	3.60	3.35	
337 0	23 / 18 °C	CAP (Nom./Max.)	kW	5.50 / 6.40	6.30 / 7.70	7.00 / 9.00	
		EER (Nom.)	-	5.40	5.30	5.00	

		HP		4.0 HP	5.0 HP	6.0 HP	8.0 HP	10.0 HP		
	Outdoo	r unit model		RAS-4WH(V)	RAS-5WH(V)	RAS-6WH(V)	RAS- 8WHNPE	RAS- 10WHNPE		
	Indoor	unit model		RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E	RWM-8.0N1E	RWM-10.0N1E		
OAT (DB/WB)	- Unit				Heating operation					
	30 / 35 °C	CAP (Min./Nom./Max.)	kW	4.3 / 11.0 / 15.2	4.8 / 14.0 / 16.7	5.5 / 16.0 / 17.8	9.0 / 20.0 / 25.5	10.0 / 24.0 / 32.0		
7 / 6 °C		COP (Nom.)	-	5.00	4.71	4.57	4.30	4.29		
	47 / 55 00	CAP (Nom./Max.)	kW	11.0 / 13.5	14.0 / 15.2	16.0 / 17.0	20.0 / 24.0	24.0 / 32.0		
	47 / 55 °C	COP (Nom.)	-	3.00	2.80	2.50	2.72	2.65		
	30 / 35 °C	CAP (Nom./Max.)	kW	9.7 / 10.6	11.5 / 12.0	12.0 / 13.0	14.2 / 17.9	16.5 / 21.0		
7 / 0 00	30 / 35 °C	COP (Nom.)	-	2.74	2.65	2.57	2.57	2.46		
-7 / -8 °C	47 / FE 9C	CAP (Nom./Max.)	kW	8.7 / 9.7	9.7 / 11.2	10.5 / 12.0	12.5 / 14.5	15.5 / 17.3		
	47 / 55 °C	COP (Nom.)	-	1.78	1.85	1.75	1.70	1.50		

OAT (DB/WB)	WIT / WOT	-	Unit		Cooling operation (Using cooling kit accessory)			
	12 / 7 °C	CAP (Nom./Max.)	kW	7.2 / 11.8	9.5 / 12.6	10.5 / 13.7	14.0 / 16.4	17.5 / 20.6
25 / 90	12//30	EER (Nom.)	-	3.54	3.54	3.31	3.12	2.81
35 / °C	23 / 18 °C	CAP (Nom./Max.)	kW	10.4 / 15.0	12.9 / 16.0	13.5 / 17.5	17.0 / 23.5	20.0 / 27.0
		EER (Nom.)	-	4.50	4.02	3.81	3.81	3.61

#### **♦ YUTAKI S COMBI**

		НР		2.0 HP	2.5 HP	3.0 HP	
	Outdoo	r unit model		RAS-2WHVRP1	RAS-2WHVRP1 RAS-2.5WHVRP1		
	Indoor	unit model		RWD-2.0RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)		
OAT (DB/WB)	WIT / WOT	-	Unit Heating operation				
	30 / 35 °C (Min./Nom./Max.) COP (Nom.)	kW	1.85 / 4.30 / 6.50	1.8 / 6.00 / 8.60	2.1 /8.00 / 11.0		
7/6°C		COP (Nom.)	-	5.25	4.80	4.60	
	47 / 55 00	CAP (Nom./Max.)	kW	4.30 / 6.00	6.00 / 7.50	8.00 / 9.50	
	47 / 55 °C	COP (Nom.)	-	3.00	2.85	2.80	
	00 / 05 00	CAP (Nom./Max.)	kW	4.50 / 5.30	5.30 / 6.20	5.80 / 7.50	
-7 / -8 °C	30 / 35 °C	COP (Nom.)	-	2.8	2.70	2.70	
-11-00	47 / 55 00	CAP (Nom./Max.)	kW	4.00 / 4.20	4.7 / 5.00	5.00 / 5.50	
	47 / 55 °C	COP (Nom.)	-	2.00	1.80	1.75	

OAT (DB/WB)	WIT / WOT	-	Unit	Cooling operation (Using cooling kit accessory)				
	12 / 7 °C	CAP (Nom./Max.)		4.00 / 5.00	5.30 / 6.00	7.2 / 11.8		
35 / °C		EER (Nom.)	-	4.00	3.60	3.54		
35 / °C	23 / 18 °C	CAP (Nom./Max.)	kW	5.50 / 6.40	6.30 / 7.70	10.4 / 15.0		
	23 / 10 °C	EER (Nom.)	-	5.40	5.30	4.50		

		НР		4.0 HP	5.0 HP	6.0 HP		
	Outdoo	r unit model		RAS-4WH(V)NPE	RAS-4WH(V)NPE RAS-5WH(V)NPE RAS-6WH(V)			
	Indoor	unit model		RWD-4.0NW1E- RWD-5.0NW1E- RWD-6.0NW1E- 220S(-K) 220S(-K)				
OAT (DB/WB)	WIT / WOT	-	Unit	nit Heating operation				
	30 / 35 °C	CAP (Min./Nom./Max.)	kW	4.3 / 11.0 / 15.2	4.8 / 14.0 / 16.7	5.5 / 16.0 / 17.8		
7/6°C		COP (Nom.)	-	5.00	4.71	4.57		
.,,,,	47 / 55 00	CAP (Nom./Max.)	kW	11.0 / 13.5	14.0 / 15.2	16.0 / 17.0		
	47 / 55 °C	COP (Nom.)	-	3.00	2.80	2.50		
	20 / 25 00	CAP (Nom./Max.)	kW	9.7 / 10.6	11.5 / 12.0	12.0 / 13.0		
-7 / -8 °C	30 / 35 °C	COP (Nom.)	-	2.74	2.65	2.57		
-11-0	47 / 55 °C	CAP (Nom./Max.)	kW	8.7 / 9.7	9.7 / 11.2	10.5 / 12.0		
	47 / 55 °C	COP (Nom.)	-	1.78	1.85	1.75		

OAT (DB/WB)	WIT / WOT	-	Unit	Cooling operation (Using cooling kit accessory)				
	12 / 7 °C	CAP (Nom./Max.)	kW	9.5 / 12.6	10.5 / 13.7	7.2 / 11.8		
35 / °C		EER (Nom.)	-	3.54	3.31	3.54		
35 / "C	23 / 18 °C	CAP (Nom./Max.)	kW	12.9 / 16.0	13.5 / 17.5	10.4 / 15.0		
		EER (Nom.)	-	4.02	3.81	4.50		

#### ♦ YUTAKI S COMBI Domestic Hot Water tank performance

	НР			(2.0-3.0) HP	(4.0-6.0) HP
Tank	Outdoor unit mo	del		RAS-(2-3)WHVRP1	RAS-(4-6)WH(V)NPE
Idlik	Indoor unit mod	lel		RWD-(2.0-3.0)RW1E-220S(-K)	RWD-(4.0-6.0)NW1E-220S(-K)
	Load profile	-	-	L	L
	COP <sub>dhw</sub>	-	-	3.2	3.1
	Heating up time t <sub>h</sub> h:			1:55	1:05
220 L	Standby power input	Pes	W	30	34
	Mixed water at 40 °C	Vmax	L	288	288
	Ref hot water temperature	θ'wh	°C	52.85	52.85
	Efficiency	ηwh	%	130	127
	Energy class	-	-	A+	A+

### 2.2 ERP performance data (Preliminary data)

#### 2.2.1 General considerations

- This appliance must be installed, maintained and dismantled by professionals. Do not pour contained refrigerant into the atmosphere since this refrigerant fluid is a fluorinated greenhouse gas regulated under European Regulation (EU) No 517/2014.
- Data between brackets corresponds only to heating and cooling models ("Cooling kit" accessory needed).
- Data with the mark (\*) corresponds to the "Energy efficiency contribution  $(\eta_s)$ " due to the use of temperature control.

		Wired room thermostat (PC-ARFH2E)	7E543016
OTC control (Factory-supplied)		Wireless room thermostat (ATW-RTU-04)	7E543003
		Wired room sensor (ATW-ITS-01)	7E549932
Temperature control class II		Temperature control class	VI
Energy efficiency contribution +2%		Contribution to the nominal energy efficiency	+4%

#### 2.2.2 General ERP data for space heaters

#### 2.2.2.1 ERP data - YUTAKI S

#### **◆ AVERAGE climate**

#### RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

		HP		2.0	HP	2.5	HP	3.0	HP
	Model	Outdoor	unit	nit RAS-2WHVRP1		RAS-2.5\	NHVRP1	RAS-3V	VHVRP1
		Indoor u	unit	RWM-2.0R1E		RWM-2.5R1E		RWM-3.0R1E	
	Water outlet temperat	ure		35°C	55°C	35°C	55°C	35°C	55°C
Air to water heat pump			-			Y	es		
Product	Heat pump combination heater					1	٧o		
description	Low temperature heat pump					1	10		
İ	Complementary heater		-			Y	es		
Design capacity (P <sub>DESIGN</sub> )				4.0	4.0	6.0	5.0	7.0	6.0
Nominal energy e	DEGIGIT		%	181 (186)	130 (132)	177 (180)	127 (128)	177 (179)	125 (126
Nominal energy c	lass		-	A+++	A++	A+++	A++	A+++	A++
Data for Package	d Fiche:								
Energy efficience	cy with OTC control (η <sub>S</sub> )	(*)	%	183 (188)	135 (138)	179 (182)	129 (130)	179 (181)	127 (129
Energy class w	ith OTC control		-	A+++	A++	A+++	A++	A+++	A++
Energy efficiency with thermostats/sensors (η <sub>s</sub> ) (*)				185 (190)	137 (140)	181 (184)	131 (132)	181 (183)	129 (13
Energy class w	ith thermostats		-	A+++	A++	A+++	A++	A+++	A++
Supplementary capacity (P <sub>SUP</sub> )			kW	0.0	0.9	0.25	1.1	0.6	1.5
Type of energy used			-			Elec	tricity		
Declared capacity	(Pdh) and coefficient of	performance (C	COP <sub>d</sub> ) at	partial load	under the	following ou	tdoor temp	eratures:	
Outdoor tompo	rature (Tj) = -7°C	Pdh	kW	3.54	3.50	5.10	4.42	5.90	5.10
Outdoor terripe	rature (1j) = -7 C	COP <sub>d</sub>	-	3.20	2.00	2.70	1.85	2.65	1.84
Outdoor tompo	rature (Tj) = +2°C	Pdh	kW	2.35	2.10	3.10	2.69	3.59	3.10
Outdoor terripe	rature (1j) = +2 C	COPd	-	4.80	3.25	4.60	3.30	4.30	3.10
Outdoor tempe	rature (Tj) = +7°C	Pdh	kW	3.00	2.43	3.00	2.43	3.20	2.00
Outdoor terripe		COPd	-	6.20	5.20	6.20	4.60	7.00	4.65
Outdoor tempe	rature (Tj) = +12°C	Pdh	kW	3.05	2.80	3.05	2.80	3.50	2.20
Outdoor terripe		COPd	-	8.30	6.90	8.35	6.35	9.70	6.55
	rature (Tj) = Bivalent	Pdh	kW	3.54	3.50	5.10	4.42	5.90	5.10
temperature (T	<sub>biv</sub> )	COP	-	3.20	2.00	2.70	1.85	2.65	1.84
	rature (Tj) = Limit	Pdh	kW	4.00	3.10	5.30	3.90	5.60	5.00
operation temperature (TOL) COP <sub>d</sub>			-	2.75	1.90	2.50	1.70	2.30	1.50
Bivalent temperat	DIV.		°C	-7	-7	-7	-7	-7	-7
Limit operation temperature (TOL)			°C	-10	-10	-10	-10	-10	-10
· · · · · ·	ion temperature (WTOL)		°C	55	55	55	55	55	55
Degradation coeff	icient (Can)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual energy co	nsumption $(Q_{HE})$		kW∙h	1798 (1754)	2463 (2420)	2652 (2608)	3186 (3143)	3068 (3024)	3723 (3680)

#### RAS-(4-6)WHVNPE + RWM-(4.0-6.0)N1E

		НР		4.0	LID	5.0	LID	0.0	LID	
	Madal									
	wodei	Indoor u					## A Principle   A Principle			
	Water outlet temperatur		11111	Yes						
	· · · · · · · · · · · · · · · · · · ·		_							
		eater	-							
Air to water heat pump Heat pump combination Low temperature heat proposition  Escription  Low temperature heat proposition  Complementary heater  Resign capacity ( $P_{DESIGN}$ )  Rominal energy efficiency ( $\eta_s$ )  Rominal energy class Rata for Packaged Fiche:  Energy efficiency with OTC control  Energy efficiency with OTC control  Energy efficiency with thermostats/sens  Energy class with thermostats  Upplementary capacity ( $P_{SUP}$ )  Repert of energy used  Reclared capacity (Pdh) and coefficient of  Outdoor temperature (Tj) = -7°C		_								
_		iP	_			RAS-5WHVNPE RAS  RWM-5.0N1E RW 35°C 55°C 35°C  Yes  No  No  Yes  14.0 12.0 16.0 6) 175 (176) 133 (133) 153 (15  A+++ A++ A++  1) 179 (180) 137 (138) 157 (15  A+++ A++ A++  1.9 2.6 1.9  Electricity  ne following outdoor temperatures  12.00 10.25 13.80  2.55 1.70 2.40  7.30 6.24 8.40  4.70 3.60 3.90  4.70 4.01 5.40  5.70 4.60 5.00  3.50 3.50 3.50  6.00 5.50 6.00  12.00 10.25 13.80  2.55 1.70 2.40  5.70 4.60 5.00  3.50 3.50 3.50  6.00 5.50 6.00  12.00 10.25 13.80  2.55 1.70 2.40  5.70 4.60 5.00  3.50 3.50 3.50  6.00 5.50 6.00  12.00 10.25 13.80  2.55 1.70 2.40  12.10 9.00 14.10  2.50 1.60 2.30  -7 -7 -7  -10 -10 -10 -10  55 55 55  0.9 0.9 0.9  6313 7066 8287				
			kW	11.0	10.0		1	16.0	14.0	
			%							
			70	` ′	` /	, ,	· ,	, ,	` `	
			-	A+++	A++	A+++	A++	A++	A++	
		`\	%	100 (101)	120 (120)	177 (170)	125 (126)	1EE (1EE)	107 (100	
Energy efficiency with OTC control (η <sub>s</sub> ) (*)			· ,	, ,	` ′	` ′	` ′	,		
- 0,		- (- ) (*)	- 0/							
	•	s (η <sub>s</sub> ) (")	%	` ′	` ′	, ,	, ,	` ,	<u> </u>	
			-							
			kW							
		orformanaa (C		nortial leas	Lundortho			oroturoo.		
Deciared capacity	(Pull) and coefficient of pe	1	kW							
Outdoor tempera	Outdoor temperature (Tj) = -7°C									
		<u> </u>	- Is\A/							
Outdoor tempera			kW							
		<u> </u>	-			-				
Outdoor tempera	por temperature (Tj) = +2°C		kW							
		-	-							
Outdoor tempera	ature (Tj) = +12°C		kW						3.60	
			-	6.40	5.80	6.00	5.50	6.00	5.50	
			kW	9.60	8.60	12.00	10.25	13.80	12.00	
temperature (I <sub>bi</sub>	<sub>v</sub> )	COP <sub>d</sub>	-	2.74	1.80	2.55	1.70	2.40	1.60	
	ature (Tj) = Limit	Pdh	kW	10.50	7.40	12.10	9.00	14.10	10.5	
operation tempe	erature (TOL)	COP <sub>d</sub>	-	2.65	1.70	2.50	1.60	2.30	1.40	
Bivalent temperatu	re (T <sub>biv</sub> )		°C	-7	-7	-7	-7	-7	-7	
Limit operation tem	. ,		°C							
· · · · · · · · · · · · · · · · · · ·	on temperature (WTOL)		°C							
Degradation coeffic	cient (Cdh)		-	0.9	0.9	0.9	0.9	0.9	0.9	
Annual energy con	sumption (Q <sub>HE</sub> )		kW∙h	4714 (4666)	5815 (5767)			8287 (8239)	8759 (8710)	

#### RAS-(4-6)WHNPE + RWM-(4.0-6.0)N1E

		НР		4.0	НР	5.0	HP	6.0 HP			
I	Model	Outdoor	unit	RAS-4	WHNPE	RAS-5V	VHNPE	RAS-6\	WHNPE		
		Indoor u	ınit	RWM-	4.0N1E	RWM-5.0N1E		RWM-6.0N1E			
	Water outlet temperatur	re		35°C	55°C	35°C	55°C	35°C	55°C		
A	Air to water heat pump		-	Yes							
Product I	Heat pump combination h	eater	-			N	О				
description L	ow temperature heat pur	np	-			N	0	E RAS-6V RWM-6 C 35°C  .0 16.0 133) 152 (153) -+ A++ 136) 154 (155) -+ A++ 138) 156 (157) -+ A++ 6 1.9  emperatures: 25 13.80 70 2.40 24 8.40 3.90 01 5.40 60 3.90 01 5.40 60 5.00 60 3.50 60 6.00 25 13.80 70 2.40 00 14.10 60 2.30 7 -7 0 -10 5 55 9 0.9 88 8309			
	Model       Outdoor         Water outlet temperature         Air to water heat pump       Heat pump combination heater         Low temperature heat pump       Complementary heater         acity (P <sub>DESIGN</sub> )       ergy efficiency (η <sub>S</sub> )         ergy efficiency (η <sub>S</sub> )       ergy class         ckaged Fiche:       fficiency with OTC control (η <sub>S</sub> ) (*)         lass with OTC control       fficiency with thermostats/sensors (η <sub>S</sub> ) (*)         lass with thermostats       tarry capacity (P <sub>SuP</sub> )         lass with thermostats       tarry capacity (Pdh) and coefficient of performance         temperature (Tj) = -7°C       Pdh         COP <sub>d</sub>		-			Υe	es				
Design capacity (P	Water outlet temperature         Water outlet temperature         Air to water heat pump         Heat pump combination heater         Low temperature heat pump         Complementary heater         Sign capacity ( $P_{DESIGN}$ )         Iminal energy efficiency ( $\eta_s$ )         Iminal energy class         Ita for Packaged Fiche:         Energy efficiency with OTC control ( $\eta_s$ ) (*)         Energy class with OTC control         Energy efficiency with thermostats/sensors ( $\eta_s$ ) (*)         Energy class with thermostats         Oplementary capacity ( $P_{SUP}$ )         Due of energy used         Clared capacity (Pdh) and coefficient of performance         CoP <sub>d</sub> CoP <sub>d</sub> CoP <sub>d</sub> CoV <sub>d</sub> CoP <sub>d</sub>		kW	11.0	10.0	14.0	12.0	16.0	14.0		
Nominal energy eff	ficiency (η <sub>s</sub> )		%	186 (189)	135 (136)	174 (176)	132 (133)	152 (153)	125 (126)		
Nominal energy cla	ass		-	A+++	A++	A++ (A+++)	A++	A++	A++		
Data for Packaged	Fiche:										
Energy efficienc	Energy efficiency with OTC control (η <sub>s</sub> ) (*) Energy class with OTC control Energy efficiency with thermostats/sensors (n ) (*)		%	188 (191)	137 (139)	176 (178)	135 (136)	154 (155)	127 (128)		
		-	A+++	A++	A+++	A++	A++	A++			
Energy efficiency with thermostats/sensors $(\eta_s)$ (*)		%	190 (193)	139 (141)	178 (180)	137 (138)	156 (157)	129 (130			
Energy class wit	th thermostats		-	A+++	A++	A+++	A++	A++	A++		
Supplementary cap	pacity (P <sub>SUP</sub> )		kW	0.5	2.3	1.9	2.6	1.9	3.1		
Type of energy use			-	Electricity							
Declared capacity	(Pdh) and coefficient of p	erformance (C	OP <sub>d</sub> ) at	partial load	under the f	ollowing out	door tempe	ratures:			
Outdoor tompor	oturo (Ti) = 70C	Pdh	kW	9.60	8.60	12.00	10.25	13.80	12.00		
Outdoor tempera	Outdoor temperature (Tj) = -7°C	COP <sub>d</sub>	-	2.74	1.80	2.55	1.70	2.40	1.60		
0.444	utdoor temperature (Ti) = +2°C		kW	5.84	5.23	7.30	6.24	8.40	7.30		
Outdoor tempera	ature (1)) = +2°C	COPd	-	5.20	3.60	4.70	3.60	3.90	3.35		
0 444	-t (T') +700	Pdh	kW	3.76	3.52	4.70	132 (133) 152 (153) A++ A++  135 (136) 154 (155) A++ A++  137 (138) 156 (157) A++ A++  2.6 1.9  tricity  door temperatures:  10.25 13.80 1.70 2.40 6.24 8.40 3.60 3.90 4.01 5.40 4.60 5.00 3.50 3.50 5.50 6.00 10.25 13.80 1.70 2.40 9.00 14.10 1.60 2.30 -7 -7 -10 -10 55 55 0.9 0.9 7088 8309	4.70			
Outdoor tempera	ature (1)) = +7°C	COP <sub>d</sub>	-	5.80	4.80	5.70	4.60	5.00	4.35		
0 444 44-	-t (T') +4000	Pdh	kW	3.70	3.60	3.50	3.50	3.50	3.60		
Outdoor tempera	ature (1j) = +12°C	COP	-	6.40	5.80	6.00	5.50	6.00	5.50		
Outdoor tempera	ature (Ti) = Bivalent	<u> </u>	kW	9.60	8.60	12.00	10.25	13.80	12.00		
		COP	-	2.74	1.80	2.55	1.70	16.0 152 (153) A++ 154 (155) A++ 156 (157) A++ 1.9 ratures: 13.80 2.40 8.40 3.90 5.40 5.00 3.50 6.00 13.80 2.40 14.10 2.30 -7 -10 55 0.9 8309	1.60		
Outdoor temper	ature (Ti) = Limit	1	kW	10.50	7.40	12.10			10.50		
			-	2.65	1.70	2.50		-	1.40		
Bivalent temperatu	re (T <sub>hin</sub> )	d	°C	-7	-7	-7			-7		
	. DIV.		°C	-10	-10	-10	-10	-10	-10		
Water limit operation	on temperature (WTOL)		°C	55	55	55	55	55	55		
Degradation coeffic	cient (Cdh)		-	0.9	0.9	0.9	0.9	0.9	0.9		
Annual energy con	sumption (Q <sub>HE</sub> )		kW∙h	4736 (4666)	5837 (5767)	6335 (6265)			8781 (8710)		

#### RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

		HP		8.0	HP	10 HP		
Mo	odel	Outdoor	unit	RAS-8\	WHNPE	RAS-10	WHNPE	
		Indoor ι	ınit	RWM-8.0N1E		RWM-10.0N1E		
Wa	ater outlet temperature			35°C	55°C	35°C	55°C	
Aiı	r to water heat pump		-		Ye	es		
Product He	eat pump combination he	eater	ater - No					
description	w temperature heat pur	ıp	-		N	0		
Co	omplementary heater		-		Ye	es		
Design capacity (P <sub>DESIG</sub>	<sub>GN</sub> )		kW	18.0	16.0	20.0	18.0	
Nominal energy efficie	ncy (η <sub>s</sub> )		%	150 (152)	120 (122)	141 (142)	116 (118)	
Nominal energy class			-	A++	A+	A+	A+	
Data for Packaged Fic	he:							
Energy efficiency	with OTC control ( $\eta_{\rm S}$ ) (*	)	%	152 (154)	122 (124)	143 (144)	118 (120)	
Energy class with	OTC control		-	A++	A+	A+	A+	
Energy efficiency	with thermostats/sensor	s (η <sub>s</sub> ) (*)	%	154 (156)	124 (126)	145 (146)	120 (122)	
Energy class with	thermostats		-	A++	A+ (A++)	A+	A+	
Supplementary capaci	ty (P <sub>SUP</sub> )		kW	1.6	3.5	1.7	3.6	
Type of energy used			-		Elect	ricity		
Declared capacity (Pdl	n) and coefficient of perfo	ormance (CO	P <sub>d</sub> ) at pa	rtial load under	the following o	utdoor temperat	tures:	
Outdoor tomporat	lared capacity (Pdh) and coefficient of pe  Outdoor temperature (Tj) = -7°C  Outdoor temperature (Tj) = +2°C	Pdh	kW	15.60	13.80	17.40	15.60	
Outdoor temperat		COP	-	2.50	1.65	2.30	1.65	
Outdoor tomporat	turo (Ti) = 120C	Pdh	kW	9.50	8.40	10.77	9.50	
Outdoor temperat	lure (1j) = +2°C	COPd	-	3.85	3.20	3.60	3.10	
0.444	(Ti) = 1700	Pdh	kW	6.10	6.00	8.70	8.30	
Outdoor temperat	ture (1)) = +7°C	COPd	-	5.40	4.60	5.10	4.35	
0. 44 4	(T') 14000	Pdh	kW	7.00	6.80	8.70	8.50	
Outdoor temperat	ture (1)) = +12°C	COP	-	4.65	4.50	4.90	4.60	
Outdoor temperat	ture (Tj) = Bivalent	Pdh	kW	15.60	13.80	17.40	15.60	
temperature (T <sub>biv</sub> )		COP	-	2.50	1.65	2.30	1.65	
Outdoor temperat	ture (Tj) = Limit	Pdh	kW	16.00	12.10	18.00	14.00	
operation tempera	` "	COP	-	2.40	1.50	2.10	1.45	
Bivalent temperature (	T <sub>biv</sub> )		°C	-7	-7	-7	-7	
imit operation temper	ature (TOL)		°C	-10	-10	-10	-10	
Nater limit operation to	emperature (WTOL)		°C	55	55	55	55	
Degradation coefficien	t (Cdh)		-	0.9	0.9	0.9	0.9	
Annual energy consum	nption (Q <sub>HE</sub> )		kW∙h	9514 (9382)	10452 (10320)	11324 (11192)	12210 (12078)	

#### **♦ WARMER climate**

#### RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

	НР		2.0 HP	2.5 HP	3.0 HP
Model	Model Outdoor unit		RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
	Indoor unit	or unit RWM-2.0R1E RWM-2.5F		RWM-2.5R1E	RWM-3.0R1E
Design capacity (P <sub>DESIGN</sub> ) kW		kW	4.0	5.0	6.0
$^{(1)}$ Nominal energy efficiency ( $\eta_{\rm S}$ )			185 (194)	182 (189)	170 (175)
Data for Packaged Fiche	:				
(2) Energy efficiency w	ith OTC control (η <sub>s</sub> ) (*)	%	187 (196)	184 (191)	172 (177)
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	189 (198)	186 (193)	174 (177)
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	1137 (1084)	1137 (1084) 1441 (1389)	

#### RAS-(4-6)WH(V)NPE + RWM-(4.0-6.0)N1E

	НР		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor unit		RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
	Indoor unit		RWM-4.0N1E         RWM-5.0N1E         RWM-6.0N           10         12         14           193         183         177		RWM-6.0N1E
Design capacity (P <sub>DESIGN</sub> )	Design capacity (P <sub>DESIGN</sub> ) kW		10	12	14
(1) Nominal energy efficien	(1) Nominal energy efficiency (n <sub>s</sub> )		193	183	177
Data for Packaged Fiche					
(2) Energy efficiency w	ith OTC control (η <sub>s</sub> ) (*)	%	195	185	179
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	197	187	181
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	2722	3455	4149

	HP		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor unit		RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
	Indoor unit		RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E
Design capacity (P <sub>DESIGN</sub> )	Design capacity (P <sub>DESIGN</sub> ) kW		10	12	14
(1) Nominal energy efficien	(1) Nominal energy efficiency (n <sub>s</sub> )		191	181	176
Data for Packaged Fiche	:				
(2) Energy efficiency w	$^{(2)}$ Energy efficiency with OTC control ( $\eta_s$ ) (*) %		193	183	178
(3) Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	195	185	180
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	2748	3481	4175

#### RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

	НР		8.0 HP	10.0 HP
Model	Outdoor unit		RAS-8WHNPE	RAS-10WHNPE
	Indoor unit		RWM-8.0N1E	RWM-10.0N1E
Design capacity (P <sub>DESIGN</sub> )	capacity (P <sub>DESIGN</sub> )		16	18
(1) Nominal energy efficie	ncy (η <sub>s</sub> )	%	178	173
Data for Packaged Fiche	:			
(2) Energy efficiency w	ith OTC control (η <sub>s</sub> ) (*)	%	181	178
(3) Energy efficiency w	ith thermostats $(\eta_s)$ (*)	%	183	180
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	4725	5466

#### **♦ COLDER climate**

#### RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

	НР		2.0 HP	2.5 HP	3.0 HP	
Model	Outdoor unit		RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1	
	Indoor unit		RWM-2.0R1E	RWM-2.5R1E	RWM-3.0R1E	
Design capacity (P <sub>DESIGN</sub> ) kW		kW	4.0	5.0	6.0	
(1) Nominal energy efficier	<sup>(1)</sup> Nominal energy efficiency $(\eta_s)$ %		123 (125)	122 (123)	118 (118)	
Data for Packaged Fiche:						
(2) Energy efficiency wi	ith OTC control (η <sub>s</sub> ) (*)	%	125 (127)	124 (125)	120 (120)	
(3) Energy efficiency wi	$^{(3)}$ Energy efficiency with thermostats ( $\eta_s$ ) (*)		127 (129)	126 (127)	122 (122)	
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	3058 (3031)	3058 (3031) 4048 (4022)		

#### RAS-(4-6)WH(V)NPE + RWM-(4.0-6.0)N1E

	НР		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor unit	Outdoor unit		RAS-5WHVNPE	RAS-6WHVNPE
	Indoor unit				RWM-6.0N1E
Design capacity (P <sub>DESIGN</sub> )		kW	11	12	14
(1) Nominal energy efficien	$^{(1)}$ Nominal energy efficiency ( $\eta_{\rm S}$ )   %		120	119	112
Data for Packaged Fiche					
(2) Energy efficiency w	ith OTC control (η <sub>s</sub> ) (*)	%	122	121	114
(3) Energy efficiency w	(3) Energy efficiency with thermostats (n <sub>s</sub> ) (*)		124	123	116
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	8641	9514	11620

HP		4.0 HP	5.0 HP	6.0 HP					
Outdoor unit		RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE					
Indoor unit		RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E					
Design capacity (P <sub>DESIGN</sub> ) kW		11	12	14					
<sup>(1)</sup> Nominal energy efficiency $(\eta_s)$		120	119	112					
•									
(2) Energy efficiency with OTC control (n <sub>s</sub> ) (*)		122	121	114					
(3) Energy efficiency with thermostats (n <sub>s</sub> ) (*)		124	123	116					
ion (Q <sub>HE</sub> )	kW∙h	8654	9528	11633					
	Outdoor unit Indoor unit  Incy $(\eta_s)$ th OTC control $(\eta_s)$ (*)  th thermostats $(\eta_s)$ (*)	$\begin{array}{c c} \textbf{Outdoor unit} \\ \hline \textbf{Indoor unit} \\ \hline & kW \\ \textbf{ncy} \ (\eta_s) & \% \\ \hline \\ \textbf{th OTC control} \ (\eta_s) \ (^*) & \% \\ \hline \\ \textbf{th thermostats} \ (\eta_s) \ (^*) & \% \\ \hline \end{array}$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$					

#### RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

	НР		8.0 HP	10.0 HP
Model	Outdoor unit		RAS-8WHNPE	RAS-10WHNPE
	Indoor unit		RWM-8.0N1E	RWM-10.0N1E
Design capacity (P <sub>DESIGN</sub> )		kW	16	18
(1) Nominal energy efficie	ncy (η <sub>s</sub> )	%	109	107
Data for Packaged Fiche	;			
(2) Energy efficiency w	ith OTC control (η <sub>s</sub> ) (*)	%	111	109
(3) Energy efficiency w	ith thermostats (η <sub>s</sub> ) (*)	%	113	111
Annual energy consumpt	ion (Q <sub>HE</sub> )	kW∙h	13987	15956

#### 2.2.2.2 ERP data - YUTAKI S COMBI

#### **♦ AVERAGE climate**

#### RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

		HP		2.0	HP	2.5	2.5 HP 3.0		HP		
ı	Model	Outdoo	r unit	RAS-2V	VHVRP1	RAS-2.5	WHVRP1	RAS-3W	AS-3WHVRP1		
		Indoor	unit	RWD-2.0RW1E- 220S(-K)		RWD-2.5RW1E- 220S(-K)		RWD-3.0RW1E- 220S(-K)			
1	Water outlet temperature			35°C	55°C	35°C	55°C	35°C	55°C		
	Air to water heat pump		-	Yes							
Product	Heat pump combination h	eater	-			N	lo				
description	Low temperature heat pur	np	-			N	lo				
	Complementary heater		-	Yes							
Design capacity (P	DESIGN)		kW	4.0	4.0	6.0	5.0	7.0	6.0		
Nominal energy efficiency $(\eta_s)$		%	181 (186)	130 (132)	177 (180)	127 (128)	177 (179)	125 (126			
lominal energy class			-	A+++	A++	A+++	A++	A+++	A++		
Data for Packaged	Fiche:										
Energy efficience	by with OTC control ( $\eta_s$ ) (*	)	%	183 (188)	135 (138)	179 (182)	129 (130)	179 (181)	127 (129		
Energy class wi	th OTC control		-	A+++	A++	A+++	A++	A+++	A++		
Energy efficience	cy with thermostats/sensor	s (η <sub>s</sub> ) (*)	%	185 (190)	137 (140)	181 (184)	131 (132)	181 (183)	129 (131		
Energy class wi	th thermostats		-	A+++	A++	A+++	A++	A+++	A++		
Supplementary capacity (P <sub>SUP</sub> )			kW	0.0	0.9	0.25	1.1	0.6	1.5		
Type of energy used			-			Elec	tricity				
Declared capacity (	Pdh) and coefficient of per	formance (	COP <sub>d</sub> ) at	partial load	under the f	ollowing ou	tdoor temp	eratures:			
0 44		Pdh	kW	3.54	3.50	5.10	4.42	5.90	5.10		
Outdoor temper	Outdoor temperature (Tj) = -7°C	COP <sub>d</sub>	-	3.20	2.00	2.70	1.85	2.65	1.84		
0.44		Pdh	kW	2.35	2.16	3.10	2.69	3.59	3.10		
Outdoor temper	ature (Tj) = +2°C	COP	-	4.80	3.25	4.60	3.30	4.30	3.10		
	(T') - 700	Pdh	kW	3.00	2.43	3.00	2.43	3.20	2.00		
Outdoor temper	ature (Tj) = +7°C	COP	-	6.20	5.20	6.20	4.60	7.00	4.65		
0.44		Pdh	kW	3.05	2.80	3.05	2.80	3.50	2.20		
Outdoor temper	ature (Tj) = +12°C	COPd	-	8.30	6.90	8.35	6.35	9.70	6.55		
Outdoor temper	ature (Tj) = Bivalent	Pdh	kW	3.54	3.50	5.10	4.42	5.90	5.10		
temperature (T <sub>bi</sub>	<sub>iv</sub> )	COP	-	3.20	2.00	2.70	1.85	2.65	1.84		
Outdoor temper	ature (Tj) = Limit	Pdh	kW	4.00	3.10	5.30	3.90	5.60	5.00		
operation tempe	` */	COPd	-	2.75	1.90	2.50	1.70	2.30	1.50		
Bivalent temperatur	re (T <sub>biv</sub> )		°C	-7	-7	-7	-7	-7	-7		
Limit operation tem	perature (TOL)		°C	-10	-10	-10	-10	-10	-10		
Water limit operatio	n temperature (WTOL)		°C	55	55	55	55	55	55		
Degradation coeffic	ient (Cdh)		-	0.9	0.9	0.9	0.9	0.9	0.9		
Annual energy cons	sumption (Q <sub>HE</sub> )		kW·h	1798 (1754)	2463 (2420)	2652 (2608)	3186 (3143)	3068 (3024)	3723 (3680)		

#### RAS-(4-6)WHVNPE + RWD-(4.0-6.0)NW1E-220S(-K)

Model Outdo		НР		4.0	HP	5.0	HP	6.0	HP
		Outdooi	r unit	RAS-4WHVNPE		RAS-5WHVNPE		RAS-6WHVNPE	
		Indoor	unit	it RWD-4.0NW1E- 220S(-K)		RWD-5.0NW1E- 220S(-K)		RWD-6.0NW1E- 220S(-K)	
Water outlet temperature				35°C	55°C	35°C	55°C	35°C	55°C
	Air to water heat pump		-	Yes					
Product description	Heat pump combination heater		-	No					
	Low temperature heat pump		-	No					
	Complementary heater		-	Yes					
Design capacity (P <sub>DESIGN</sub> )			kW	11.0	10.0	14.0	12.0	16.0	14.0
Nominal energy efficiency (η <sub>s</sub> )			%	187 (189)	136 (137)	175 (176)	133 (133)	153 (153)	125 (126)
Nominal energy class			-	A+++	A++	A+++	A++	A++	A++
Data for Packaged	f Fiche:								
Energy efficiency with OTC control $(\eta_s)$ (*)			%	189 (191)	138 (139)	177 (178)	135 (136)	155 (155)	127 (128)
Energy class with OTC control			-	A+++	A++	A+++	A++	A++	A++
Energy efficiency with thermostats/sensors ( $\eta_s$ ) (*)			%	191 (193)	140 (141)	179 (180)	137 (138)	157 (157)	129 (130)
Energy class with thermostats			-	A+++	A++	A+++	A++	A++	A++
Supplementary capacity (P <sub>SUP</sub> )			kW	0.5	2.3	1.9	2.6	1.9	3.1
Type of energy used			-	Electricity					
Declared capacity (Pdh) and coefficient of performance (C				t partial load under the following outdoor temperatures:					
Outdoor temperature (Tj) = -7°C		Pdh	kW	9.60	8.60	12.00	10.25	13.80	12.00
		COP <sub>d</sub>	-	2.74	1.80	2.55	1.70	2.40	1.60
Outdoor temperature (Tj) = +2°C $\frac{Pdh}{COP_d}$		Pdh	kW	5.84	5.23	7.30	6.24	8.40	7.30
		COPd	-	5.20	3.60	4.70	3.60	3.90	3.35
Outdoor temperature (Ti) = +7°C		Pdh	kW	3.76	3.52	4.70	4.01	5.40	4.70
		COP <sub>d</sub>	-	5.80	4.80	5.70	4.60	5.00	4.35
Outdoor temperature (Tj) = +12°C		Pdh	kW	3.70	3.60	3.50	3.50	3.50	3.60
		COP	-	6.40	5.80	6.00	5.50	6.00	5.50
Outdoor temperature (Tj) = Bivalent		Pdh	kW	9.60	8.60	12.00	10.25	13.80	12.00
temperature (T	` */	COP	-	2.74	1.80	2.55	1.70	2.40	1.60
Outdoor temperature (Tj)	erature (Tj) = Limit	Pdh	kW	10.50	7.40	12.10	9.00	14.10	10.5
operation temperature (TOL)		COP <sub>d</sub>	-	2.65	1.70	2.50	1.60	2.30	1.40
Bivalent temperature (T <sub>biv</sub> )			°C	-7	-7	-7	-7	-7	-7
Limit operation temperature (TOL)			°C	-10	-10	-10	-10	-10	-10
Water limit operation temperature (WTOL)			°C	55	55	55	55	55	55
Degradation coefficient (Cdh)			-	0.9	0.9	0.9	0.9	0.9	0.9
Annual energy consumption ( $Q_{\rm HE}$ )			kW∙h	4714 (4666)	5815 (5767)	6313 (6265)	7066 (7018)	8287 (8239)	8759 (8710)

## RAS-(4-6)WHNPE + RWD-(4.0-6.0)NW1E-220S(-K)

		НР		4.0	HP	5.0	НР	6.0	HP
	Model	Outdoo	r unit	RAS-4V	WHNPE	RAS-5\	WHNPE	RAS-6\	WHNPE
		Indoor	unit	RWD-4.0NW1E- 220S(-K)		RWD-5.0NW1E- 220S(-K)		RWD-6.0NW1E- 220S(-K)	
	Water outlet temperature	;		35°C	55°C	35°C	55°C	35°C	55°C
	Air to water heat pump		-			Ye	es		
Product	Heat pump combination h	eater	-			N	o		
description	Low temperature heat pur	mp	-			N	lo		
	Complementary heater		-			Ye	es		
Design capacity (P	DESIGN)		kW	11.0	10.0	14.0	12.0	16.0	14.0
Nominal energy eff			%	186 (189)	135 (136)	174 (176)	132 (133)	152 (153)	125 (126
Nominal energy cla	ass		-	A+++	A++	A++ (A+++)	A++	A++	A++
Data for Packaged	Fiche:								
Energy efficien	cy with OTC control ( $\eta_{\rm S}$ ) (*	·)	%	188 (191)	137 (139)	176 (178)	135 (136)	154 (155)	127 (128)
Energy class w	ith OTC control		-	A+++	A++	A+++	A++	A++	A++
Energy efficien	cy with thermostats/sensor	rs (η <sub>s</sub> ) (*)	%	190 (193)	139 (141)	178 (180)	137 (138)	156 (157)	129 (130
Energy class w	ith thermostats		-	A+++	A++	A+++	A++	A++	A++
Supplementary capacity (P <sub>SUP</sub> )		kW	0.5	2.3	1.9	2.6	1.9	3.1	
Type of energy use	ed		-			Elect	tricity		
Declared capacity	(Pdh) and coefficient of pe	rformance (	COP <sub>d</sub> ) at	partial load	partial load under the following outdoor temperatures:				
Outdoor tompo	roturo (Ti) = 700	Pdh	kW	9.60	8.60	12.00	10.25	13.80	12.00
Outdoor tempe	rature (Tj) = -7°C	COPd	-	2.74	1.80	2.55	1.70	2.40	1.60
0.444		Pdh	kW	5.84	5.23	7.30	6.24	8.40	7.30
Outdoor tempe	rature (Tj) = +2°C	COP	-	5.20	3.60	4.70	3.60	3.90	3.35
	. (T') . 700	Pdh	kW	3.76	3.52	4.70	4.01	5.40	4.70
Outdoor tempe	rature (Tj) = +7°C	COP	-	5.80	4.80	5.70	4.60	5.00	4.35
	1 (T') 11000	Pdh	kW	3.70	3.60	3.50	3.50	3.50	3.60
Outdoor tempe	rature (Tj) = +12°C	COP	-	6.40	5.80	6.00	5.50	6.00	5.50
Outdoor tempe	rature (Tj) = Bivalent	Pdh	kW	9.60	8.60	12.00	10.25	13.80	12.00
temperature (T		COP	-	2.74	1.80	2.55	1.70	2.40	1.60
Outdoor tempe	rature (Tj) = Limit	Pdh	kW	10.50	7.40	12.10	9.00	14.10	10.50
operation temp	` ' '	COPd	-	2.65	1.70	2.50	1.60	2.30	1.40
Bivalent temperature (T <sub>hiv</sub> )		°C	-7	-7	-7	-7	-7	-7	
Limit operation tem	perature (TOL)		°C	-10	-10	-10	-10	-10	-10
Water limit operation	on temperature (WTOL)		°C	55	55	55	55	55	55
Degradation coeffic	cient (Cdh)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual energy con	sumption (Q <sub>HE</sub> )		kW·h	4736 (4666)	5837 (5767)	6335 (6265)	7088 (7018)	8309 (8239)	8781 (8710)

#### **♦ WARMER climate**

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

	HP		2.0 HP	2.5 HP	3.0 HP
Model	Outdoor	unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
	Indoor u	ınit	RWD-2.0RW1E- 220S(-K)	RWD-2.5RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )		kW	4.0	5.0	6.0
<sup>(1)</sup> Nominal energy efficiency (η <sub>S</sub> )		%	185 (194)	182 (189)	170 (175)
Data for Packaged Fiche:					
$^{(2)}$ Energy efficiency with OTC control $(\eta_s)$	(*)	%	187 (196)	184 (191)	172 (177)
(3) Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	189 (198)	186 (193)	174 (177)
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	1137 (1084)	1441 (1389)	1857 (1804)

## RAS-(4-6)WH(V)NPE + RWD-(4.0-6.0)NW1E-220S(-K)

	HP		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor	unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
	Indoor u	ınit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )		kW	10	12	14
$^{\scriptscriptstyle{(1)}}$ Nominal energy efficiency $(\eta_s)$		%	193	183	177
Data for Packaged Fiche:					
(2) Energy efficiency with OTC control (η <sub>S</sub> ) (*)		%	195	185	179
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>S</sub> ) (*)		%	197	187	181
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	2722	3455	4149

	HP		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor	unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
	Indoor		RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )		kW	10	12	14
$^{\scriptscriptstyle{(1)}}$ Nominal energy efficiency $(\eta_s)$		%	191	181	176
Data for Packaged Fiche:					
$^{(2)}$ Energy efficiency with OTC control ( $\eta_{_{\rm S}}$ )	(*)	%	193	183	178
(3) Energy efficiency with thermostats (n <sub>s</sub> ) (*)		%	195	185	180
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	2748	3481	4175

#### **♦ COLDER climate**

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

	НР		2.0 HP	2.5 HP	3.0 HP
Model	Outdoor	unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
	Indoor u		RWD-2.0RW1E- 220S(-K)	RWD-2.5RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )	k		4.0	5.0	6.0
<sup>(1)</sup> Nominal energy efficiency (η <sub>s</sub> )		%	123 (125)	122 (123)	118 (118)
Data for Packaged Fiche:					
<sup>(2)</sup> Energy efficiency with OTC control (η <sub>S</sub> )	(*)	%	125 (127)	124(125)	120 (120)
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	127 (129)	126 (127)	122 (122)
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	3058 (3031)	4048 (4021)	4910 (4884)

## RAS-(4-6)WH(V)NPE + RWD-(4.0-6.0)NW1E-220S(-K)

	НР		4.0 HP	5.0 HP	6.0 HP
Madal	Outdoor	unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
Model Indoor u			RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )			11	12	14
<sup>(1)</sup> Nominal energy efficiency (η <sub>S</sub> )		%	120	119	112
Data for Packaged Fiche:					
(2) Energy efficiency with OTC control (η <sub>s</sub> )	(*)	%	122	121	114
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	124	123	116
Annual energy consumption (Q <sub>HF</sub> )		kW∙h	8641	9514	11620

	НР		4.0 HP	5.0 HP	6.0 HP
Model	Outdoor	unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
	Indoor ι	ınit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Design capacity (P <sub>DESIGN</sub> )		kW	11	12	14
<sup>(1)</sup> Nominal energy efficiency (η <sub>S</sub> )		%	120	119	112
Data for Packaged Fiche:					
(2) Energy efficiency with OTC control (η	s) (*)	%	122	121	114
<sup>(3)</sup> Energy efficiency with thermostats (η <sub>s</sub> ) (*)		%	124	123	116
Annual energy consumption (Q <sub>HE</sub> )		kW∙h	8654	9528	11633

ERP performance data (Preliminary data)

## 2.2.2.3 ERP additional data - YUTAKI S

## RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

	HP		2.0 HP	2.5 HP	3.0 HP
Model	Outdoo	r unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
	Indoor	unit	RWM-2.0R1E	RWM-2.5R1E	RWM-3.0R1E
Electrical power input in stand-by mode (Psb)		W	11.9	11.9	11.9
Electrical power input in thermostat-OFF mode (Pto)		W	0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	11.9	11.9	11.9
Electrical power input in crankcase heater mode (Pc	k)	W	0.0	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	37	37	37
Capacity control mode		-	Variable (Inverter)		
Integrated supplementary heater		kW	3.0	3.0	3.0
Nominal outdoor air flow		m³/h	2436	2436	2682

## RAS-(4-6)WH(V)NPE + RWM-(4.0-6.0)N1E

	HF		4.0 HP	5.0 HP	6.0 HP
Model	Outdoo	r unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
	Indoor	unit	RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E
Electrical power input in stand-by mode (Psb)	)	W	13.1	13.1	13.1
Electrical power input in thermostat-OFF mod	le (Pto)	W	0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	13.1	13.1	13.1
Electrical power input in crankcase heater mo	de (Pck)	W	0.0	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	39	39	39
Sound power level of outdoor unit (L <sub>WA</sub> )		dB(A)	64	65	67
Capacity control mode	Capacity control mode		Variable (Inverter)		
Integrated supplementary heater		kW	6.0	6.0	6.0
Nominal outdoor air flow		m³/h	4800	5400	6000

	HE	•	4.0 HP	5.0 HP	6.0 HP
Model	Outdoo	r unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
	Indoor	unit	RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E
Electrical power input in stand-by mode (Psb)	)	W	19.1	19.1	19.1
Electrical power input in thermostat-OFF mod	le (Pto)	W	0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	19.1	19.1	19.1
Electrical power input in crankcase heater mo	ode (Pck)	W	0.0	0.0	0.0
Sound power level of indoor unit $(L_{WA})$		dB(A)	39	39	39
Sound power level of outdoor unit (L <sub>WA</sub> )		dB(A)	64	65	67
Capacity control mode		-		Variable (Inverter)	
Integrated supplementary heater		kW	6.0	6.0	6.0
Nominal outdoor air flow		m³/h	4800	5400	6000

## RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

	HP		8.0 HP	10.0 HP
Model	Outdoor unit		RAS-8WHNPE	RAS-10WHNPE
	Indoor	unit	RWM-8.0N1E	RWM-10.0N1E
Electrical power input in stand-by mode (Psb)		W	36	36
Electrical power input in thermostat-OFF mode (Pto)		W	0.0	0.0
Electrical power input in OFF mode (Poff)		W	36	36
Electrical power input in crankcase heater mode (Pcl	<)	W	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	47	47
Sound power level of outdoor unit (L <sub>WA</sub> )		dB(A)	73	74
Capacity control mode			Variable	(inverter)
Integrated supplementary heater			9.0	9.0
Nominal outdoor air flow		m³/h	7620	8040

## 2.2.2.4 ERP additional data - YUTAKI S COMBI

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

		IP	2.0 HP	2.5 HP	3.0 HP
Model	Outdo	or unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
Model		or unit	RWD-2.0RW1E- 220S(-K)	RWD-2.5RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)
Electrical power input in stand-by mode (Psb)		W	11.9	11.9	11.9
Electrical power input in thermostat-OFF mode (Pto	Electrical power input in thermostat-OFF mode (Pto)		0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	11.9	11.9	11.9
Electrical power input in crankcase heater mode (F	Pck)	W	0.0	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	37	37	37
Capacity control mode		-		Variable (Inverter)	
Integrated supplementary heater		kW	3.0	3.0	3.0
Nominal outdoor air flow		m³/h	2436	2436	2682

## RAS-(4-6)WHVNPE + RWD-(4.0-6.0)NW1E-220S(-K)

	Н	Р	4.0 HP	5.0 HP	6.0 HP
Model	Outdo	or unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
	Indoo	r unit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Electrical power input in stand-by mode (Psb)		W	13.1	13.1	13.1
Electrical power input in thermostat-OFF mode (Pto	o)	W	0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	13.1	13.1	13.1
Electrical power input in crankcase heater mode (F	Pck)	W	0.0	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	39	39	39
Sound power level of outdoor unit (L <sub>WA</sub> )		dB(A)	64	65	67
Capacity control mode		-		Variable (Inverter)	
Integrated supplementary heater		kW	6.0	6.0	6.0
Nominal outdoor air flow		m³/h	4800	5400	6000

## RAS-(4-6)WHNPE + RWD-(4.0-6.0)NW1E-220S(-K)

	Н	Р	4.0 HP	5.0 HP	6.0 HP
Model	Outdo	or unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
	Indoo	r unit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Electrical power input in stand-by mode (Psb)		W	19.1	19.1	19.1
Electrical power input in thermostat-OFF mode (Pt	0)	W	0.0	0.0	0.0
Electrical power input in OFF mode (Poff)		W	19.1	19.1	19.1
Electrical power input in crankcase heater mode (F	Pck)	W	0.0	0.0	0.0
Sound power level of indoor unit (L <sub>WA</sub> )		dB(A)	39	39	39
Sound power level of outdoor unit (L <sub>WA</sub> )		dB(A)	64	65	67
Capacity control mode		-		Variable (Inverter)	
Integrated supplementary heater		kW	6.0	6.0	6.0
Nominal outdoor air flow		m³/h	4800	5400	6000

## 2.2.3 General ERP data for combi heaters

## 2.2.3.1 YUTAKI S COMBI

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

	ŀ	-IP	2.0 HP	2.5 HP	3.0 HP			
Model	Outdo	oor unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1			
	Indo	or unit	RWD-2.0RW1E- 220S(-K)	RWD-2.5RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)			
Declared profile		-	L	L	L			
Ability to work during OFF peak hours		- Yes						
		Α	VERAGE climate					
Water heating energy efficiency (η <sub>wh</sub> )		%		130				
Water heating energy class		-						
Daily electricity consumption		kW∙h		2.15				
Annual energy consumption		kW·h		785				
		V	VARMER climate					
Water heating energy efficiency $(\eta_{wh})$		%		145				
Daily energy consumption		kW·h		3.21				
Annual energy consumption		kW·h		706				
		(	COLDER climate					
Water heating energy efficiency $(\eta_{wh})$		%	112					
Daily energy consumption		kW∙h		4.16				
Annual energy consumption		kW·h		914				

## RAS-(4-6)WH(V)NPE + RWD-(4.0-6.0)NW1E-220S(-K)

		HP	4.0 HP	5.0 HP	6.0 HP			
Model	Outo	door unit	RAS-4WH(V)NPE	RAS-5WH(V)NPE	RAS-6WH(V)NPE			
	Ind	oor unit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)			
Declared profile		-	L	L	L			
Ability to work during OFF peak hours		-		Yes				
		AV	ERAGE climate					
Water heating energy efficiency $(\eta_{wh})$		%		127				
Water heating energy class		-		A+				
Daily electricity consumption		kW·h		2.22				
Annual energy consumption		kW·h		809				
		W	ARMER climate					
Water heating energy efficiency (η <sub>wh</sub> )		%		143				
Daily energy consumption		kW·h		3.26				
Annual energy consumption		kW·h		717				
		C	OLDER climate					
Water heating energy efficiency $(\eta_{wh})$		%	111					
Daily energy consumption		kW·h	4.22					
Annual energy consumption		kW·h		928				

## 2.2.3.2 General ERP data for hot water storage tanks (YUTAKI S)

Model		DHWT-200S-3.0H2E	DHWT-300S-3.0H2E
Storage volume L		194	264
Standing loss W		47.3	62.8
Energy efficiency class	-	В	В

## 2.3 Cooling mode application (EN 14825) (Models with cooling kit accessory) (Preliminary data)

## 2.3.1 Cooling data (EN 14825) - YUTAKI S

## RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

	Model	Outdoo	or unit	RAS-2V	/HVRP1	RAS-2.5	WHVRP1	RAS-3V	/HVRP1
	Model	Indoo	r unit	RWM-2	2.0R1E	RWM-	2.5R1E	RWM-	3.0R1E
Water outle	t temperature			7°C	18°C	7°C	18°C	7°C	18°C
	Outdoor side heat ex-	changer	-	Air to	Air to Water		Air to Water		Water
	Indoor side heat exch	Indoor side heat exchanger chiller		Wa	ater	Wa	ater	Wa	ter
Product description	Туре		-		sor driven mpression		sor driven mpression	Compress vapour co	sor driven mpression
	Driver of compressor		-	Electric	motor	Electric	c motor	Electric	motor
	Capacity Control			Vari	able	Vari	able	Vari	able
	Water control			Fix	red	Fix	red	Fix	ed
Rated Cool	ing Capacity (PRATED,C	)	kW	4.00	5.50	5.3	6.30	6.5	7.0
Seasonal s (ηS,C)	pace cooling energy efficient	ency	%	220	319	218	338	208	331
Seasonal e (SEER)	nergy efficiency ratio cooli	ng mode	-	5.57	8.04	5.53	8.50	5.27	8.35
Seasonal a (SEERON)	ctive energy ratio cooling	mode	-	5.79	8.38	5.69	8.53	5.39	8.64
	poling capacity and efficier n outdoor temperatures T		or part						
	Outdoor temperature	Pdc	kW	4.00	5.50	5.30	6.30	6.50	7.00
	(Tj) = 35°C	EERd	-	4.00	5.40	3.60	5.30	3.35	5.00
	Outdoor temperature	Pdc	kW	2.95	4.05	3.91	4.64	4.79	5.16
	(Tj) = 30°C	EERd	-	5.00	7.20	4.50	7.00	4.50	6.40
	Outdoor temperature	Pdc	kW	2.05	2.61	2.51	2.98	2.90	3.32
	(Tj) = 25°C	EERd	-	6.45	9.60	6.30	9.90	6.00	10.0
	Outdoor temperature	Pdc	kW	2.88	2.51	2.88	2.65	3.40	3.60
	(Tj) = 20°C	EERd	-	8.00	10.3	8.56	12.61	7.50	13.5
Degradation	n coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual ene	rgy consumption (QCE)		kW∙h	431	410	575	337	740	503

## RAS-(4-6)WHVNPE + RWM-(4.0-6.0)N1E

	Model	Outdoo	or unit	RAS-4W	/HVNPE	RAS-5W	HVNPE	RAS-6W	/HVNPE
	Model	Indoo	r unit	RWM-4	4.0N1E	RWM-5	5.0N1E	RWM-6	3.0N1E
Water outlet	temperature			7°C	18°C	7°C	18°C	7°C	18°C
	Outdoor side heat exchanger of chille	r	-	Air to Water		Air to	Water	Air to Water	
	Indoor side heat exchanger chiller		-	Wa	iter	Wa	ter	Wa	iter
Product description	Туре		-	Compress vapour co	sor driven mpression	Compress vapour cor		Compress vapour co	sor driven mpression
	Driver of compress		-	Electric	motor	Electric	motor	Electric	motor
	Capacity Control			Vari	able	Varia	able	Varia	able
	Water control			Fix	ced	Fix	ed	Fix	ed
Rated Cooli	ng Capacity (PRATED	,C)	kW	7.2	10.4	9.5	12.9	10.5	13.5
Seasonal sp (ηS,C)	pace cooling energy effi	iciency	%	202	252	194	215	188 2	
Seasonal er mode (SEEI	nergy efficiency ratio co R)	oling	-	5.13	6.36	4.92	5.44	4.78	5.38
Seasonal ad (SEERON)	ctive energy ratio coolin	g mode	-	5.44	6.69	5.13	5.63	4.96	5.56
	oling capacity and effic given outdoor temperat		o for						
	Outdoor temperature	Pdc	kW	7.2	10.4	9.5	12.9	10.5	13.5
	(Tj) = 35°C	EERd	-	3.84	4.5	3.4	4.02	3	3.81
	Outdoor temperature	Pdc	kW	5.3	7.66	7	9.51	7.8	9.95
	(Tj) = 30°C	EERd	-	4.6	6.3	4.55	5.9	4.4	5.6
	Outdoor temperature	Pdc	kW	3.5	4.93	4.5	7.2	5	7.2
	(Tj) = 25°C	EERd	-	5.8	7.2	5.3	6.2	5.1	6.2
	Outdoor temperature	Pdc	kW	3.6	5.1	3.2	7.8	3.2	7.8
	(Tj) = 20°C	EERd	-	7.5	8.2	6.8	6.3	6.8	6.3
Degradation	coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual ener	gy consumption (QCE)	)	kW∙h	491	572	676	830	768	878

## RAS-(4-6)WHNPE + RWM-(4.0-6.0)N1E

	Model	Outdoo	or unit	RAS-4V	VHVNPE	RAS-5W	HVNPE	RAS-6W	/HVNPE		
	ouoi	Indoo	r unit	RWM-	4.0N1E	RWM-5	5.0N1E	RWM-6	6.0N1E		
Water outle	t temperature			7°C	18°C	7°C	18°C	7°C	18°C		
	Outdoor side heat exchanger of chille	r	-	Air to Water		Air to	Water	Air to Water			
	Indoor side heat exchanger chiller		-	Water		Wa	ter	Wa	iter		
Product description	Туре		-	Compressor driven vapour compression		· '		Compress vapour co		Compress vapour co	
	Driver of compress	or	-	Electric	c motor	Electric	motor	Electric	motor		
	Capacity Control			Vari	able	Varia	able	Variable			
	Water control			Fix	red	Fixed		Fixed			
Rated Cooli	ng Capacity (PRATED	,C)	kW	7.02	10.4	9.5	10.9	10.5	13.5		
Seasonal s <sub>l</sub> (ηS,C)	pace cooling energy eff	iciency	%	197	246	190	211	185	209		
Seasonal ei mode (SEE	nergy efficiency ratio co R)	oling	-	5	6.22	4.83	5.36	4.7	5.3		
Seasonal a	ctive energy ratio coolin	g mode	-	5.44	6.69	5.13	5.63	4.96	5.56		
	ooling capacity and effic given outdoor tempera	,	o for								
	Outdoor temperature	Pdc	kW	7.2	10.4	9.5	12.9	10.5	13.5		
	(Tj) = 35°C	EERd	-	3.84	4.5	3.4	4.02	3	3.81		
	Outdoor temperature	Pdc	kW	5.3	7.66	7	9.51	7.8	9.95		
	(Tj) = 30°C	EERd	-	4.6	6.3	4.55	5.9	4.4	5.6		
	Outdoor temperature	Pdc	kW	3.5	4.93	4.5	7.2	5	7.2		
	(Tj) = 25°C	EERd	-	5.8	7.2	5.3	6.2	5.1	6.2		
	Outdoor temperature	Pdc	kW	360	5.1	3.2	7.8	3.2	7.8		
	(Tj) = 20°C	EERd	-	7.5	8.2	6.8	6.3	6.8	6.3		
Degradation	n coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9		
Annual ene	rgy consumption (QCE)	)	kW∙h	504	585	688	843	781	891		

## RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

	Model	Outdoo	or unit	RAS-8W	/HVNPE	RAS-10V	VHVNPE
	Wiodei	Indoo	r unit	RWM-8	3.0N1E	RWM-1	0.0N1E
Water outlet	temperature			7°C	18°C	7°C	18°C
	Outdoor side heat exchanger of chille	r	-	Air to	Water	Air to	Water
	Indoor side heat exchanger chiller		-	Wa	iter	Wa	ıter
Product description	Туре		-	Compress vapour co		Compress vapour co	sor driven mpression
	Driver of compress	or	-	Electric	motor	Electric	motor
Capacity Control				Varia	able	Vari	able
	Water control			Fix	red	Fix	ed
Rated Cooli	ng Capacity (PRATED	,C)	kW	14	17	17.5	20
Seasonal s <sub>Γ</sub> (ηS,C)	pace cooling energy eff	iciency	%	169	213	159	215
Seasonal ei mode (SEE	nergy efficiency ratio co	oling	-	4.29	5.4	4.06	5.44
Seasonal ac (SEERON)	ctive energy ratio coolir	g mode	-	4.6	5.8	4.28	5.79
	oling capacity and effic given outdoor tempera		o for				
	Outdoor temperature	Pdc	kW	14	17	17.5	20
	(Tj) = 35°C	EERd	-	3.12	3.81	2.81	3.61
	Outdoor temperature	Pdc	kW	10.32	12.53	12.9	14.74
	(Tj) = 30°C	EERd	-	3.92	5.6	3.53	5.5
	Outdoor temperature	Pdc	kW	6.5	8.2	8.2	8.2
	(Tj) = 25°C	EERd	-	5.3	6.5	4.87	6.5
Outdoor temperature Pdc		Pdc	kW	8	8.5	8	8.5
(Tj) = 20°C EEF			-	5.8	6.6	5.5	6.6
Degradation coefficient (Cdc)			-	0.9	0.9	0.9	0.9
Annual ene	gy consumption (QCE)		kW·h	1142	1102	1510	1286

## 2.3.2 Cooling data (EN 14825) - YUTAKI S COMBI

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

		Outdoo	r unit	RAS-2W	/HVRP1	RAS-2.5	WHVRP1	RAS-3WHVRP1	
	Model	Indoo	unit		RWD-2.0RW1E- 220S(-K)		RWD-2.5RW1E- 220S(-K)		0RW1E- S(-K)
Water outlet	temperature			7°C	18°C	7°C	18°C	7°C	18°C
	Outdoor side heat ex of chiller	xchanger	-	Air to	Water	Air to	Water	Air to	Water
	Indoor side heat exc chiller	Indoor side heat exchanger chiller		Wa	iter	Wa	iter	Wa	iter
Product description	Туре		-	Compress vapour co			sor driven mpression	Compress vapour co	sor driven mpression
	Driver of compresso	r	-	Electric	motor	Electric	motor	Electric	motor
	Capacity Control			Vari	able	Vari	able	Vari	able
	Water control			Fix	red	Fixed		Fixed	
Rated Coolin	ng Capacity (PRATED,C	<b>C</b> )	kW	4.00	5.50	5.3	6.30	6.5	7.0
Seasonal sp (ηS,C)	ace cooling energy effic	iency	%	220	319	218	338	208	331
Seasonal en	ergy ratio cooling mode	(SEER)	-	5.57	8.04	5.53	8.50	5.27	8.35
Seasonal ac (SEERON)	tive energy ratio cooling	mode	-	5.79	8.38	5.69	8.53	5.39	8.64
	oling capacity and efficient outdoor temperatures		or part						
	Outdoor temperature	Pdc	kW	4.00	5.50	5.30	6.30	6.50	7.00
	(Tj) = 35°C	EERd	-	4.00	5.40	3.60	5.30	3.35	5.00
	Outdoor temperature	Pdc	kW	2.95	4.05	3.91	4.64	4.79	5.16
	(Tj) = 30°C	EERd	-	5.00	7.20	4.50	7.00	4.50	6.40
	Outdoor temperature	Pdc	kW	2.05	2.61	2.51	2.98	2.90	3.32
	(Tj) = 25°C	EERd	-	6.45	9.60	6.30	9.90	6.00	10.0
	Outdoor temperature	Pdc	kW	2.88	2.51	2.88	2.65	3.40	3.60
	(Tj) = 20°C	EERd	-	8.00	10.3	8.56	12.61	7.50	13.5
Degradation	coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual energ	gy consumption (QCE)		kW∙h	431	410	575	337	740	503

## RAS-(4-6)WHVNPE + RWD-(4.0-6.0)NW1E-220S

		Outdoor	unit	RAS-4V	VHVNPE	RAS-5V	VHVNPE	RAS-6W	/HVNPE
	Model	Indoor	unit	RWD-4.0NW1E- 220S(-K)		RWD-5.0NW1E- 220S(-K)		RWD-6.0NW1E- 220S(-K)	
Water outle	t temperature			7°C	18°C	7°C	18°C	7°C	18°C
	Outdoor side heat ex	changer of	-	Air to	Water	Air to	Water	Air to	Water
	Indoor side heat exc	Indoor side heat exchanger chiller		Wa	ater	Wa	ater	Wa	iter
Product description	Туре		-		sor driven mpression		sor driven mpression		sor driven mpression
	Driver of compresso	r	-	Electric	c motor	Electri	c motor	Electric	motor
	Capacity Control			Vari	able	Vari	iable	Vari	able
	Water control			Fixed		Fixed		Fixed	
Rated Cool	ing Capacity (PRATED,0	C)	kW	7.2	10.4	9.5	12.9	10.5	13.5
Seasonal s	oace cooling energy effic	iency (ηS,C)	%	202	252	194	215	188	212
Seasonal e	nergy ratio cooling mode	(SEER)	-	5.13	6.36	4.92	5.44	4.78	5.38
Seasonal a (SEERON)	ctive energy ratio cooling	mode	-	5.44	6.69	5.13	5.63	4.96	5.56
	ooling capacity and efficient outdoor temperatures		oart						
	Outdoor temperature	Pdc	kW	7.2	10.4	9.5	12.9	10.5	13.5
	(Tj) = 35°C	EERd	-	3.84	4.5	3.4	4.02	3	3.81
	Outdoor temperature	Pdc	kW	5.3	7.66	7	9.51	7.8	9.95
	(Tj) = 30°C	EERd	-	4.6	6.3	4.55	5.9	4.4	5.6
	Outdoor temperature	Pdc	kW	3.5	4.93	4.5	7.2	5	7.2
	(Tj) = 25°C	EERd	-	5.8	7.2	5.3	6.2	5.1	6.2
	Outdoor temperature	Pdc	kW	3.6	5.1	3.2	7.8	3.2	7.8
	(Tj) = 20°C	EERd	-	7.5	8.2	6.8	6.3	6.8	6.3
Degradation	n coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual ene	rgy consumption (QCE)		kW∙h	491	572	676	830	768	878

## **RAS-(4-6)WHNPE + RWD-(4.0-6.0)NW1E-220S**

		Outdoor		RAS-4\	WHNPE	RAS-5\	WHNPE	RAS-6WHNPE	
	Model	Indoor u	ınit	RWD-4.0NW1E- 220S(-K)		RWD-5.0NW1E- 220S(-K)		RWD-6.0NW1E- 220S(-K)	
Water outlet	t temperature			7°C	18°C	7°C	18°C	7°C	18°C
	Outdoor side heat ex	changer of	-	Air to	Water	Air to	Water	Air to	Water
	Indoor side heat exc	Indoor side heat exchanger chiller		Wa	ater	Wa	ater	Wa	iter
Product description	Туре		-		sor driven mpression		sor driven mpression		sor driven mpression
	Driver of compressor			Electric	c motor	Electric	motor	Electric	motor
	Capacity Control			Vari	able	Vari	able	Vari	able
	Water control			Fixed		Fixed		Fixed	
Rated Cooli	ng Capacity (PRATED,0	C)	kW	7.02	10.4	9.5	10.9	10.5	13.5
Seasonal sp	pace cooling energy effic	iency (ηS,C)	%	197	246	190	211	185	209
Seasonal er	nergy ratio cooling mode	(SEER)	-	5	6.22	4.83	5.36	4.7	5.3
Seasonal ac (SEERON)	ctive energy ratio cooling	mode	-	5.44	6.69	5.13	5.63	4.96	5.56
	ooling capacity and efficient outdoor temperatures		art						
	Outdoor temperature	Pdc	kW	7.2	10.4	9.5	12.9	10.5	13.5
	(Tj) = 35°C	EERd	-	3.84	4.5	3.4	4.02	3	3.81
	Outdoor temperature	Pdc	kW	5.3	7.66	7	9.51	7.8	9.95
	(Tj) = 30°C	EERd	-	4.6	6.3	4.55	5.9	4.4	5.6
	Outdoor temperature	Pdc	kW	3.5	4.93	4.5	7.2	5	7.2
(Tj) = 25°C EERd		EERd	-	5.8	7.2	5.3	6.2	5.1	6.2
	Outdoor temperature	Pdc	kW	360	5.1	3.2	7.8	3.2	7.8
	(Tj) = 20°C	EERd	-	7.5	8.2	6.8	6.3	6.8	6.3
Degradation	lation coefficient (Cdc)		-	0.9	0.9	0.9	0.9	0.9	0.9
Annual ener	rgy consumption (QCE)		kW∙h	504	585	688	843	781	891

## 2.3.3 Additional Cooling data (EN 14825) - YUTAKI S

## RAS-(2-3)WHVRP1 + RWM-(2.0-3.0)R1E

Model	Outdoor	unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1
Model	Indoor (	unit	RWM-2.0R1E	RWM-2.5R1E	RWM-3.0R1E
Electrical power input in stand-by mode cooling mode (Psb)		W	11.9	11.9	11.9
Electrical power input in thermostat-OFF cooling mode (Pto)				0	0
Electrical power input in OFF m	Electrical power input in OFF mode (Poff)		11.9	11.9	11.9
Electrical power input in cranko in cooling mode (Pck)	Electrical power input in crankcase heater in cooling mode (Pck)		0	0	0
Sound power level of indoor un	it (LWA)	dB(A)	37	37	37
Sound power level of outdoor unit (LWA)		dB(A)	61	63	64
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	2436	2436	2682

## RAS-(4-6)WH(V)NPE + RWM-(4.0-6.0)N1E

Model	Outdooi	r unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
wodei	Indoor	unit	RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E
Electrical power input in stand-tocoling mode (Psb)	by mode	W	13.1	13.1	13.1
Electrical power input in thermo cooling mode (Pto)	stat-OFF	W	0.0	0.0	0.0
Electrical power input in OFF m	ode (Poff)	W	13.1	13.1	13.1
Electrical power input in crankca heater in cooling mode (Pck)	ase	W	0.0	0.0	0.0
Sound power level of indoor uni	d power level of indoor unit (LWA)		39	39	39
Sound power level of outdoor unit (LWA)		dB(A)	64	65	67
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	4800	5400	6000

## RAS-(4-6)WH(V)NPE + RWM-(4.0-6.0)N1E

Model	Outdoo	r unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
Model	Indoor	unit	RWM-4.0N1E	RWM-5.0N1E	RWM-6.0N1E
Electrical power input in stand-by mode cooling mode (Psb)		W	19.1	19.1	19.1
Electrical power input in thermo cooling mode (Pto)	·		0.0	0.0	0.0
Electrical power input in OFF m	ode (Poff)	W	19.1	19.1	19.1
Electrical power input in crankca heater in cooling mode (Pck)	ase	W	0.0	0.0	0.0
Sound power level of indoor uni	t (LWA)	dB(A)	39	39	39
Sound power level of outdoor unit (LWA)		dB(A)	64	65	67
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	4800	5400	6000

## RAS-(8-10)WHNPE + RWM-(8.0-10.0)N1E

Model	Outdoor unit		RAS-8WHNPE	RAS-10WHNPE
Model	Indoor unit		RWM-8.0N1E	RWM-10.0N1E
Electrical power input in stand-b cooling mode (Psb)	y mode	W	36	36
Electrical power input in thermo cooling mode (Pto)	Il power input in thermostat-OFF mode (Pto)		0.0	0.0
Electrical power input in OFF m	ode (Poff)	W	36	36
Electrical power input in crankca heater in cooling mode (Pck)	ase	W	0.0	0.0
Sound power level of indoor uni	t (LWA)	dB(A)	47	47
Sound power level of outdoor unit (LWA)		dB(A)	73	74
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	7620	8040

## 2.3.4 Additional Cooling data (EN 14825) - YUTAKI S COMBI

## RAS-(2-3)WHVRP1 + RWD-(2.0-3.0)RW1E-220S(-K)

	Outdoor	unit	RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1		
Model	Indoor ເ	ınit	RWD-2.0RW1E- 220S(-K)	RWD-2.5RW1E- 220S(-K)	RWD-3.0RW1E- 220S(-K)		
Electrical power input in stand-cooling mode (Psb)	Electrical power input in stand-by mode cooling mode (Psb)		11.9	11.9	11.9		
Electrical power input in thermo cooling mode (Pto)	ostat-OFF	W	0	0	0		
Electrical power input in OFF n	node (Poff)	W	11.9	11.9	11.9		
Electrical power input in cranko cooling mode (Pck)	ase heater in	W	0	0	0		
Sound power level of indoor ur	it (LWA)	dB(A)	37	37	37		
Sound power level of outdoor u	Sound power level of outdoor unit (LWA)		evel of outdoor unit (LWA)		61	63	64
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)		
Nominal outdoor air flow		m³/h	2436	2436	2682		

## RAS-(4-6)WHVNPE + RWD-(4.0-6.0)NW1E-220S(-K)

	Outdoor	unit	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
Model	Indoor (	ınit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Electrical power input in stand-cooling mode (Psb)	Electrical power input in stand-by mode www.		13.1	13.1	13.1
Electrical power input in thermo cooling mode (Pto)	Electrical power input in thermostat-OFF cooling mode (Pto)		0.0	0.0	0.0
Electrical power input in OFF m	node (Poff)	W	13.1	13.1	13.1
Electrical power input in cranko cooling mode (Pck)	Electrical power input in crankcase heater in cooling mode (Pck)		0.0	0.0	0.0
Sound power level of indoor un	it (LWA)	dB(A)	39	39	39
Sound power level of outdoor unit (LWA)		dB(A)	64	65	67
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	4800	5400	6000

## RAS-(4-6)WHNPE + RWD-(4.0-6.0)NW1E-220S(-K)

	Outdoor	unit	RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
Model	Indoor ι	ınit	RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)
Electrical power input in stand-cooling mode (Psb)	stand-by mode W		19.1	19.1	19.1
Electrical power input in thermo cooling mode (Pto)	ut in thermostat-OFF		0.0	0.0	0.0
Electrical power input in OFF n	node (Poff)	W	19.1	19.1	19.1
Electrical power input in cranko cooling mode (Pck)	Electrical power input in crankcase heater in cooling mode (Pck)		0.0	0.0	0.0
Sound power level of indoor ur	nit (LWA)	dB(A)	39	39	39
Sound power level of outdoor u	ound power level of outdoor unit (LWA)		64	65	67
Capacity control mode		-	Variable (Inverter)	Variable (Inverter)	Variable (Inverter)
Nominal outdoor air flow		m³/h	4800	5400	6000

## 2.4 General specifications

#### 2.4.1 Considerations

- The sound data is based on the following conditions:
  - Outdoor ambient temperature (DB/WB): 7/6°C.
  - Water inlet/outlet temperature: 47/55°C (mark: \*1); 30/35°C (mark: \*2).
  - Distance of the unit from the measuring point: At 1 meter from the unit's front surface; 1,5 meter from floor level.
  - The sound pressure level is measured in an anechoic chamber, so reflected sound should be taken into consideration when installing the unit.
  - The sound power level is measured in a reverberant room, in accordance with the standard EN12102. Used environment conditions are the same that specified in EN14511 for performance test.
- The nominal water flow rate is calculated under the following conditions:
  - Outdoor ambient temperature (DB/WB): 7/6°C.
  - Water inlet/outlet temperature: 47/55°C (mark: \*1); 30/35°C (mark: \*2).
- Regarding data market with mark: \*3, it corresponds to the height of the unit with the minimum mounting foot height. This value can be adjusted up to +30 mm.
- For specific details about data corresponding to the working range, please refer to the chapter "5. Working range".

#### Keywords:

DB: Dry bulb WB: Wet bulb

### 2.4.2 Split system - Outdoor unit (Preliminary data)

#### RAS-(2-3)WHVRP1

Model			RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1	
Power supply		-		1~ 230V 50Hz		
Noise level	evel (*1)		61	63	69	
(sound power)	(*2)	dB(A)	61	63	67	
Air flow		m³/min	42.1	42.1	49.7	
Cabinet colour (	Munsell code)	-	Na	atural Gray (1.0Y 8.5/0	.5)	
Dimensions (H	(WxD)	mm		629 x 799 (+99) x 300		
Net weight		kg	45	45	44	
Gross weight		kg	49	49	48	
Piping diameter	(liquid / gas)	mm (in.)	Ø6.35 (1/4) / Ø12.7 (1/2)	Ø6.35 (1/4) / Ø12.7 (1/2)	Ø6.35 (1/4) / Ø15.88 (5/8)	
Minimum piping	length	m		3		
Maximum charg	eless piping length	m		10		
Maximum piping	length	m	50	50	40	
Height differenc (higher OU / low	e between OU and IU ver OU)	m		30 / 20		
Working range	Outdoor ambient temperature	°C (DB)		-20~25		
(Heating)	Outlet water temperature	°C		20~60		
Working range	Outdoor ambient temperature	°C (DB)		10~46		
(Cooling)	Outlet water temperature	°C		5~22		
Working range	Outdoor ambient temperature	°C (DB)		-20~35		
(DHW)	Tank water temperature	°C		30~75		
Refrigerant		-		R32		
Refrigerant char	ge before shipment	kg	1.2	1.3	1.3	
Compressor typ	е	-			Rotary DC Inverter driven	

## RAS-(4-6)WHVNPE

	Model		RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE	
Power supply		-	1~ 230V 50Hz			
Noise level (sou	und pressure)	dB(A)	49	50	50	
Noise level	(*1)		64	65	67	
(sound power)	(*2)	dB(A)	63	64	65	
Air flow		m³/min	80	90	100	
Cabinet colour	(Munsell code)	-	Nati	ural grey (1.0Y 8.5/0	0.5)	
Dimensions (H	x W x D)	mm		1380 x 950 x 370		
Net weight		kg	103	103	103	
Gross weight		kg	116	116	116	
Piping diamete	r (liquid / gas)	mm (in.)	Ø9.52 (3/8) / Ø15.88 (5/8)	Ø9.52 (3/8) / Ø15.88 (5/8)	Ø9.52 (3/8) / Ø15.88 (5/8)	
Minimum piping	g length	m		5	0	
Maximum char	geless piping length	m		15		
Maximum pipin	g length (additional refrigerant charge needed)	m (g/m)		75 (60)		
Height differend	ce between OU and IU (higher OU / lower OU)	m		30 / 20		
Working range	(cooling // heating // DHW)	°C (DB)	10~+46 // -25~+25 // -25~+35			
Refrigerant		-	R410A			
Refrigerant cha	arge before shipment	kg	3.3	3.4	3.4	
Compressor typ	pe	-	Sc	roll DC Inverter drive	en	

## RAS-(4-6)WHNPE

	Model		RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE
Power supply		-	3N~ 400V 50Hz		
Noise level (sou	und pressure)	dB(A)	49	50	50
Noise level	(*1)		64	65	67
(sound power)	(*2)	dB(A)	63	64	65
Air flow		m³/min	80	90	100
Cabinet colour	(Munsell code)	-	Nati	ural grey (1.0Y 8.5/	0.5)
Dimensions (H	x W x D)	mm		1380 x 950 x 370	
Net weight		kg	103	103	103
Gross weight		kg	116	116	116
Piping diamete	r (liquid / gas)	mm (in.)	Ø9.52 (3/8) / Ø15.88 (5/8)	Ø9.52 (3/8) / Ø15.88 (5/8)	Ø9.52 (3/8) / Ø15.88 (5/8)
Minimum piping	g length	m		5	
Maximum char	geless piping length	m		15	
Maximum pipin	ng length (additional refrigerant charge needed)	m (g/m)		75 (60)	
Height differen	ce between OU and IU (higher OU / lower OU)	m		30 / 20	
Working range	(cooling // heating // DHW)	°C (DB)	10~+46 // -25~+25 // -25~+35		
Refrigerant	Refrigerant - R410A				
Refrigerant charge before shipment kg 3.3 3.4			3.4		
Compressor ty	pe	-	Sci	roll DC Inverter driv	ren

## RAS-(8-10)WHNPE

Model			RAS-8WHNPE	RAS-10WHNPE	
Power supply	y	-	3N~ 400V 50Hz		
Noise level (s	sound pressure)	dB(A)	59	60	
Noise	(*1)		73	74	
level (sound power)	(*2)	dB(A)	71	72	
Air flow		m³/min	127	134	
Cabinet colo	ur (Munsell code)	-	Natural grey	(1.0Y 8.5/0.5)	
Dimensions	(H x W x D)	mm	1380 x 9	950 x 370	
Net weight		kg	137	139	
Gross weigh	t	kg	152	154	
Piping diame	eter (liquid / gas)	mm (in.)	Ø9.52 (3/8) / Ø25.4	Ø12.70 (1/2) / Ø25.4	
Minimum pip	ing length	m		5	
Maximum ch	argeless piping length	m	1	15	
Maximum pip ant charge n	oing length (additional refriger- eeded)	m (g/m)	70	(65)	
Height differe (higher OU /	ence between OU and IU lower OU)	m	30 / 20		
Refrigerant		-	R410A		
Refrigerant of	harge before shipment	kg	5.0	5.3	
Compressor	type	-	Scroll DC In	verter driven	

## 2.4.3 Split system - Indoor unit (Preliminary data)

## 2.4.3.1 YUTAKI S

## RWM-(2.0-3.0)R1E

	Model		RWM-2.0R1E	RWM-2.5R1E	RWM-3.0R1E
Power supply		-	1~ 230V 50Hz / 3N~ 400V 50Hz		
Noise level (sound po	ower)	dB(A)	37		
Minimum water flow r	ate	m³/h	0.5	0.6	0.6
Maximum water flow	rate	m³/h	1.9	2.0	2.1
Cabinet	Material	-	Pi	recoated galvanised ste	eel
Cabinet	Colour	-		Pure white (RAL 9010)	
	Height (with connections)	mm		712 (782)	
Unit dimensions	Width	mm		450	
	Depth	mm		285	
	Height	mm		478	
Packaging dimen- sions	Width	mm		905	
Ciono	Depth	mm		539	
Packaging volume		m³		0.23	
Packaging materials		-		Wood - Carton - Plastic	;
Net weight		kg	35	36	37
Gross weight		kg	44	45	46
	Connection type	-	Flare nut connection		
Refrigerant pipes connection	Liquid pipe diameter	mm (in.)	Ø6.35 (1/4") Ø9.52 (3/8")		(3/8")
	Gas pipe diameter	mm (in.)		Ø15.88 (5/8")	
	Connection type	-		Screwed connection	
Space heating pipes	Shutdown valves	mm (in.)	(	G 1" (male) - G 1" (male	e)
connection	Inlet pipe diameter	mm (in.)		G 1" (female)	
	Outlet pipe diameter	mm (in.)		G 1" (female)	
	Outdoor ambient temperature	°C (DB)		-20~25	
Working range (Heating)	Indoor ambient temperature	°C (DB)		5~30	
	Outlet water temperature	°C		20~60	
	Outdoor ambient temperature	°C (DB)		10~46	
Working range (Cooling)	Indoor ambient temperature	°C (DB)	5~30		
	Outlet water temperature	°C		5~22	

## RWM-(4.0-10.0)N1E

	Model		RWM- 4.0N1E	RWM- 5.0N1E	RWM- 6.0N1E	RWM- 8.0N1E	RWM- 10.0N1E			
Power supply		-	1~ 230V	50Hz / 3N~ 40	0V 50Hz	3N~ 40	0V 50Hz			
Noise level (sound po	ower)	dB(A)		39		47				
Minimum water flow r	ate	m³/h	1.0	1.1	1.2	2.0	2.2			
Maximum water flow	rate	m³/h	2.9 3.0 3.0 4.5 4.6							
Only in a t	Material	-	Precoated galvanised steel							
Cabinet	Colour	- 1	Pure white (RAL 9010)							
	Height (with connections)	mm								
Unit dimensions	Width	mm		520		6	570			
	Depth	mm			370					
	Height	mm			556					
Packaging dimen-	Width	mm			1120					
sions	Depth	mm		610		7	760			
Packaging volume		m³		0.38		0	.47			
Packaging materials	-	Wood - Carton - Plastic								
Net weight		kg	46 48		60	62				
Gross weight		kg	61 63		76	78				
Refrigerant pipes	Connection type	-	Flare nut connection			Liquid pipe: Flare nut con- nection; Gas pipe: Brazed connection				
connection	Liquid pipe diameter	mm (in.)		Ø9.52	(3/8")		Ø12.7 (3/8")			
	Gas pipe diameter	mm (in.)		Ø15.88 (5/8")		Ø25	.4 (1")			
	Connection type	-		Scr	ewed connect	tion				
Space heating pipes	Shutdown valves	mm (in.)		G 1-1/4" (	male) - G 1-1	/4" (male)				
connection	Inlet pipe diameter	mm (in.)		G	1-1/4" (female	e)				
	Outlet pipe diameter	mm (in.)		G	1-1/4" (female	e)				
	Outdoor ambient temperature	°C (DB)			-25~25					
Working range (Heating)	Indoor ambient temperature	°C (DB)			5~30					
	Outlet water temperature	°C	20~60							
	Outdoor ambient temperature	°C (DB)			10~46					
Working range (Cooling)	Indoor ambient temperature	°C (DB)			5~30					
	Outlet water temperature	°C			5~22					

## 2.4.3.2 YUTAKI S COMBI

## ♦ Standard model and UK market model

## RWD-(2.0-3.0)RW1E-220S(-K)

	Model		RWD-2.0RW1E-220S(-K)	RWD-2.5RW1E-220S(-K)	RWD-3.0RW1E-220S(-K)				
Power supply		-	1~	230V 50Hz / 3N~ 400V 50	Hz				
Noise level (soun	d power)	dB(A)		37					
Minimum water fl	ow rate	m³/h	0.5	0.6	0.6				
Maximum water f	low rate	m³/h	1.8	1.9	1.9				
Cabinat	Material	-	Precoated galvanised steel						
Cabinet	Colour	-	Pure white (RAL 9010)						
	Height (with connections)	mm		1788 (1889)					
Unit dimensions	Width	mm		595					
	Depth	mm		598					
	Height	mm		2045					
Packaging dimensions	Width	mm		670					
differisions	Depth	mm		656					
Packaging volum	e	m³		0.90					
Packaging materi	als	-		Wood - Carton - Plastic					
Net weight		kg	120	120	121				
Gross weight		kg	131	131	132				
	Connection type	-		Flare nut connection					
Refrigerant	Liquid pipe diameter	mm (in.)	Ø6.35 (1/4")	Ø9.52	2 (3/8")				
pipes connection	Gas pipe diameter	mm (in.)	Ø15.88 (5/8")						
	Connection type	-	Screwed connection						
Space heating	Shut-off valves	mm (in.)		G 1" (male) - G 1" (male)					
pipes connection	Inlet pipe diameter	mm (in.)		G 1" (female)					
	Outlet pipe diameter	mm (in.)		G 1" (female)					
	Connection type	-		Screwed connection					
DHW pipes connection	Inlet pipe diameter	mm (in.)		G 3/4" (male)					
Connection	Outlet pipe diameter	mm (in.)		G 3/4" (male)					
	Outdoor ambient temperature	°C (WB)		-20~25					
Working range (Heating)	Indoor ambient temperature	°C (WB)		5~30					
	Outlet water temperature	°C		20~60					
	Outdoor ambient temperature	°C (DB)		10~46					
Working range (Cooling)	Indoor ambient temperature	°C (DB) 5~30							
	Outlet water temperature	°C	C 5~22						
Working range	Outdoor ambient temperature °C (DB) -20~35								
Working range (DHW)	Indoor ambient temperature	°C (DB)		5~30					
	Tank water temperature	°C		30~75					

## RWD-(4.0-6.0)NW1E-220S(-K)

	Model		RWD-4.0NW1E- 220S(-K)	RWD-5.0NW1E- 220S(-K)	RWD-6.0NW1E- 220S(-K)				
Power supply		-	1~ 2	30V 50Hz / 3N~ 400V 5	0Hz				
Noise level (sound po	ower)	dB(A)		39					
Minimum water flow r	ate	m³/h	1.0	1.1	1.2				
Maximum water flow	rate	m³/h	2.7	2.8	2.8				
Cabinat	Material	-	Precoated galvanised steel						
Cabinet	Colour	-	Pure white (RAL 9010)						
	Height (with connections)	mm	1788 (1889)						
Unit dimensions	Width	mm	595						
	Depth	mm		598					
	Height	mm		2045					
Packaging dimensions	Width	mm		670					
diffictions	Depth	mm		656					
Packaging volume		m³		0.90					
Packaging materials		-		Wood - Carton - Plastic					
Net weight		kg	124	126	126				
Gross weight		kg	135 137 13						
	Connection type	-	Flare nut connection						
Refrigerant pipes connection	Liquid pipe diameter	mm (in.)	Ø9.52 (3/8")						
	Gas pipe diameter	mm (in.)	Ø15.88 (5/8")						
	Connection type	-		Screwed connection					
Space heating pipes	Shut-off valves	mm (in.)	(	G 1" (male) - G 1" (male)					
connection	Inlet pipe diameter	mm (in.)		G 1" (female)					
	Outlet pipe diameter	mm (in.)		G 1" (female)					
	Connection type	-		Screwed connection					
DHW pipes	Inlet pipe diameter	mm (in.)		G 3/4" (male)					
connection	Outlet pipe diameter	mm (in.)		G 3/4" (male)					
	Outdoor ambient temperature	°C (WB)		-25~25					
Working range (Heating)	Indoor ambient temperature	°C (WB)		5~30					
	Outlet water temperature	°C		20~60					
Madin a na	Outdoor ambient temperature	°C (DB)		10~46					
Working range (Cooling)	Indoor ambient temperature	°C (DB)	5~30						
Outlet water temperature		°C	5~22						
Morking ross	Outdoor ambient temperature	°C (DB)		-25~35					
Working range (DHW)	Indoor ambient temperature	°C (DB)		5~30					
	Tank water temperature	°C		30~75					

## 2.4.4 Domestic Hot Water Tank

		Model		DHWT-200S-3.0H2E	DHWT-300S-3.0H2E
0	Color			Wh	ite
Casing	Material			Polypropyle	ene jacked
		Height	mm	1300	1880
	Packing	Width	mm	600	600
Dimanaiana		Depth	mm	600	600
Dimensions		Height	mm	1270	1750
	Unit	Width	mm	595	595
		Depth	mm	595	595
Weight	Unit		kg	53	63
veignt	Packed unit		kg	63.5	73
	Material			EF	PS
Packing	Material			CAR	TON
	Weight		kg	10.5	11
		Water volume	L	194	282
		Material		Stainles	s Steel
		Max tank temperature	°C	75	75
Main components	Tank	Max tank water pressure	bar	10	10
Main componente	Tarik	Maximum heating coil water working temperature	°C	99	99
		Maximum heating coil water working pressure	bar	10	10
		Material		Polyure	ethane
Tank	Insulation	Heat loss (*)	kW·h/day	1.128	1.512
		Min thickness	mm	50	50
	Heat	Quantity		1	1
	exchanger	Coil surface area	m²	1.4	1.8
Main components	Booster	Quantity		1	1
	heater	Heater rating	kW	3	3
	Туре	·		Immersion	heater type
	Water inlet	domestic connection	inches	³⁄₄ (fe	male)
	Water outle	t domestic connection	inches	³/₄ (fe	male)
Piping connections	Recirculatio	n	inches	³⁄₄ (fe	male)
	In coil conn	ection	inches	³⁄₄ (fe	male)
	Out coil con	nection	inches	³⁄₄ (fe	male)
Thermometer				Υє	es
Mechanical thermo	stat (security)			Y€	es
Protection				-	



(\*): Heat loss according to EN-12897:2007

## 2.5 Component data (Preliminary data)

## 2.5.1 Split system - Outdoor unit

## RAS-(2-3)WHVRP1

	MODEL		RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1		
	Туре		1	Multi-pass cross-finned tube	е		
	Pipe material			Copper			
	Outer diameter	mm		8			
	Rows			2			
Air heat	Number of tubes in the heat exc	hanger		44			
exchanger	Fin material			Aluminium			
	Fin pitch			1.45			
	Maximum operating pressure	MPa		4.15			
	Total front area	m²		0.47			
	Number of heat exchanger per u	unit		1			
	Fan type			Direct drive propeller fan			
	Fans per unit		1				
Fan	Outer diameter	mm		449			
	Revolutions	rpm	7	90	970		
	Nominal air flow	m³/min	4	5.9	57		
	Shell			Drip-proof type enclosure			
	Starting			Direct current control			
Motor	Power	W		40			
	Quantity			1			
	Insulation class			E			
	Model		EX1°	18HF1	GTD163UK QA8LTH		
Compressor	Oil Type			ACS68R			
	Quantity (I)			0.75			

## RAS-(4-10)WH(V)NPE

	MODEL		RAS-4WH(V) NPE	RAS-5WH(V) NPE	RAS-6WH(V) NPE	RAS- 8WHNPE	RAS- 10WHNPE			
	Туре			Multi-pa	ass cross-finned	tube				
	Pipe material				Copper					
	Outer diameter	mm			7					
	Rows			2		3	3			
Air heat	Number of tubes in the heat exchanger			132		19	98			
exchanger	Fin material				Aluminium					
	Fin pitch				1.4	an 586 / 717   644 / 78 127   134				
	Maximum operating pressure	MPa			4.15					
	Total front area	m <sup>2</sup>			1.35					
	Number of heat exchanger p	er unit	1							
	Fan type			Direc	t drive propeller	fan				
	Fans per unit				2					
Fan	Outer diameter	mm			544					
	Revolutions	rpm	459 / 376	516 / 422	573 / 469	586 / 717	644 / 787			
	Nominal air flow	m³/min	80	90	100	127	134			
	Shell			Drip-p	proof type enclos	ure				
	Starting			Dire	ect current contro	ol				
Motor	Power	W		100 + 100		138 +	- 138			
	Quantity				2					
	Insulation class				Е					
	Model E402HHD-36A2 (1~) / E402HHD-36D2 (3N~) DA50PHD-D1SE2 D1S									
Compressor	Oil Type		FVC68D							
	Quantity (I)			0.90		1.9	90			

Component data (Preliminary data)

## 2.5.2 Split system - Indoor unit

## 2.5.2.1 YUTAKI S

Node    RWM-   RWM- RWM-   RWM- RWM-   RWM							RWM- 10.0N1E					
e	Туре		-				Braze	d plate				
ang	Material		-				Stainle	ss steel				
xch	Transfer fluids		-		R32 - H <sub>2</sub> O			ı	R410A - H <sub>2</sub> 0	)		
ate	Quantity		-			Brazed plate Stainless steel - H <sub>2</sub> O			1			
rhe	Internal refrige		L	1							3.91	
ate	Internal water	volume	L	0.57	0.76	0.84			2.18	3.28	4.00	
>	Insulation mate	erial	-				NBR ·	+ PVC		LIDMLOF	0.05.405	
	Model		-	UPM3 K	15-75 130 <i>A</i>	AZA 6 HIT	UPM3L K	15-75 130	AZA 6 HIT			
	Туре		-				Inve	erter				
	Control		-				PV	VM				
ф	Power supply		-				1~ 230	V 50Hz				
dund	Maximum lift p	ressure	mwp		·							
Water	Maximum water	er flow	m³/h									
W	Maximum pow	er input	W		60			75		1-	40	
		Water inlet	(in.)			G 1" G 1-1/2"						
	Piping	Water outlet	(in.)								-1/2"	
		Inlet/outlet distance	mm								80	
پ	Material		-									
ate	Power supply		-			1~ 23	30V 50Hz -	3N~ 400V	50Hz			
Water electric heater	Maximum elect		kW		3.0			6.0		9.0		
elec.	Regulated electronic power (step 1/ step 1/ st		kW	,	1.0 / 2.0 / 3.	0	2	2.0 / 4.0 / 6.	0	3.0 / 6	.0 / 9.0	
Vater	Capillary therm	nostat	-				Yes (Cut-	out: 90 °C)				
>	Surface thermo	ostat	-		Ма	nual reset,	Non-adjusta	ble (one pe	r unit) 75°C:	±5%		
se	Material		-		S	teel (with st	ainless/galv	anized stee	I connection	ıs)		
Expansion vessel	Internal volume	е	L			6	.0			10	0.0	
nsio	Working pressi	ure	bar				3	.0				
Expa	Pre-loading pre (Air side)	essure	bar				1	.0				
7	Туре		-			Isola	ted water st	rainer (Filte	r ball)			
strainer	Material		-				Bra	ass				
	Piping connect	ion	(in.)			Inle	t: 1" DN32;	Outlet: 1" D	N32			
Water	Mesh (hole size	e)	mm				0	.7				
	Self-cleaning fi	Iter	-	- Yes								
Sa	fety valve		-	` '								
Wa	iter pressure se	nsor	-	- Yes (from 0,5 bar up to 3 bar)								
Sh	ut-off valve		-	- Yes (2 factory-supplied valves)								
_	purger		-	- Yes (x2)								
	nometer		-	Yes								
-	it controller		-					ARFH2E)				

Component data (Preliminary data)

## 2.5.2.2 YUTAKI S COMBI

## ♦ Standard model and UK market model

		Model		RWD- 2.0RW1E- 220S(-K)	RWD- 2.5RW1E- 220S(-K)	RWD- 3.0RW1E- 220S(-K)	RWD- 4.0NW1E- 220S(-K)	RWD- 5.0NW1E- 220S(-K)	RWD- 6.0NW1E- 220S(-K)		
	Casing material					Stainles	s steel				
		Nominal water volume	L			22	0				
		Net water volume	L			21	5				
		Material	-	Duplex UNS 32205 (1.4462)							
	Tank	Max. water temperature	°C		75						
	Torne	Max. water pressure	bar			10	)				
er tank		Max. heating coil water temperature  Max. heating coil water pressure				7	5				
Domestic hot water tank						3					
ic h	Tank in sulation	Fank insulation Material				Neo	por				
nest	rank insulation	Thickness				50	)				
Dor		Quantity	-			1					
	Heat exchanger	Coil surface area	m <sup>2</sup>			1.6	60				
	exonanger	Internal coil volume	L			7.	2				
		Quantity	-			1					
	Tank's heater	Туре	-			Immersion I	neater type				
		kW			2.	7					
	Mechanical ther (adjustable and	-		Yes (adj	ustable 28~8	80°C ; cut-o∟	ıt: 95°C)				
_	Туре		-			Brazeo	l plate				
Water heat exchanger	Material		-			Stainles	s steel				
xcha	Transfer fluids		-		R32 - H <sub>2</sub> O			R410A - H <sub>2</sub> 0	0		
at e	Quantity		-			1					
r he	Internal refrigera	ant volume	L	0.54	0.73	0.81	1.55	2.09	2.09		
Vate	Internal volume		L	0.57	0.76	0.84	1.64	2.18	2.18		
>	Insulation mater	ial	-			NBR +	PVC				
	Model		-	UPM3 K	15-75 130 A	ZA 6 HIT	UPM3L k	< 15-75 130	AZA 6 HIT		
	Туре		-			Inve	rter				
	Control		-			PW	/M				
dμ	Power supply		-			1~ 230\	/ 50Hz				
ınd .	Maximum lift pre	essure	mwp		7.5			7.5			
Water pump	Maximum water	flow	m³/h		4.0			3.8			
>	Maximum power		W		60			75			
		Water inlet	(in.)			G					
	Piping	Water outlet	(in.)			G					
		Inlet/outlet distance	mm			13					
_	Material		-		Stainless	steel (Immer		element)			
Water electric heater	Power supply		-			1~ 230V 3N~ 400					
ctric	Maximum electr	ic heater power	kW		3.0			6.0			
ele.	Capillary thermo	estat		M	lanual reset, l	Non-adjustat	ole (one per	unit) 75°C±5	5%		
Water	Regulated electristep 2/ step 3)	ric heater power (step 1/	kW		1.0/2.0/3.0			2.0/4.0/6.0			
	Thermostat secu	urity	-			Yes (Cut-o	ut: 90 °C)				

	Model		RWD- 2.0RW1E-	RWD- 2.5RW1E-	RWD-	RWD-	RWD-	RWD- 6.0NW1E-			
	Wodel		220S(-K)								
	Material	-		Steel (with stainless/galvanized steel connections)							
sion el	Internal volume	L			6.0	0					
Expansion vessel	Working pressure	bar			3.0	0					
<u> </u>	Pre-loading pressure (Air side)	bar		1.0							
_	Туре	-	Isolated water strainer (Filter ball)								
Water strainer	Material	-			Bra	ss					
r str	Piping connection	(in.)	Inlet: Quick connections; Outlet: 1" DN32								
/ate	Mesh (hole size)	mm	0.7								
>	Self-cleaning (with back flush) filter	-	Yes								
DHW	T Pressure and temperature	bar	7								
relief	valve (1)	°C			96	3					
Safe	y valve	-			Yes (3	bar)					
Wate	r pressure sensor	-		Ye	s (from 0,5 b	ar up to 3 ba	ar)				
Unit	drain port	-			Ye	s					
DHW	drain valve	-			Ye	s					
Shut	off valve	-	Yes (2 factory-supplied valves)								
Air p	urger	Yes (x2)									
Man	ometer	-	Yes								
Unit	controller	-			Yes (PC-A	RFH2E)					

(1) Only for UK version.

#### 2.6 Electrical data

#### 2.6.1 Considerations

Key words:

- · U: Power supply.
- PH: Phase.
- · IPT: Total input power.
- STC: Starting current: Less than maximum current.
- · RNC: Running current.
- MC: Maximum current.



- Heating conditions: Inlet/outlet water temperature: 30/35 °C; Outdoor ambient temperature (DB/WB): 7/6 °C
- The compressor data shown in the tables below are based on a combined capacity of 100% of the power supplied.
- The "Maximum current" shown in the above table is the maximum total unit running current at the following conditions:
  - Supply voltage: 90% of the rated voltage.
  - Unit capacity: 100% at maximum operating conditions.
- The power supply cables must be sized to cover this maximum current value.
- Specifications in these tables are subject to change without notice in order that Hitachi may bring the latest innovations to their customers.

#### 2.6.2 Split system - Outdoor unit

### RAS-(2-3)WHVRP1 / RAS-(4-10)WH(V)NPE in combination with YUTAKI S, YUTAKI S COMBI

		Applicable voltage			Compi	ressor and	fan motors			Mari				
Model	Power supply	Аррисаві	ie voitage		Coo	Cooling		ting	MC	Max. IPT				
		U max. (V)	U min. (V)	STC (A)	RNC (A)	IPT (KW)	RNC (A)	IPT (KW)	(A)	(kW)				
RAS-2WHVRP1					4.5	1.00	5.0	1.09	10.4	2.27				
RAS-2.5WHVRP1					5.0	1.12	5.5	1.19	12.9	2.82				
RAS-3WHVRP1	1~ 230V 50Hz	253	207		7.6	1.67	8.1	1.79	15.8	3.49				
RAS-4WHVNPE	1~ 230V 50H2	200	9.2 2.11 9.3 2.12 12.6 2.87 12.7 2.90 - 16.0 3.65 15.0 3.43	2.12	30	6.93								
RAS-5WHVNPE				30	6.93									
RAS-6WHVNPE				30	6.93									
RAS-4WHNPE					3.4	2.11	3.4	2.12	14	8.70				
RAS-5WHNPE					4.6	2.87	4.6	2.90	14	8.70				
RAS-6WHNPE	3N~ 400V 50Hz	440	360		5.8	3.65	5.5	3.43	16	9.95				
RAS-8WHNPE									7.1	4.41	7.3	4.58	24	15.00
RAS-10WHNPE					9.8	6.15	8.8	5.51	24	15.00				

## 2.6.3 Split system - Indoor unit

## 2.6.3.1 YUTAKI S

## RWM-(2.0-10.0)(N/R)1E

Model	Power		cable	Operation mode	RNC	IPT	MC	Max.
Model	supply	U max. (V)	U min. (V)	Operation mode	(A)	(kW)	(A)	(kW)
				Without electric heater	0.5	0.06	0.63	0.06
	1~ 230V	253	207	With electric heater	13.7	3.06	13.7	3.06
	50Hz	255	207	With DHW tank heater	13.7	3.06	13.7	3.06
RWM-2.0R1E				With electric and DHW tank heaters	26.7	6.06	26.7	6.06
RVVIVI-2.UR IE				Without electric heater	0.5	0.06	0.6	0.06
	3N~ 400V	440	360	With electric heater	4.8	3.06	5.0	3.06
	50Hz	440	360	With DHW tank heater	4.5	3.06	13.7	3.06
				With electric and DHW tank heaters	8.9	6.06	18.0	6.06
				Without electric heater	0.6	0.06	0.6	0.06
	1~ 230V	253	207	With electric heater	13.7	3.06	13.7	3.06
	50Hz	200	201	With DHW tank heater	13.7	3.06	13.7	3.06
RWM-(2.5-3.0)R1E				With electric and DHW tank heaters	26.7	6.06	26.7	6.06
110000000000000000000000000000000000000				Without electric heater	0.6	0.06	0.6	0.06
	3N~ 400V	440	360	With electric heater	4.8	3.06	5.0	3.06
	50Hz	440	360	With DHW tank heater	4.5	3.06	13.7	3.06
				With electric and DHW tank heaters	8.9	6.06	18.0	6.06
				Without electric heater	0.6	0.08	0.7	0.08
	1~ 230V	252	207	With electric heater	26.7	6.08	26.7	6.08
	50Hz	253	207	With DHW tank heater	13.7	3.08	13.7	3.08
DWW (4.0.6.0)N4E				With electric and DHW tank heaters	39.8	9.08	39.8	9.08
RWM-(4.0-6.0)N1E				Without electric heater	0.6	0.08	0.7	0.08
	3N~ 400V	440	200	With electric heater	9.1	6.08	9.3	6.08
	50Hz	440	360	With DHW tank heater	4.5	3.08	13.7	3.08
				With electric and DHW tank heaters	13.3	9.08	22.4	9.08
				Without electric heater	0.3	0.08	0.6	0.14
DWM (0.0.40.0)N45	3N~ 400V	440	200	With electric heater	13.1	9.08	13.6	9.14
RWM-(8.0-10.0)N1E	50Hz	440	360	With DHW tank heater	4.4	3.08	13.7	3.14
				With electric and DHW tank heaters	17.4	12.08	26.6	12.14



The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300) S-3.0H2E".

## 2.6.3.2 YUTAKI S COMBI

## RWD-(2.0-6.0)(N/R)W1E-220S(-K)

Model	Power		cable age	Operation mode	RNC	IPT	MC	Max.
Model	supply	U max. (V)	U min. (V)	Vith electric heater       13.7       3.06         Vith DHW tank heater       12.6       2.81         Vith electric and DHW tank heaters       25.6       5.81         Vithout electric heater       0.5       0.06         Vith electric heater       8.7       3.06         Vith DHW tank heater       12.5       2.81         Vith electric and DHW tank heaters       12.5       5.81         Vithout electric heater       0.6       0.06         Vith electric heater       13.7       3.06         Vith DHW tank heater       12.6       2.81		(A)	(kW)	
				Without electric heater	0.5	0.06	0.63	0.06
	1~ 230V	253	207	With electric heater	13.7	3.06	13.7	3.06
	50Hz	255	207	With DHW tank heater	12.6	2.81	12.6	2.81
RWD-2.0RW1E-				With electric and DHW tank heaters	25.6	5.81	25.6	5.81
220S(-K)				Without electric heater	0.5	0.06	0.63	0.06
	3N~ 400V	440	360	With electric heater	8.7	3.06	9.3	3.06
	50Hz	440	300	With DHW tank heater	12.5	2.81	12.6	2.81
				With electric and DHW tank heaters	12.5	5.81	12.6	5.81
				Without electric heater	0.6	0.06	0.63	0.06
	1~ 230V	253	207	With electric heater	13.7	3.06	13.7	3.06
	50Hz	255	207	With DHW tank heater	12.6	2.81	12.6	2.81
RWD-(2.5-3.0)RW1E-				With electric and DHW tank heaters	25.6	5.81	25.6	5.81
220S(-K)				Without electric heater	0.6	0.06	0.63	0.06
	3N~ 400V	440	360	With electric heater	8.7	3.06	9.3	3.06
	50Hz	440	360	With DHW tank heater	12.5	2.81	12.6	2.81
				With electric and DHW tank heaters	12.5	5.81	12.6	5.81
				Without electric heater	0.6	0.08	0.65	0.08
	1~ 230V	253	207	With electric heater	26.7	6.08	26.7	6.08
	50Hz	255	207	With DHW tank heater	12.6	2.83	12.6	2.83
RWD-(4.0-6.0)NW1E-				With electric and DHW tank heaters	38.7	8.83	38.7	8.83
220S(-K)				Without electric heater	0.6	0.08	0.65	0.08
	3N~ 400V	440	360	With electric heater	17.4	6.08	18.0	6.08
	50Hz	440	360	With DHW tank heater	12.6	2.83	12.6	2.83
				With electric and DHW tank heaters	17.4	8.83	18.0	8.83

# Capacity and selection data

## Index

3.1	YUTAKI S	.60
	3.1.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)	60
	3.1.2 Maximum heating capacity table (kW) (Integrated) (High Huimidity condition) (Only for RAS-(2-3)WHVRI outdoor combination models)	
	3.1.3 Maximum cooling capacity table (kW)	63
3.2	YUTAKI S COMBI	.65
	3.2.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)	65
	3.2.2 Maximum heating capacity table (kW) (Integrated) (High Huimidity condition) (Only for RAS-(2-3)WHVRI outdoor combination models)	
	3.2.3 Maximum cooling capacity table (kW)	67
3.3	Correction factors	.68
	3.3.1 Piping length correction factor	68
	3.3.2. Correction factor depending on the altitude	71



## 3.1 YUTAKI S

## 3.1.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)

_	Water								Amb	ient t	empe	eratur	e (°C	WB)							
System	outlet	-2	-20		-15		-10		7	-2		2	2	7		12		15		2	0
Sys	temp (°C)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)									
	60	-	-	-	-	-	-	3.20	2.29	3.64	2.25	4.00	2.22	5.00	2.17	5.50	1.77	5.66	1.71	5.93	1.61
	55	-	-	-	-	4.00	2.42	4.20	2.27	4.48	2.25	4.70	2.24	6.00	2.22	6.30	1.80	6.46	1.68	6.73	1.48
Σ	50	-	-	-	-	4.36	2.32	4.60	2.22	4.85	2.13	5.05	2.05	6.15	2.01	6.65	1.71	6.85	1.61	7.17	1.43
VRF R1E	45	4.00	2.35	4.25	2.30	4.72	2.22	5.00	2.17	5.22	2.00	5.40	1.86	6.30	1.80	7.00	1.63	7.23	1.54	7.62	1.38
WH +	40	4.15	2.34	4.54	2.24	4.93	2.14	5.17	2.08	5.32	1.86	5.45	1.70	6.40	1.59	7.25	1.48	7.48	1.42	7.87	1.31
RAS-2WHVRP1 + RWM-2.0R1E	35	4.30	2.32	4.50	2.14	5.02	2.04	5.33	1.98	5.42	1.73	5.49	1.53	6.50	1.38	7.50	1.34	7.73	1.30	8.12	1.24
§ ≈	30	4.50	2.23	4.80	2.09	5.31	1.93	5.62	1.83	5.69	1.65	5.75	1.50	6.70	1.34	7.75	1.30	7.98	1.27	8.37	1.20
	25	4.70	2.14	5.10	2.04	5.60	1.82	5.90	1.68	5.95	1.56	6.00	1.46	6.90	1.30	8.00	1.27	8.23	1.23	8.62	1.16
	20	4.90	2.04	5.40	1.99	5.89	1.71	6.18	1.54	6.22	1.48	6.25	1.43	7.10	1.26	8.25	1.24	8.48	1.19	8.87	1.12
	60	-	-	-	-	-	-	4.00	3.33	4.72	3.27	5.30	3.21	6.20	2.58	6.50	2.24	6.66	2.25	6.93	2.27
	55	-	-	-	-	4.70	3.13	5.00	2.94	5.44	2.81	5.80	2.70	7.00	2.64	7.50	2.42	7.73	2.34	8.12	2.21
3P1 E	50	-	-	-	-	5.10	2.97	5.40	2.85	5.90	2.74	6.30	2.66	7.48	2.60	8.00	2.27	8.31	2.22	8.83	2.14
	45	4.60	2.86	5.00	2.86	5.50	2.80	5.80	2.76	6.36	2.68	6.80	2.62	7.97	2.57	8.50	2.12	8.62	2.01	8.81	1.82
.5W + 1-2.4	40	4.80	2.77	5.27	2.77	5.73	2.71	6.01	2.67	6.51	2.54	6.90	2.44	8.28	2.28	8.85	1.95	9.00	1.84	9.25	1.66
4S-2.5WHVI + RWM-2.5R1	35	5.00	2.77	5.40	2.77	5.92	2.65	6.23	2.58	6.66	2.40	7.00	2.26	8.60	2.00	9.20	1.77	9.39	1.67	9.70	1.50
8	30	5.25	2.72	5.70	2.72	6.12	2.53	6.36	2.41	6.82	2.25	7.18	2.12	8.85	1.93	9.50	1.67	9.63	1.59	9.84	1.44
	25	5.50	2.67	6.00	2.67	6.31	2.40	6.50	2.24	6.97	2.10	7.35	1.99	9.10	1.86	9.80	1.58	9.87	1.50	9.98	1.38
	20	5.75	2.57	6.30	2.57	6.51	2.32	6.63	2.17	7.13	2.00	7.52	1.87	9.35	1.79	10.10	1.49	10.11	1.42	10.13	1.31
	60	-	-	-	-	-	-	5.10	3.64	5.77	3.46	6.31	3.32	7.50	3.21	8.00	2.76	8.12	2.73	8.31	2.70
	55	-	-	-	-	5.30	3.53	5.50	3.44	6.42	3.42	7.15	3.40	9.00	3.30	9.80	3.11	9.85	3.07	9.92	3.01
<u>г</u> п	50	-	-	-	-	5.80	3.39	6.08	3.31	6.83	3.24	7.43	3.18	9.15	3.08	9.90		10.03		10.24	2.83
RAS-3WHVRP1 + RWM-3.0R1E	45	5.25	3.39	5.70	3.35	6.30	3.24	6.67	3.18	7.24	3.06	7.70	2.96	9.30		10.00		10.21		10.55	
3WI + M-3.	40	5.63	3.36	6.19	3.27	6.75	3.17	7.08	3.12	7.64	2.96	8.09		10.15		10.75		10.88		11.09	
AS-	35	6.00	3.33	6.25	3.29	7.03	3.14	7.50	3.06	8.04	2.85	8.47		10.99		11.50		11.55		11.62	
œ	30	6.25	3.29	6.52	3.23	7.23	3.08	7.65	3.00	8.36	2.77	8.94				11.65				11.77	
	25	6.50	3.25	6.80	3.16	7.42	3.02	7.80	2.94	8.69	2.68	9.40		11.30		11.80				11.92	
	20	6.75	3.21	7.08	3.10	7.62	2.97	7.94	2.88	9.09		10.00								12.43	-
	60	-	-	-	-	6.50						7.00									
	55	-	-	-	-	7.20	4.30	9.70			_	10.50									
NP 1	50	7.00	- 4.00	7.50	4.17	7.79	3.95	9.87				10.90									
RAS-4WH(V)NPE + RWM-4.0N1E	45	7.20	4.03	8.28	4.05	9.35						11.50									
W4 4 M/	35	9.00	4.16	9.62	4.12	9.80						11.80 12.80				16.00		16.25		17.25	
RAS.	30	10.00		10.77								13.30									
œ	25	11.64		12.16								13.58						17.54		18.44	
	20			13.56		13.84															
	60	-	-	-	-	7.47		8.19		8.16						11.40				14.00	-
	55	-	_	-	-	9.22						12.96								16.70	
ш	50	-	-	9.30	6.00	9.99						13.27									
JNF 11E	45	8.10	4.54	9.43	4.90	10.76						13.59								18.00	
4S-5WH(V)NF + RWM-5.0N1E	40	8.90	4.61	10.02								13.75								18.50	
-5W	35	9.70			4.71				_											18.80	
RAS-5WH(V)NPE + RWM-5.0N1E	30		4.74	11.28								14.10									
	25			12.25																	
	20			13.22																	
						55												1.55			

_	\	<b>Nater</b>								Amb	ient t	empe	ratur	e (°C	WB)							
System	0	outlet	-2	.0	-15		-10		-7	7	-2	2	2	2	7	7	12		15		20	
Sy	'	temp (°C)	CAP (kW)	IPT (kW)	CAP (kW)		CAP (kW)	IPT (kW)	CAP (kW)													
		60	-	-	-	-	7.80	5.57	8.30	5.72	9.02	5.35	9.60	5.05	12.00	5.71	12.10	5.50	13.00	5.75	15.00	6.37
		55	-	-	-	-	10.38	7.39	12.00	7.18	12.96	7.09	13.96	7.16	17.00	7.13	17.20	6.14	17.30	5.98	17.40	5.70
		50	-	-	10.1	6.97	10.77	6.39	11.83	6.32	12.98	6.19	13.90	6.09	17.10	6.19	17.30	5.92	17.50	5.77	18.00	5.56
RAS-6WH(V)NPE + RWM-6.0N1E		45	9.00	4.86	10.32	5.34	11.63	5.81	12.50	6.13	13.56	5.68	14.48	5.36	17.30	5.33	17.50	4.49	18.00	4.14	18.60	3.51
WH( + 1-6.0		40	9.55	5.12	10.75	5.33	11.95	5.54	12.67	5.66	13.81	5.31	14.73	5.02	17.55	4.69	18.10	4.12	18.30	3.76	19.00	3.24
S-6		35	10.10	5.37	11.18	5.32	12.27	5.26	13.00	5.27	14.06	4.93	15.00	4.69	17.80	4.05	18.20	3.64	18.60	3.54	19.60	3.43
₹ E		30	10.71	4.56	12.57	4.84	13.99	4.93	14.83	4.99	15.12	4.72	15.35	4.51	18.10	3.77	18.60	3.15	19.10	3.14	20.00	3.13
		25	11.30	4.48	12.83	4.63	14.02	4.64	14.73	4.65	15.18	4.47	15.54	4.33	18.50	3.78	19.90	3.37	20.50	3.27	21.00	3.05
		20	12.13	4.48	13.09	4.42	14.05	4.36	14.63	4.32	15.24	4.22	15.72	4.15	18.90	3.78	20.90	3.54	21.10	3.31	22.00	3.04
		60	-	-	-	-	11.92	9.47	13.14	9.00	14.98	9.45	16.45	9.81	21.15	12.41	22.00	10.61	22.50	8.56	23.50	5.60
		55	-	-	-	-	12.79	8.88	14.50	9.67	15.30	8.15	15.95	6.93	24.00	9.60	24.50	9.07	24.80	8.37	25.10	7.13
ш ,,,		50	-	-	12.0	8.60	13.65	8.28	15.70	9.58	16.75	8.97	17.58	8.48	24.01	10.45	24.90	9.31	25.50	7.83	26.10	5.59
RAS-8WHNPE + RWM-8.0N1E		45	10.28	7.73	12.71	8.12	15.14	8.51	16.60	8.74	17.66	7.69	18.50	6.85	25.00	7.94	26.00	7.65	26.50	6.97	26.90	5.85
3WF + -8.0		40	12.20	8.54	13.31	7.82	15.77	8.04	17.24	8.17	18.36	7.39	19.25	6.76	25.25	7.41	26.30	6.98	26.90	6.76	27.10	6.25
AS-8		35	14.00	9.15	14.50	7.84	16.39	7.57	17.90	7.61	19.06	7.08	20.00	6.67	25.50	6.89	26.50	6.31	27.10	6.00	27.90	5.53
S &		30	14.80	8.60	14.27	7.12	16.97	7.51	18.58	7.74	19.38	6.80	20.02	6.04	26.50	6.97	27.00	6.28	27.60	6.02	28.10	5.53
		25	15.90	7.81	16.20	7.19	17.22	7.12	19.11	7.66	19.96	6.78	20.64	6.07	27.10	6.95	27.50	6.11	28.00	5.78	28.50	5.23
		20	16.00	6.22	16.50	6.38	17.47	6.74	19.64	7.57	20.55	6.76	21.27	6.11	27.70	6.92	28.00	5.95	28.50	5.57	29.00	4.97
		60	-	-	-	-	13.90	10.69	14.50	8.06	16.17	8.44	17.50	8.75	22.00	9.57	23.50	11.19	24.30	9.17	25.00	5.79
		55	-	-	-	-	15.76	13.87	17.30	12.36	18.61	10.71	19.50	9.29	25.52	10.65	26.00	10.83	26.50	9.58	27.20	7.42
ш ш		50	-	-	15.5	12.9	16.37	12.80	18.36	12.84	18.97	10.35	19.46	8.35	28.05	10.64	28.60	10.51	29.00	9.41	29.90	7.63
RAS-10WHNPE + RWM-10.0N1E		45	13.00	8.67	14.81	9.52	17.12	10.71	18.50	11.42	19.89	9.24	21.00	7.50	32.00	10.67	33.00	10.64	33.20	9.78	33.60	8.40
0.01		40	14.20	9.17	15.44	9.10	18.13	9.96	19.74	10.48	20.36	9.04	20.85	7.89	32.00	9.54	33.50	9.47	33.50	9.18	33.80	8.80
NM-		35	15.10	9.44	16.07	8.67	18.50	8.90	21.00	9.55	21.00	8.91	21.70	8.68	32.00	8.42	34.00	8.29	34.70	8.25	34.90	7.97
R R		30	15.70	8.72	16.01	7.60	18.70	7.91	21.63	8.66	22.95	8.79	24.00	8.89	33.20	8.85	34.30	7.98	35.00	7.99	35.10	7.78
		25	16.40	8.63	16.35	7.41	18.80	7.63	22.03	8.48	23.74	8.90	25.11	9.24	33.50	8.70	34.50	6.90	35.80	7.02	36.20	6.88
		20	17.00	8.47	17.50	7.56	19.00	7.39	22.43	8.30	24.54	9.02	26.00	9.52	33.00	8.35	35.00	6.00	36.10	6.10	37.00	6.14

## i NOTE

- CAP: Capacity at compressor maximum frequency. Capacity is valid for difference between water inlet and water outlet of 3-8°C.
- IPT: Total input power.

The table above shows the input power (IPT) at maximum capacity (CAP). Most of the time, the unit will run at partial load, so that the actual input power will be lower.

YUTAKI S



# ${\bf 3.1.2~Maximum~heating~capacity~table~(kW)~(Integrated)~(High~Huimidity~condition)~(Only~for~RAS-(2-3)WHVRP1~outdoor~combination~models)}$

		Water									Amb	ient 1	empe	eratur	e (°C	WB)								
Svefem		outlet	-2	20	-1	5	-1	0	-	7	-:	2	2	2	7	7	1	2	1	5	2	0	2	5
S	Ś	temp (°C)	CAP (kW)	IPT (kW)																				
		60	-	-	-	-	-	-	2.61	1.99	3.20	2.03	3.68	2.07	4.50	2.04	5.50	1.77	5.66	1.71	5.93	1.61	6.20	1.51
		55	-	-	-	-	3.70	2.24	3.73	2.02	4.09	2.08	4.38	2.13	5.70	2.22	6.30	1.80	6.46	1.68	6.73	1.48	7.00	1.27
7	Ш	50	-	-	-	-	3.80	2.08	3.97	1.97	4.34	1.95	4.64	1.94	5.84	2.01	6.65	1.71	6.85	1.61	7.17	1.43	7.50	1.25
N/S		45	3.26	1.96	3.41	1.91	3.91	1.92	4.21	1.92	4.60	1.83	4.91	1.75	5.99	1.80	7.00	1.63	7.23	1.54	7.62	1.38	8.00	1.23
¥	1-2.0	40	3.52	2.00	3.91	1.96	4.30	1.93	4.53	1.90	4.85	1.77	5.11	1.66	5.98	1.61	7.25	1.48	7.48	1.42	7.87	1.31	8.25	1.21
RAS-2WHVRP1	RWM-2.0R1	35	3.78	2.04	3.90	1.94	4.50	1.91	4.85	1.89	5.10	1.71	5.30	1.56	5.98	1.43	7.50	1.34	7.73	1.30	8.12	1.24	8.50	1.18
2	Œ	30	3.95	1.94	4.16	1.86	4.67	1.77	4.97	1.72	5.35	1.63	5.65	1.56	6.16	1.34	7.75	1.30	7.98	1.27	8.37	1.20	8.75	1.14
		25	4.13	1.84	4.43	1.79	4.84	1.64	5.09	1.55	5.60	1.55	6.00	1.55	6.35	1.25	8.00	1.27	8.23	1.23	8.62	1.16	9.00	1.09
		20	4.30	1.73	4.69	1.71	5.01	1.51	5.21	1.38	5.84	1.47	6.35	1.54	6.53	1.16	8.25	1.24	8.48	1.19	8.87	1.12	9.25	1.05
		60	-	-	-	-	-	-	2.94	2.61	3.68	2.70	4.26	2.77	5.27	2.20	6.50	2.24	6.66	2.25	6.93	2.27	7.20	2.29
		55	-	-	-	-	3.68	2.37	4.00	2.35	4.52	2.41	4.93	2.46	6.51	2.41	7.50	2.42	7.73	2.34	8.12	2.21	8.50	2.07
P1	ш	50	-	-	-	-	4.02	2.36	4.35	2.35	4.94	2.32	5.40	2.30	6.77	2.34	8.00	2.27	8.74	2.26	9.96	2.25	8.75	1.85
H K	3R11	45	3.49	2.26	3.80	2.33	4.37	2.34	4.71	2.34	5.35	2.23	5.87	2.14	7.04	2.26	8.50	2.12	8.62	2.01	8.81	1.82	9.00	1.64
RAS-2.5WHVRP1	RWM-2.5R1	40	3.80	2.32	4.22	2.28	4.64	2.24	4.89	2.21	5.50	2.11	5.99	2.02	7.00	2.05	8.85	1.95	9.00	1.84	9.25	1.66	9.50	1.48
S-2.	N N	35	4.10	2.39	4.43	2.28	4.83	2.16	5.07	2.08	5.66	1.99	6.12	1.91	6.97	1.84	9.20	1.77	9.39	1.67	9.70	1.50	10.01	1.33
RA	Œ	30	4.31	2.33	4.68	2.24	4.94	2.05	5.09	1.94	5.81	1.88	6.39	1.84	7.18	1.76	9.50	1.67	9.63	1.59	9.84	1.44	10.05	1.29
		25	4.52	2.26	4.94	2.20	5.04	1.95	5.11	1.80	5.97	1.78	6.66	1.76	7.39	1.67	9.80	1.58	9.87	1.50	9.98	1.38	10.10	1.25
		20	4.73	2.15	5.19	2.11	5.15	1.89	5.13	1.76	6.13	1.73	6.93	1.71	7.60	1.59	10.10	1.49	10.11	1.42	10.13	1.31	10.15	1.20
		60	-	-	-	-	-	-	3.38	2.96	4.12	2.85	4.71	2.76	4.88	2.60	8.00	2.76	8.12	2.73	8.31	2.70	8.50	2.66
		55	-	-	-	-	4.15	3.14	4.40	3.14	5.18	3.01	5.80	2.90	7.50	2.78	9.80	3.11	9.85	3.07	9.92	3.01	10.00	2.94
7	ш	50	-	-	-	-	4.49	2.85	4.78	2.86	5.46	2.75	6.00	2.67	7.76	2.56	9.90	2.91	10.03	2.88	10.24	2.83	10.45	2.78
N N	)R11	45	3.99	2.85	4.27	2.52	4.83	2.55	5.16	2.57	5.74	2.50	6.20	2.44	8.01	2.35	10.00	2.70	10.21	2.68	10.55	2.66	10.90	2.63
RAS-3WHVRP1	RWM-3.0R1	40	4.27	2.73	4.76	2.63	5.24	2.52	5.53	2.46	6.07	2.41	6.50	2.38	8.52	2.39	10.75	2.60	10.88	2.59	11.09	2.56	11.30	2.53
-S-S	N/S	35	4.56	2.62	4.90	2.61	5.52	2.45	5.89	2.35	6.40	2.33	6.80	2.32	9.03	2.44	11.50	2.50	11.55	2.49	11.62	2.46	11.70	2.44
2	Ľ	30	4.75	2.58	5.10	2.55	5.56	2.39	5.84	2.29	6.66	2.30	7.31	2.30	9.14	2.34	11.65	2.32	11.70	2.30	11.77	2.26	11.85	2.22
		25	4.94	2.55	5.30	2.50	5.61	2.33	5.79	2.23	6.92	2.26	7.82	2.28	9.25	2.23	11.80	2.15	11.85	2.11	11.92	2.06	12.00	2.00
		20	5.13	2.52	5.51	2.44	5.65	2.27	5.74	2.17	8.11	2.30	10.00	2.40	11.50	2.40	12.00	2.00	12.16	1.97	12.43	1.92	12.70	1.87

# 3.1.3 Maximum cooling capacity table (kW)

								Ambien	it temp	erature	(°C DB	)					
System	Water outlet temperature	1	0	1	5	2	0	2	5	3	0	3	5	4	0	4	5
Sys	(°C)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)
	22	-	-	-	-	-	-	7.40	0.95	6.93	1.03	6.45	1.11	5.98	1.19	5.50	1.26
RP1 1=	18	-	-	-	-	7.50	0.88	7.10	0.97	6.80	1.08	6.40	1.21	5.75	1.27	5.10	1.32
VHV + 2.0R	15	7.00	0.97	6.92	0.99	6.83	1.00	6.75	1.01	6.27	1.10	5.79	1.19	5.31	1.29	4.83	1.38
RAS-2WHVRP1 + RWM-2.0R1E	10	6.80	0.97	6.58	1.01	6.37	1.04	6.15	1.08	5.71	1.17	5.26	1.27	4.82	1.37	4.37	1.47
RAS RV	7	6.20	0.98	6.10	1.03	6.00	1.07	5.80	1.12	5.40	1.23	5.00	1.33	4.55	1.43	4.10	1.52
	5	-	-	5.50	1.08	5.20	1.17	4.90	1.26	4.60	1.34	4.30	1.43	4.00	1.52	3.70	1.61
2	22	-	-	-	-	-	-	8.70	1.19	8.10	1.27	7.50	1.35	6.90	1.42	6.30	1.50
RAS-2.5WHVRP1 + RWM-2.5R1E	18	-	-	-	-	8.50	1.21	8.30	1.24	7.90	1.36	7.20	1.48	6.60	1.58	6.00	1.67
AS-2.5WHVRF + RWM-2.5R1E	15	8.10	1.25	8.03	1.26	7.96	1.27	7.89	1.28	7.35	1.39	6.81	1.50	6.27	1.61	5.73	1.72
3-2.5 WM	10	7.60	1.25	7.47	1.28	7.34	1.31	7.21	1.35	6.73	1.46	6.24	1.57	5.76	1.69	5.27	1.80
RAS	7	7.10	1.13	7.20	1.16	7.30	1.20	6.80	1.39	6.30	1.58	6.00	1.74	5.50	1.80	5.00	1.85
	5	-	-	6.80	1.36	6.43	1.49	6.07	1.62	5.70	1.75	5.33	1.88	4.97	2.01	4.60	2.14
_	22	-	-	-	-	-	-	10.50	1.67	9.90	1.73	9.30	1.80	8.70	1.86	8.10	1.93
RAS-3WHVRP1 + RWM-3.0R1E	18	-	-	-	-	10.60	1.64	10.20	1.71	9.50	1.84	9.00	1.94	8.00	1.98	7.00	2.03
WH +	15	9.50	1.40	9.52	1.54	9.53	1.68	9.55	1.82	8.84	1.90	8.14	1.98	7.43	2.06	6.73	2.14
S-3	10	8.80	1.44	8.68	1.63	8.57	1.81	8.45	2.00	7.91	2.08	7.36	2.17	6.82	2.25	6.27	2.33
A N	7	8.10	1.56	8.00	1.74	7.90	1.93	7.80	2.11	7.60	2.08	7.00	2.19	6.50	2.32	6.00	2.45
	5	-	-	8.00	1.74	7.68	1.86	7.35	1.99	7.03	2.11	6.70	2.23	6.15	2.45	5.60	2.67
Д	22	-	-	-	-	-	-	16.10	2.64	15.66	3.10	15.22	3.57	14.78	4.03	14.34	4.49
RAS-4WH(V)NPE + RWM-4.0N1E	18	-	-	-	-	17.00	2.93	16.10	2.85	15.50	3.60	15.00	4.00	14.35	4.45	13.70	4.89
VH()	15	16.00	2.71	15.77	2.79	15.54	2.87	15.31	2.95	14.65	3.45	13.99	3.95	13.33	4.45	12.66	4.95
S-4V	10	15.10	2.75	14.73	2.87	14.36	2.99	13.99	3.12	13.23	3.60	12.46	4.09	11.70	4.57	10.94	5.06
RA	7	14.00	2.30	13.89	3.43	13.40	2.53	13.20	3.22	12.30	3.57	11.80	4.07	10.85	4.59	9.90	5.12
	5	-	-	13.33	3.81	12.54	4.04	11.76	4.28	10.97	4.51	10.18	4.74	9.39	4.98	8.60	5.21
光	22	-	-	-	-	-	-	18.30	3.27	17.98	3.92	17.65	4.56	17.33	5.21	17.00	5.86
N() N	18	-	-	-	-	18.50	3.43	17.60	3.12	17.40	4.05	16.00	4.27	15.00	4.83	14.00	5.38
NH( + -5.0	15	17.10	3.42	17.09	3.40	17.09	3.38	17.08	3.36	16.07	3.90	15.05	4.43	14.03	4.96	13.02	5.49
RAS-5WH(V)NPE + RWM-5.0N1E	10	16.60	3.32	16.47	3.47	16.35	3.62	16.22	3.78	15.01	4.25	13.80	4.72	12.59	5.20	11.38	5.67
A R	7	16.10	3.16	15.90	3.25	15.40	3.14	15.70	4.03	13.20	3.83	12.60	4.67	11.50	5.22	10.40	5.78
	5	-	-	15.51	3.10	14.59	3.63	13.67	4.15	12.76	4.68	11.84	5.20	10.92	5.73	10.00	6.25
뿝	18	-	-	-	-	- 20.00	3.85	19.00	4.00	19.63 17.80	4.71	19.25	5.43	18.88	6.14	18.50	6.85
RAS-6WH(V)NPE + RWM-6.0N1E	15	18.00	- 4.00	10 10	4.07	20.00	4.05	18.29	3.73	17.34	4.45	17.50 16.39	4.86	16.65	5.72	15.80 14.49	6.55
WH( + +			4.09	18.10					4.02		4.66		5.29	15.44	5.92		
S-6/	10	17.50	3.89	17.37	4.10	17.24	4.31	17.11	4.52	15.91	5.02	14.71	5.51	13.51	6.01	12.31	6.50
A R	7	17.00	3.70	16.79	3.73	16.70	4.07	16.40	4.82	14.90	4.32	13.70	5.37	12.35	5.92	11.00	6.47
	5 22	-	-	16.40	3.49	15.58	4.23	14.77 25.80	4.97	13.95	5.71	13.13	6.45	12.32	7.19	11.50	7.93 8.37
ш		-	-	-	-	25.10	6 28		6.62		7.05		7.49	23.40		22.60	
TNP NATE	18	- 23 20	5.04	- 22.00	- 5 / 12	25.10	6.28	24.60	6.65	24.00	7.06	23.50	7.12	22.25	7.76	21.00	8.40
8WI + 1-8.0	15	23.20	5.04	22.99	5.43	22.79	5.82	22.58 19.22	6.22	21.85	6.79	21.11	7.37	20.37	7.95	19.64	8.53
RAS-8WHNPE + RWM-8.0N1E	10	21.10	5.15	20.47	5.26	19.85			5.49	18.75	6.31	18.29	7.12	17.83	7.94	17.36	8.76
~ 12	7	20.20	4.93	19.70	4.99	19.20	5.05	17.20	5.06	16.70	5.76	16.40	6.31	16.20	7.60	16.00	8.89
	5	-	-	18.50	4.93	17.83	5.62	17.17	6.31	16.50	7.00	15.83	7.69	15.17	8.37	14.50	9.06

								Ambien	t temp	erature	(°C DB	)					
System	Water outlet temperature	1	0	1	5	2	0	2	5	3	0	3	5	4	0	4	5
Sys	(°C)	CAP (kW)	IPT (kW)														
	22	-	-	-	-	-	-	28.60	6.65	27.70	7.39	26.80	8.13	25.90	8.87	25.00	9.62
F = 7	18	-	-	-	-	28.50	6.33	28.00	6.67	27.50	7.64	27.00	8.71	25.00	9.35	23.00	10.00
10WHNPE +	15	26.00	6.67	26.07	6.69	26.13	6.71	26.20	6.73	25.06	7.63	23.92	8.54	22.78	9.44	21.64	10.34
	10	25.30	6.66	24.60	6.72	23.90	6.78	23.20	6.84	22.24	7.86	21.28	8.87	20.32	9.89	19.36	10.91
RAS-10	7	24.00	6.49	23.40	6.50	22.80	6.51	21.40	6.90	21.00	7.78	20.60	8.96	19.30	10.10	18.00	11.25
	5	-	-	21.00	6.36	20.33	7.19	19.67	8.02	19.00	8.85	18.33	9.68	17.67	10.51	17.00	11.33



CAP: Capacity at compressor maximum frequency. Capacity is valid for difference between water inlet and water outlet of 3-8°C.

# 3.2 YUTAKI S COMBI

# 3.2.1 Maximum heating capacity table (kW) (Integrated) (Standard Humidity)

	Water								An	nbient	t tem	peratu	ıre (°	C WB)							
System	outlet	-2	20	-1	5	-1	0	-	7	-:	2	2	2	7	,	1:	2	1	5	2	0
Sy	temp (°C)	CAP (kW)	IPT (kW)																		
	60	-	-	-	-	-	-	3.20	2.29	3.64	2.25	4.00	2.22	5.00	2.17	5.50	1.77	5.66	1.71	5.93	1.61
충	55	-	-	-	-	4.00	2.42	4.20	2.27	4.48	2.25	4.70	2.24	6.00	2.22	6.30	1.80	6.46	1.68	6.73	1.48
1+ 0S(-	50	-	-	-	-	4.36	2.32	4.60	2.22	4.85	2.13	5.05	2.05	6.15	2.01	6.65	1.71	6.85	1.61	7.17	1.43
/RP :-22	45	4.00	2.35	4.25	2.30	4.72	2.22	5.00	2.17	5.22	2.00	5.40	1.86	6.30	1.80	7.00	1.63	7.23	1.54	7.62	1.38
WH/ W1E	40	4.15	2.34	4.54	2.24	4.93	2.14	5.17	2.08	5.32	1.86	5.45	1.70	6.40	1.59	7.25	1.48	7.48	1.42	7.87	1.31
RAS-2WHVRP1+ D-2.0RW1E-220S	35	4.30	2.32	4.50	2.14	5.02	2.04	5.33	1.98	5.42	1.73	5.49	1.53	6.50	1.38	7.50	1.34	7.73	1.30	8.12	1.24
RAS-2WHVRP1+ RWD-2.0RW1E-220S(-K)	30	4.50	2.23	4.80	2.09	5.31	1.93	5.62	1.83	5.69	1.65	5.75	1.50	6.70	1.34	7.75	1.30	7.98	1.27	8.37	1.20
S S	25	4.70	2.14	5.10	2.04	5.60	1.82	5.90	1.68	5.95	1.56	6.00	1.46	6.90	1.30	8.00	1.27	8.23	1.23	8.62	1.16
	20	4.90	2.04	5.40	1.99	5.89	1.71	6.18	1.54	6.22	1.48	6.25	1.43	7.10	1.26	8.25	1.24	8.48	1.19	8.87	1.12
	60	-	-	-	-	-	-	4.00	3.33	4.72	3.27	5.30	3.21	6.20	2.58	6.50	2.24	6.66	2.25	6.93	2.27
र्	55	-	-	-	-	4.70	3.13	5.00	2.94	5.44	2.81	5.80	2.70	7.00	2.64	7.50	2.42	7.73	2.34	8.12	2.21
RP1	50	-	-	-	-	5.10	2.97	5.40	2.85	5.90	2.74	6.30	2.66	7.48	2.60	8.00	2.27	8.31	2.22	8.83	2.14
RAS-2.5WHVRP1 + RWD-2.5RW1E-220S(-K)	45	4.60	2.86	5.00	2.86	5.50	2.80	5.80	2.76	6.36	2.68	6.80	2.62	7.97	2.57	8.50	2.12	8.62	2.01	8.81	1.82
5WI + W1E	40	4.80	2.77	5.27	2.77	5.73	2.71	6.01	2.67	6.51	2.54	6.90	2.44	8.28	2.28	8.85	1.95	9.00	1.84	9.25	1.66
S-2.	35	5.00	2.77	5.40	2.77	5.92	2.65	6.23	2.58	6.66	2.40	7.00	2.26	8.60	2.00	9.20	1.77	9.39	1.67	9.70	1.50
RA /D-2	30	5.25	2.72	5.70	2.72	6.12	2.53	6.36	2.41	6.82	2.25	7.18	2.12	8.85	1.93	9.50	1.67	9.63	1.59	9.84	1.44
R	25	5.50	2.67	6.00	2.67	6.31	2.40	6.50	2.24	6.97	2.10	7.35	1.99	9.10	1.86	9.80	1.58	9.87	1.50	9.98	1.38
	20	5.75	2.57	6.30	2.57	6.51	2.32	6.63	2.17	7.13	2.00	7.52	1.87	9.35	1.79	10.10	1.49	10.11	1.42	10.13	1.31
	60	-	-	-	-	-	-	5.10	3.64	5.77	3.46	6.31	3.32	7.50	3.21	8.00	2.76	8.12	2.73	8.31	2.70
호	55	-	-	-	-	5.30	3.53	5.50	3.44	6.42	3.42	7.15	3.40	9.00	3.30	9.80	3.11	9.85	3.07	9.92	3.01
51 0S(	50	-	-	-	-	5.80	3.39	6.08	3.31	6.83	3.24	7.43	3.18	9.15	3.08	9.90	2.91	10.03	2.88	10.24	2.83
RAS-3WHVRP1 + RWD-3.0RW1E-220S(-K)	45	5.25	3.39	5.70	3.35	6.30	3.24	6.67	3.18	7.24	3.06	7.70	2.96	9.30	2.86	10.00	2.70	10.21	2.68	10.55	2.66
¥ + ¥	40	5.63	3.36	6.19	3.27	6.75	3.17	7.08	3.12	7.64	2.96	8.09	2.83	10.15	2.77	10.75	2.60	10.88	2.59	11.09	2.56
AS-3	35	6.00	3.33	6.25	3.29	7.03	3.14	7.50	3.06	8.04	2.85	8.47	2.69	10.99	2.68	11.50	2.50	11.55	2.49	11.62	2.46
<sup>0</sup>	30	6.25	3.29	6.52	3.23	7.23	3.08	7.65	3.00	8.36	2.77	8.94	2.58	11.15	2.57	11.65	2.32	11.70	2.30	11.77	2.26
R S	25	6.50	3.25	6.80	3.16	7.42	3.02	7.80	2.94	8.69	2.68	9.40	2.48	11.30	2.46	11.80	2.15	11.85	2.11	11.92	2.06
	20	6.75	3.21	7.08	3.10	7.62	2.97	7.94	2.88	9.09	2.62	10.00	2.40	11.50	2.40	12.00	2.00	12.16	1.97	12.43	1.92
	60	-	-	-	-	6.50	4.33	6.80	4.12	6.91	3.60	7.00	3.18	8.50	3.40	10.20	3.64	11.22	3.79	13.00	4.06
<u> </u>	55	-	-	-	-	7.20	4.30	9.70	5.56	9.90	4.86	10.50	4.47	13.50	4.75	14.36	5.16	14.77	5.37	15.46	3.50
IPE 20S	50	-	-	7.50	4.17	7.79	3.95	9.87	4.50	10.00	4.16	10.90	4.19	13.88	4.33	14.83	4.45	15.39	4.51	16.34	4.63
(V)N E-2	45	7.20	4.03	8.28	4.05	9.35	4.07	10.00	4.08	10.60	3.95	11.50	3.97	14.10	3.85	15.30	3.73	16.02	3.66	17.00	3.49
W + M	40	8.10	4.16	8.95	4.12	9.80	4.07	10.31	4.05	11.00	3.93	11.80	3.92	14.65	3.56	15.65	3.40	16.25	3.31	17.25	3.15
RAS-4WH(V)NPE + D-4.0NW1E-220S	35	9.00	4.29	9.62	4.18	10.25	4.08	10.62	4.01	11.83	4.08	12.80	4.13	15.20	3.27	16.00	3.08	16.48	2.96	17.50	2.81
RAS-4WH(V)NPE + RWD-4.0NW1E-220S(-K)	30	10.00	4.34	10.77	4.22	11.53	4.10	11.99	4.03	12.72	3.90	13.30	3.80	15.90	3.31	16.60	2.81	17.02	2.51	17.72	2.60
S.	25	11.64	4.44	12.16	4.31	12.68	4.18	13.00	4.10	13.72	3.98	13.58	3.61	16.10	2.82	17.00	2.74	17.54	2.69	18.44	2.55
	20	13.28	4.55	13.56	4.40	13.84	4.26	14.00	4.18	14.72	4.06	13.78	3.46	16.30	2.34	17.40	2.67	18.06	2.87	19.16	2.50
	60	-	-	-	-	7.47	5.45	8.19	5.97	8.16	5.27	8.14	4.72	11.20	5.62	11.40	5.33	12.00	5.43	14.00	6.08
Ŷ	55	-	-	-	-	9.22	6.36	11.20	6.22	12.21	6.24	12.96	6.22	15.20	6.30	16.00	5.71	16.50	5.37	16.70	3.86
RAS-5WH(V)NPE + RWD-5.0NW1E-220S(-K)	50	-	-	9.30	6.00	9.99	5.81	11.42	5.87	12.45	5.64	13.27	5.45	15.46	5.41	16.50	4.93	16.80	4.55	17.10	3.92
RAS-5WH(V)NPE + D-5.0NW1E-220S	45	8.10	4.54	9.43	4.90	10.76	5.27	11.60	5.50	12.68	5.04	13.59	4.69	15.70	4.53	17.00	4.15	17.50	3.86	18.00	3.51
W+ + M	40	8.90	4.61	10.02	4.81	11.15	5.00	11.82	5.12	12.89	4.75	13.75	4.45	16.13	4.10	17.15	3.77	17.70	3.56	18.50	3.19
4S-5	35	9.70	4.69	10.62	4.71	11.53	4.74	12.00	4.72	13.10	4.46	13.90	4.21	16.70	3.70	17.30	3.39	17.80	3.24	18.80	3.55
R/ VD-	30	10.70	4.74	11.28	4.55	11.85	4.35	12.20	4.24	13.26	4.18	14.10	4.14	17.20	3.58	17.90	3.03	17.96	2.63	19.10	3.38
N.	25	11.16	4.42	12.25	4.42	13.34	4.42	14.00	4.42	14.70	4.32	15.27	4.24	17.90	3.51	18.50	3.08	18.80	2.82	19.50	3.13
	20	11.61	4.10	13.22	4.30	14.83	4.49	15.80	4.60	16.15	4.46	16.43	4.34	18.10	3.33	18.80	3.08	19.00	2.90	20.00	2.71

_	Water								An	nbient	temp	peratu	ıre (°0	C WB)							
System	outlet	-2	20	-1	5	-1	0	-	7	-3	2	2	2	7		12	2	1	5	20	0
Sy	(°C)	CAP (kW)	IPT (kW)																		
	60	-	-	-	-	7.80	5.57	8.30	5.72	9.02	5.35	9.60	5.05	12.00	5.71	12.10	5.50	13.00	5.75	15.00	6.37
ठ्र	55	-	-	-	-	10.38	7.39	12.00	7.18	12.96	7.09	13.96	7.16	17.00	7.13	17.20	6.14	17.30	5.56	17.40	4.60
	50	-	-	10.1	6.97	10.77	6.39	11.83	6.32	12.98	6.19	13.90	6.09	17.10	6.19	17.30	5.92	17.50	5.77	18.00	5.56
S-6WH(V)NPE + .0NW1E-220S(	45	9.00	4.86	10.32	5.34	11.63	5.81	12.50	6.13	13.56	5.68	14.48	5.36	17.30	5.33	17.50	4.49	18.00	4.14	18.60	3.51
WH(	40	9.55	5.12	10.75	5.33	11.95	5.54	12.67	5.66	13.81	5.31	14.73	5.02	17.55	4.69	18.10	4.12	18.30	3.76	19.00	3.24
RAS-6WH(V)NPE + D-6.0NW1E-220S	35	10.10	5.37	11.18	5.32	12.27	5.26	13.00	5.27	14.06	4.93	15.00	4.69	17.80	4.05	18.20	3.64	18.60	3.54	19.60	3.43
RAS	30	10.71	4.56	12.57	4.84	13.99	4.93	14.83	4.99	15.12	4.72	15.35	4.51	18.10	3.77	18.60	3.15	19.10	3.14	20.00	3.13
RW	25	11.30	4.48	12.83	4.63	14.02	4.64	14.73	4.65	15.18	4.47	15.54	4.33	18.50	3.78	19.90	3.37	20.50	3.27	21.00	3.05
	20	12.13	4.48	13.09	4.42	14.05	4.36	14.63	4.32	15.24	4.22	15.72	4.15	18.90	3.78	20.90	3.54	21.10	3.31	22.00	3.04

- CAP: Capacity at compressor maximum frequency. Capacity is valid for difference between water inlet and water outlet of 3-8°C.
- IPT: Total input power.

The table above shows the input power (IPT) at maximum capacity (CAP). Most of the time, the unit will run at partial load, so that the actual input power will be lower.

# 3.2.2 Maximum heating capacity table (kW) (Integrated) (High Huimidity condition) (Only for RAS-(2-3)WHVRP1 outdoor combination models)

		Water									Amk	ient 1	empe	eratur	e (°C	WB)								
System		outlet	-2	20	-1	5	-1	0	_	7	-	2	2	2	7	7	1	2	1	5	2	0	2	5
Š		(°C)	CAP (kW)		CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)	IPT (kW)	CAP (kW)		CAP (kW)	IPT (kW)								
		60	-	-	-	-	-	-	2.61	1.99	3.20	2.03	3.68	2.07	4.50	2.04	5.50	1.77	5.66	1.71	5.93	1.61	6.20	1.51
	츳	55	-	-	-	-	3.70	2.24	3.73	2.02	4.09	2.08	4.38	2.13	5.70	2.22	6.30	1.80	6.46	1.68	6.73	1.48	7.00	1.27
7	RWD-2.0RW1E-220S(-K)	50	-	-	-	-	3.80	2.08	3.97	1.97	4.34	1.95	4.64	1.94	5.84	2.01	6.65	1.71	6.85	1.61	7.17	1.43	7.50	1.25
RAS-2WHVRP1	E-22	45	3.26	1.96	3.41	1.91	3.91	1.92	4.21	1.92	4.60	1.83	4.91	1.75	5.99	1.80	7.00	1.63	7.23	1.54	7.62	1.38	8.00	1.23
¥ +	×	40	3.52	2.00	3.91	1.96	4.30	1.93	4.53	1.90	4.85	1.77	5.11	1.66	5.98	1.61	7.25	1.48	7.48	1.42	7.87	1.31	8.25	1.21
1S-2	.0R	35	3.78	2.04	3.90	1.94	4.50	1.91	4.85	1.89	5.10	1.71	5.30	1.56	5.98	1.43	7.50	1.34	7.73	1.30	8.12	1.24	8.50	1.18
2	7-0/	30	3.95	1.94	4.16	1.86	4.67	1.77	4.97	1.72	5.35	1.63	5.65	1.56	6.16	1.34	7.75	1.30	7.98	1.27	8.37	1.20	8.75	1.14
	S	25	4.13	1.84	4.43	1.79	4.84	1.64	5.09	1.55	5.60	1.55	6.00	1.55	6.35	1.25	8.00	1.27	8.23	1.23	8.62	1.16	9.00	1.09
		20	4.30	1.73	4.69	1.71	5.01	1.51	5.21	1.38	5.84	1.47	6.35	1.54	6.53	1.16	8.25	1.24	8.48	1.19	8.87	1.12	9.25	1.05
		60	-	-	-	-	-	-	2.94	2.61	3.68	2.70	4.26	2.77	5.27	2.20	6.50	2.24	6.66	2.25	6.93	2.27	7.20	2.29
	Š	55	-	-	-	-	3.68	2.37	4.00	2.35	4.52	2.41	4.93	2.46	6.51	2.41	7.50	2.42	7.73	2.34	8.12	2.21	8.50	2.07
7	5RW1E-220S(-K)	50	-	-	-	-	4.02	2.36	4.35	2.35	4.94	2.32	5.40	2.30	6.77	2.34	8.00	2.27	8.74	2.26	9.96	2.25	8.75	1.85
RAS-2.5WHVRP	22	45	3.49	2.26	3.80	2.33	4.37	2.34	4.71	2.34	5.35	2.23	5.87	2.14	7.04	2.26	8.50	2.12	8.62	2.01	8.81	1.82	9.00	1.64
5WI	W1E	40	3.80	2.32	4.22	2.28	4.64	2.24	4.89	2.21	5.50	2.11	5.99	2.02	7.00	2.05	8.85	1.95	9.00	1.84	9.25	1.66	9.50	1.48
S-2.		35	4.10	2.39	4.43	2.28	4.83	2.16	5.07	2.08	5.66	1.99	6.12	1.91	6.97	1.84	9.20	1.77	9.39	1.67	9.70	1.50	10.01	1.33
RA	RWD-2	30	4.31	2.33	4.68	2.24	4.94	2.05	5.09	1.94	5.81	1.88	6.39	1.84	7.18	1.76	9.50	1.67	9.63	1.59	9.84	1.44	10.05	1.29
	R S	25	4.52	2.26	4.94	2.20	5.04	1.95	5.11	1.80	5.97	1.78	6.66	1.76	7.39	1.67	9.80	1.58	9.87	1.50	9.98	1.38	10.10	1.25
		20	4.73	2.15	5.19	2.11	5.15	1.89	5.13	1.76	6.13	1.73	6.93	1.71	7.60	1.59	10.10	1.49	10.11	1.42	10.13	1.31	10.15	1.20
		60	-	-	-	-	-	-	3.38	2.96	4.12	2.85	4.71	2.76	4.88	2.60	8.00	2.76	8.12	2.73	8.31	2.70	8.50	2.66
	Š	55	-	-	-	-	4.15	3.14	4.40	3.14	5.18	3.01	5.80	2.90	7.50	2.78	9.80	3.11	9.85	3.07	9.92	3.01	10.00	2.94
7	08(	50	-	-	-	-	4.49	2.85	4.78	2.86	5.46	2.75	6.00	2.67	7.76	2.56	9.90	2.91	10.03	2.88	10.24	2.83	10.45	2.78
VRF	-22	45	3.99	2.85	4.27	2.52	4.83	2.55	5.16	2.57	5.74	2.50	6.20	2.44	8.01	2.35	10.00	2.70	10.21	2.68	10.55	2.66	10.90	2.63
RAS-3WHVRP1	RWD-3.0RW1E-220S(-K)	40	4.27	2.73	4.76	2.63	5.24	2.52	5.53	2.46	6.07	2.41	6.50	2.38	8.52	2.39	10.75	2.60	10.88	2.59	11.09	2.56	11.30	2.53
S-3	.0R	35	4.56	2.62	4.90	2.61	5.52	2.45	5.89	2.35	6.40	2.33	6.80	2.32	9.03	2.44	11.50	2.50	11.55	2.49	11.62	2.46	11.70	2.44
RA	D-3	30	4.75	2.58	5.10	2.55	5.56	2.39	5.84	2.29	6.66	2.30	7.31	2.30	9.14	2.34	11.65	2.32	11.70	2.30	11.77	2.26	11.85	2.22
	RW	25	4.94	2.55	5.30	2.50	5.61	2.33	5.79	2.23	6.92	2.26	7.82	2.28	9.25	2.23	11.80	2.15	11.85	2.11	11.92	2.06	12.00	2.00
		20	5.13	2.52	5.51	2.44	5.65	2.27	5.74	2.17	8.11	2.30	10.00	2.40	11.50	2.40	12.00	2.00	12.16	1.97	12.43	1.92	12.70	1.87

# 3.2.3 Maximum cooling capacity table (kW)

					,		,		Ambien	t tempe	erature	(°C DB)					,	
Svstem		Water outlet temperature	1	0	1	5	2	0	2	5	3	0	3	5	4	0	4	5
SVS		(°C)	CAP (kW)	IPT (kW)														
	Š	22	-	-	-	-	-	-	7.40	0.95	6.93	1.03	6.45	1.11	5.98	1.19	5.50	1.26
P1	208(	18	-	-	-	-	7.50	0.88	7.10	0.97	6.80	1.08	6.40	1.21	5.75	1.27	5.10	1.32
HVR	1E-2	15	7.00	0.97	6.92	0.99	6.83	1.00	6.75	1.01	6.27	1.10	5.79	1.19	5.31	1.29	4.83	1.38
RAS-2WHVRP1	RWD-2.0RW1E-220S(-K)	10	6.80	0.97	6.58	1.01	6.37	1.04	6.15	1.08	5.71	1.17	5.26	1.27	4.82	1.37	4.37	1.47
RA	D-2.(	7	6.20	0.98	6.10	1.03	6.00	1.07	5.80	1.12	5.40	1.23	5.00	1.33	4.55	1.43	4.10	1.52
	RW	5	-	-	5.50	1.08	5.20	1.17	4.90	1.26	4.60	1.34	4.30	1.43	4.00	1.52	3.70	1.61
	Š	22	-	-	-	-	-	-	8.70	1.19	8.10	1.27	7.50	1.35	6.90	1.42	6.30	1.50
2P1	208(	18	-	-	-	-	8.50	1.21	8.30	1.24	7.90	1.36	7.20	1.48	6.60	1.58	6.00	1.67
RAS-2.5WHVRP1	1E-2	15	8.10	1.25	8.03	1.26	7.96	1.27	7.89	1.28	7.35	1.39	6.81	1.50	6.27	1.61	5.73	1.72
-2.5V	5RW	10	7.60	1.25	7.47	1.28	7.34	1.31	7.21	1.35	6.73	1.46	6.24	1.57	5.76	1.69	5.27	1.80
RAS	RWD-2.5RW1E-220S(-K)	7	7.10	1.13	7.20	1.16	7.30	1.20	6.80	1.39	6.30	1.58	6.00	1.74	5.50	1.80	5.00	1.85
	RW	5	-	-	6.80	1.36	6.43	1.49	6.07	1.62	5.70	1.75	5.33	1.88	4.97	2.01	4.60	2.14
	Š	22	-	-	-	-	-	-	10.50	1.67	9.90	1.73	9.30	1.80	8.70	1.86	8.10	1.93
7	RWD-3.0RW1E-220S(-K)	18	-	-	-	-	10.60	1.64	10.20	1.71	9.50	1.84	9.00	1.94	8.00	1.98	7.00	2.03
RAS-3WHVRP1	1E-2	15	9.50	1.40	9.52	1.54	9.53	1.68	9.55	1.82	8.84	1.90	8.14	1.98	7.43	2.06	6.73	2.14
8-3W	)RW	10	8.80	1.44	8.68	1.63	8.57	1.81	8.45	2.00	7.91	2.08	7.36	2.17	6.82	2.25	6.27	2.33
RAS	D-3.0	7	8.10	1.56	8.00	1.74	7.90	1.93	7.80	2.11	7.60	2.08	7.00	2.19	6.50	2.32	6.00	2.45
	RW	5	-	-	8.00	1.74	7.68	1.86	7.35	1.99	7.03	2.11	6.70	2.23	6.15	2.45	5.60	2.67
	Š	22	-	-	-	-	-	-	16.10	2.64	15.66	3.10	15.22	3.57	14.78	4.03	14.34	4.49
Ⅱ	RWD-4.0NW1E-220S(-K)	18	-	-	-	-	17.00	2.93	16.10	2.85	15.50	3.60	15.00	4.00	14.35	4.45	13.70	4.89
N(S)	1E-2	15	16.00	2.71	15.77	2.79	15.54	2.87	15.31	2.95	14.65	3.45	13.99	3.95	13.33	4.45	12.66	4.95
RAS-4WH(V)NPE	NNO	10	15.10	2.75	14.73	2.87	14.36	2.99	13.99	3.12	13.23	3.60	12.46	4.09	11.70	4.57	10.94	5.06
RAS	D-4.0	7	14.00	2.30	13.89	3.43	13.40	2.53	13.20	3.22	12.30	3.57	11.80	4.07	10.85	4.59	9.90	5.12
	RW	5	-	-	13.33	3.81	12.54	4.04	11.76	4.28	10.97	4.51	10.18	4.74	9.39	4.98	8.60	5.21
	Š	22	-	-	-	-	-	-	18.30	3.27	17.98	3.92	17.65	4.56	17.33	5.21	17.00	5.86
PE	208(	18	-	-	-	-	18.50	3.43	17.60	3.12	17.40	4.05	16.00	4.27	15.00	4.83	14.00	5.38
\(\int\)	1E-2	15	17.10	3.42	17.09	3.40	17.09	3.38	17.08	3.36	16.07	3.90	15.05	4.43	14.03	4.96	13.02	5.49
RAS-5WH(V)NPE	RWD-5.0NW1E-220S(-K)	10	16.60	3.32	16.47	3.47	16.35	3.62	16.22	3.78	15.01	4.25	13.80	4.72	12.59	5.20	11.38	5.67
RAS	D-5.(	7	16.10	3.16	15.90	3.25	15.40	3.14	15.70	4.03	13.20	3.83	12.60	4.67	11.50	5.22	10.40	5.78
	RW	5	-	-	15.51	3.10	14.59	3.63	13.67	4.15	12.76	4.68	11.84	5.20	10.92	5.73	10.00	6.25
	Š	22	-	-	-	-	-	-	20.00	4.00	19.63	4.71	19.25	5.43	18.88	6.14	18.50	6.85
PE	RWD-6.0NW1E-220S(-K)	18	-	-	-	-	20.00	3.85	19.00	3.73	17.80	4.45	17.50	4.86	16.65	5.72	15.80	6.58
RAS-6WH(V)NPE	1E-2	15	18.00	4.09	18.10	4.07	18.19	4.05	18.29	4.02	17.34	4.66	16.39	5.29	15.44	5.92	14.49	6.55
+ +	NN	10	17.50	3.89	17.37	4.10	17.24	4.31	17.11	4.52	15.91	5.02	14.71	5.51	13.51	6.01	12.31	6.50
RAS	D-6.0	7	17.00	3.70	16.79	3.73	16.70	4.07	16.40	4.82	14.90	4.32	13.70	5.37	12.35	5.92	11.00	6.47
	RW	5	-	-	16.40	3.49	15.58	4.23	14.77	4.97	13.95	5.71	13.13	6.45	12.32	7.19	11.50	7.93




CAP: Capacity at compressor maximum frequency. Capacity is valid for difference between water inlet and water outlet of 3-8°C.

# 3.3 Correction factors

# 3.3.1 Piping length correction factor

The correction factor is based on the equivalent piping length in metres (EL) and the height difference between outdoor unit and indoor unit in metres (H).

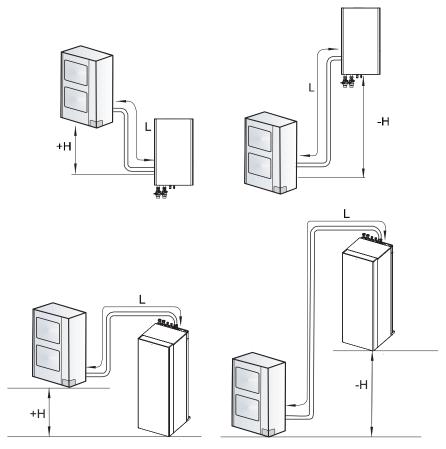

H: Height difference between indoor unit and outdoor unit (m).


- H>0: Outdoor unit is placed higher than indoor unit (m).
- H<0: Outdoor unit is placed lower than indoor unit (m).

L: Actual one-way piping length between indoor unit and outdoor unit (m).


**EL**: Equivalent one-way piping length between indoor unit and outdoor unit (m).

- One 90° elbow is 0.5 m.
- One 180° bend is 1.5 m.

## Heating piping length correction factor

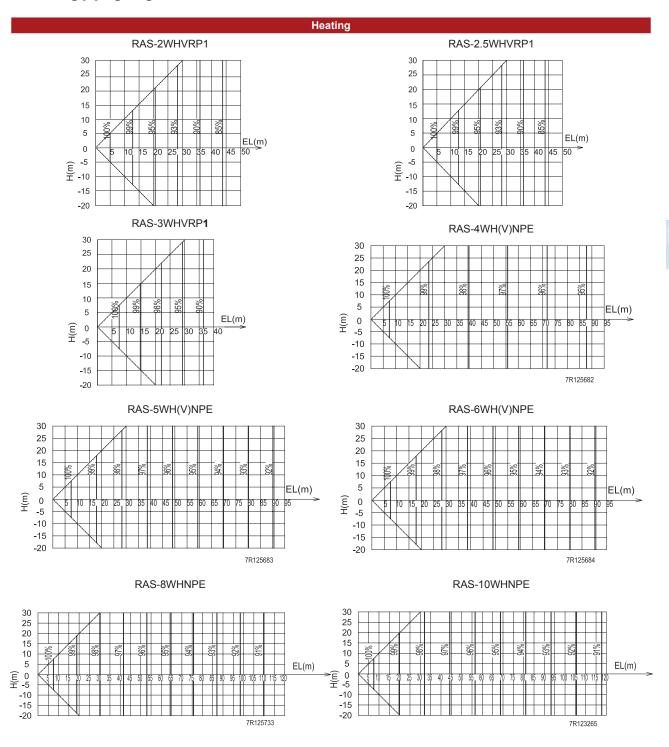

# ◆ Cooling piping length correction factor

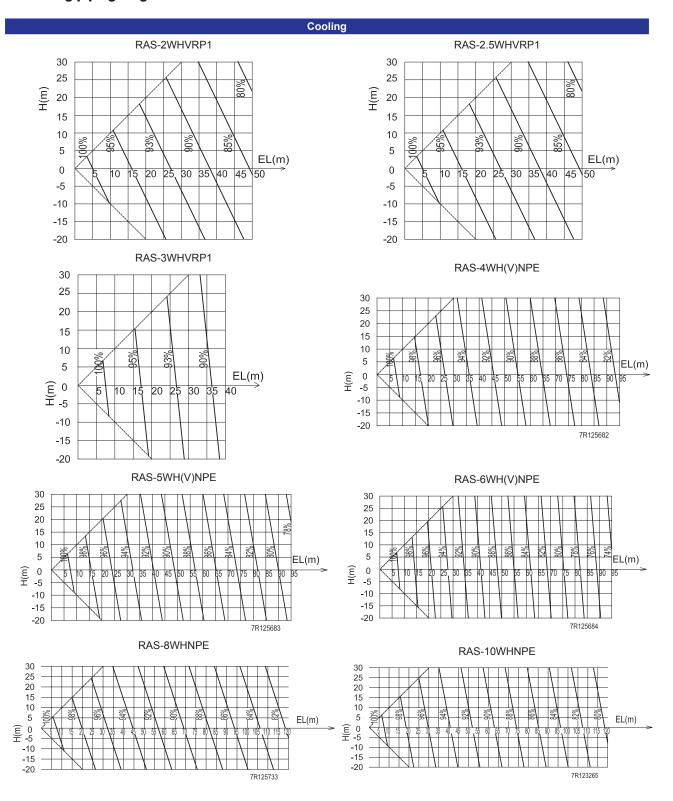

# 3.3.2 Correction factor depending on the altitude

The capacity must be corrected by the affectations of installation altitude of the installation location. When the altitude is above sea level, capacity must be corrected with the altitude correction factor according to the following equation.

Altitude	m	0	300	600	900	1200	1500	1800	2000
Correction factor		1.00	0.97	0.94	0.90	0.88	0.84	0.81	0.81
Altitude	m	2100	2400	2700	3000	3300	3600	3900	4000
Correction factor		0.78	0.75	0.72	0.69	0.67	0.64	0.62	0.61

# 4. Acoustic characteristic curves


# Index

4.1	Considerations	.74
42	Sound pressure level for Outdoor unit	75

# 4.1 Considerations


1 Distance of the unit from the measuring point: At 1 meter from the unit's front surface; 1,5 meter from floor level.


**Outdoor unit** 

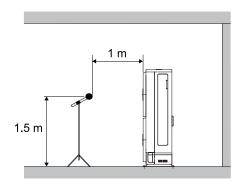



- 2 The data is measured in an anechoic chamber, so reflected sound should be taken into consideration when installing the unit.
- 3 The sound measured with the curve A shown in dB(A) represents the attenuation in function of frequency as perceived by the human ear.
- 4 Reference acoustic pressure 0 dB=20 μPa.

# 4.2 Sound pressure level for Outdoor unit

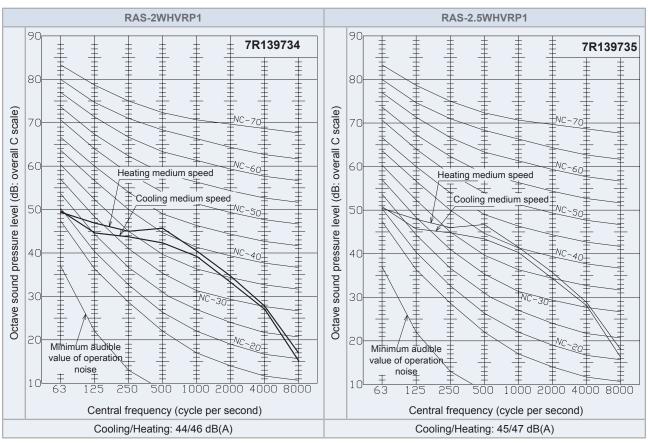

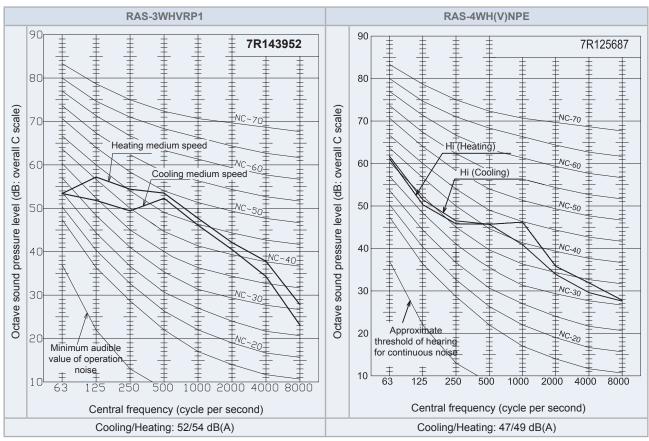

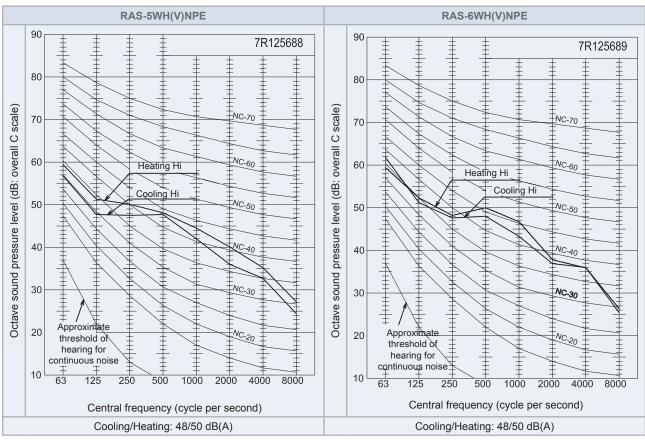

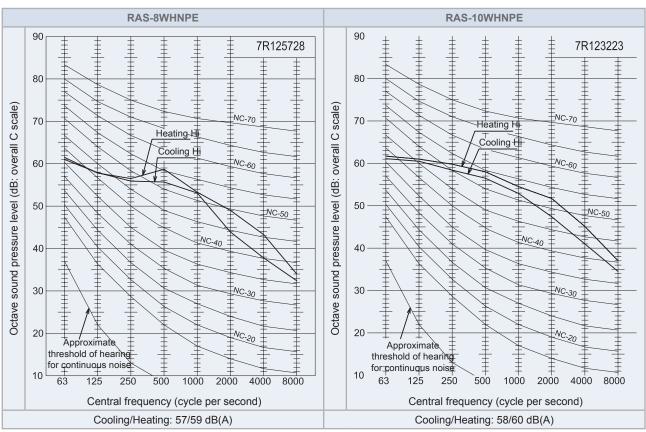

# 5. Working range

# Index

5.1	Power supply working range	78
5.2	Temperature working range	. 78
	5.2.1 Space heating	78
	5.2.2 DHW	79
	5.2.3 Swimming pool heating	80
	5.2.4 Space cooling (Necessary cooling kit)	80
5.3	Hydraulic working range	.81
	5.3.1 Hydraulic data	81
	5.3.2 Pump performance curves	81

# 5.1 Power supply working range

## **♦ Nominal power supply**

Single phase: 1~ 230V 50Hz Three phase: 3N~ 400V 50Hz

## **♦** Operating voltage

Between 90 and 110% of the nominal voltage.

## **♦** Starting voltage

Always higher than 85% of the nominal voltage.


# **5.2 Temperature working range**

MODEL		2.0HP	2.5HP	3.0HP	4.0HP	5.0HP	6.0HP	8.0HP	10.0HP
Water temperature	۰٫			Refer	to the graph	nics for eac	h case		
Indoor ambient temperature					5~	30			

## 5.2.1 Space heating


### **♦ YUTAKI S**



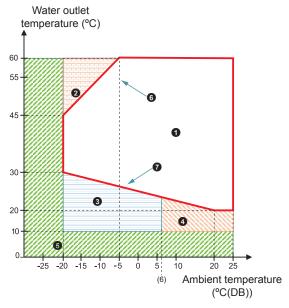

- Continuous working range.
- 2 Operation not possible.
- 3 Starting heat pump + Back-up heater.
- 4 Starting Heat Pump.
  - **5** Starting only Back-up Heater operation.
  - 6 Maximum setting temperature.
  - Minimum setting temperature.

Items 3 and 5 only available if back-up heater is enabled.

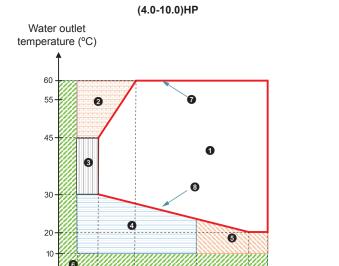

Ambient temperature

(°C(DB))

1 Continuous working range.

2 Operation not possible.

3 Heat Pump operation possible.

4 Starting heat pump + Back-up heater.

6 Starting Heat Pump.

6 Starting only Back-up Heater operation.

Maximum setting temperature.

Minimum setting temperature.

i NOTE


Items 4 and 6 only available if back-up heater is enabled.

(6)

## 5.2.2 DHW

## ♦ For YUTAKI (S /S COMBI)

(2.0~3.0)HP

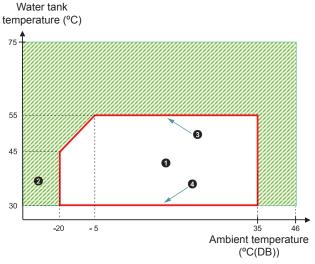

Continuous working range.


2 Starting only Back-up Heater operation.

3 Maximum setting temperature.

Minimum setting temperature.



In case of heating up the DHW tank with an outdoor ambient temperature lower than -5 °C and without using the DHW electrical heater, the setting temperature must not exceed the maximum value in the specified continuous working range.

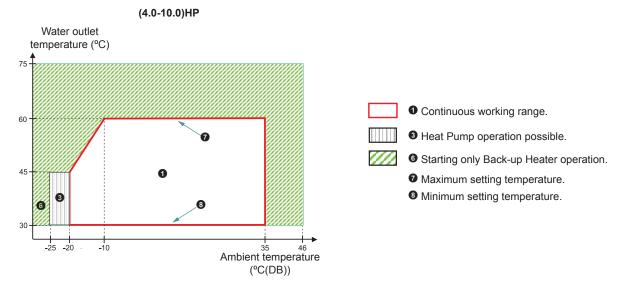


i NOTE


In case of heating up the DHW tank with an outdoor ambient temperature lower than -10 °C and without using the DHW electrical heater, the setting temperature must not exceed the maximum value in the specified continuous working range.

## 5.2.3 Swimming pool heating



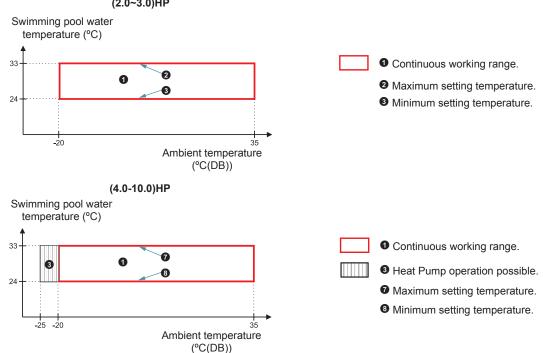

## 5.2.4 Space cooling (Necessary cooling kit)

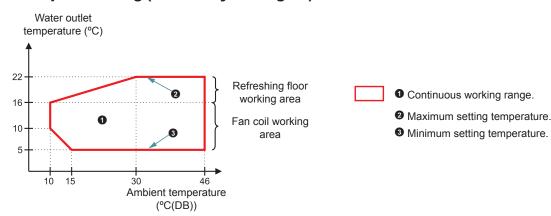

# 5.3 Hydraulic working range

# 5.3.1 Hydraulic data

## **♦ YUTAKI S**

MODEL		2.0 HP	2.5 HP	3.0 HP	4.0 HP	5.0 HP	6.0 HP	8.0 HP	10.0 HP
Minimum water flow rate (*1)	m³/h	0.5	0.6	0.6	1.0	1.1	1.2	2.0	2.2
Maximum water flow rate (*1)	m³/h	1.9	2.0	2.1	2.9	3.0	3.0	4.5	4.6
Minimum installation water volume (*2)	- 1	28	28	28	38	46	55	76	79
Minimum allowable water pressure	MPa				0	.1			
Maximum allowable water pressure	MPa				0	.3			

### **♦ YUTAKI S COMBI**

MODEL		2.0 HP	2.5 HP	3.0 HP	4.0 HP	5.0 HP	6.0 HP
Minimum water flow rate (*1)	m³/h	0.5	0.6	0.6	1.0	1.1	1.2
Maximum water flow rate (*1)	m³/h	1.8	1.9	1.9	2.7	2.8	2.8
Minimum installation water volume (*2)	I	28	28	28	38	46	55
Minimum allowable water pressure	MPa	0.1					
Maximum allowable water pressure	MPa	0.3					



(\*1): Values calculated based on the following conditions:

Water inlet/outlet temperature: 30/35 °C

Outdoor ambient temperature: (DB/WB): 7/6 °C


• (\*2): Values calculated with an ON/OFF temperature differential value of 4 °C.


# **5.3.2 Pump performance curves**





If a water flow rate is selected out of the working range of the unit, it can cause malfunction on the unit. Please, try to operate the pump within the minimum and maximum water flow of the indoor unit.


## **♦ YUTAKI S**

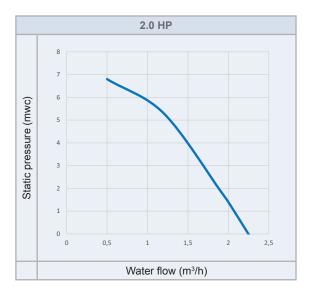


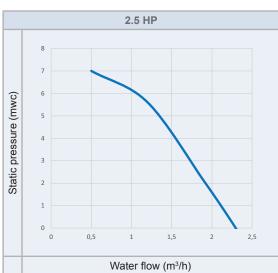


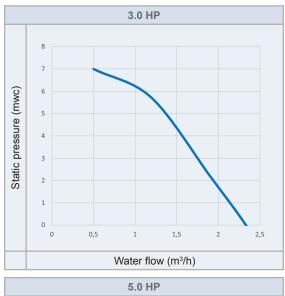


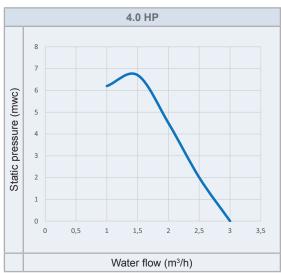

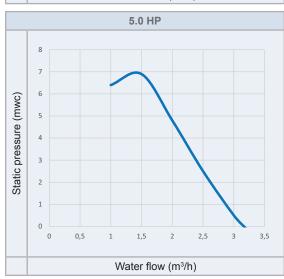


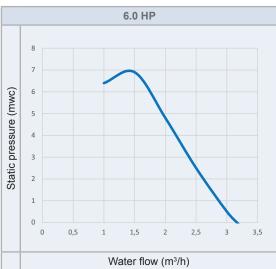


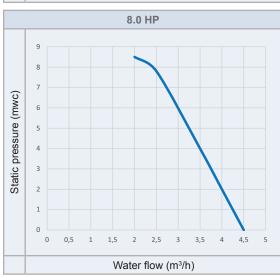


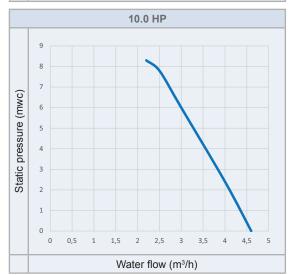



## **♦ YUTAKI S COMBI**

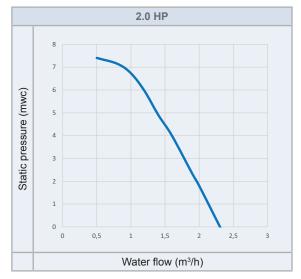


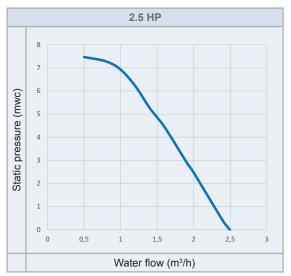

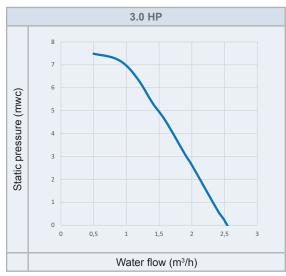

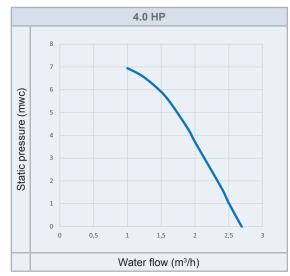

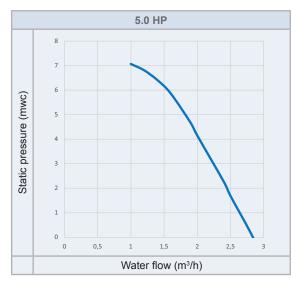

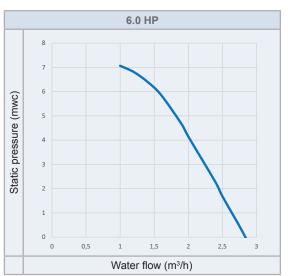

# 6. General dimensions


# Index

6.1	Name of parts and Dimensional data	. 86
	6.1.1 Split system - Outdoor unit	86
	6.1.2.2 YUTAKI S COMBI	91
6.2	Service space	.92
	6.2.1 Split system - Outdoor unit	92
	6.2.2 Split system - Indoor unit	95
	6.2.2.1 YUTAKI S	95
	6.2.2.2 YUTAKI S COMBI	. 96

# 6.1 Name of parts and Dimensional data

# 6.1.1 Split system - Outdoor unit

# **♦ RAS-(2-3)WHVRP1**

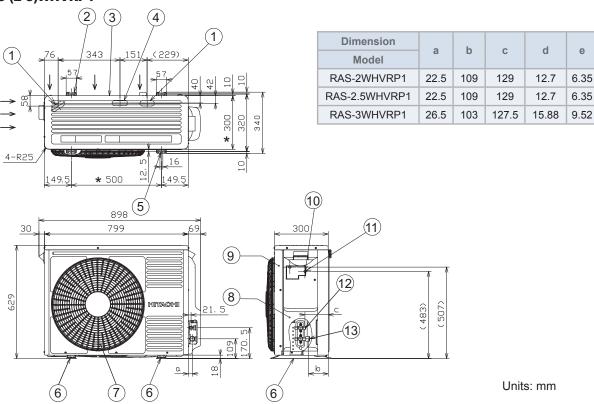


# i NOTE


The dimensions with the \* mark indicate the pitch dimension of the holes for attachment of anchor bolts.


Nº	Description	Remarks
1	Punched drain hole for bush	30x80 long hole
2	Attachment hole for M10 anchor bolt	2-U cut hole
3	Air suction inlet	_
4	Punched drain hole	For drain pipe
5	Attachment hole for M10 anchor bolt	2-Long hole
6	Foot part	
7	Air discharge outlet	_
8	Pipe cover	_
9	Service cover	_
10	Terminal board for power supply and transmission Terminal screw of power supply wire (M5) Terminal screw of transmission wire (M4)	_
11	Terminal screw of earth wire (M5)	_
12	Connection of refrigerant liquid pipe	With flare nut for Øe copper pipe
13	Connection of refrigerant gas pipe	With flare nut for Ød copper pipe

# **♦** RAS-(4-10)WH(V)NPE

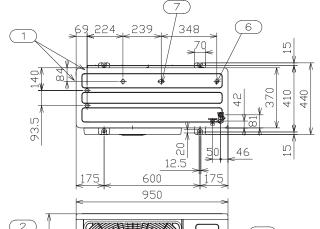

	4-6 HP	8 HP	10 HP
а	90	81	99
b	459	465	465

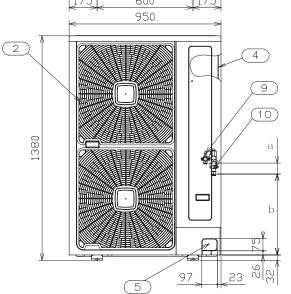

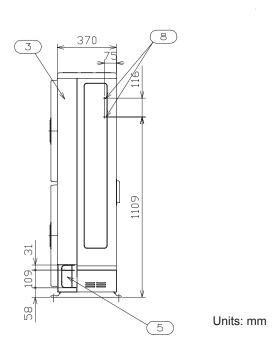


Number	Description	Remarks
1	Air inlet	_
2	Air outlet	_
3	Service cover	_
4	Electrical switch box	_
5	Holes for refrigerant piping and electrical wiring piping	_
6	Drain holes	3-Ø24
7	Drain holes	2-Ø26
8	Holes for fixing machine to wall	4-(M5)
9	Refrigerant liquid pipe	_
10	Refrigerant gas pipe	_

# 6.1.2 Split system - Indoor unit


# 6.1.2.1 YUTAKI S

# ♦ RWM-(2.0-3.0)R1E

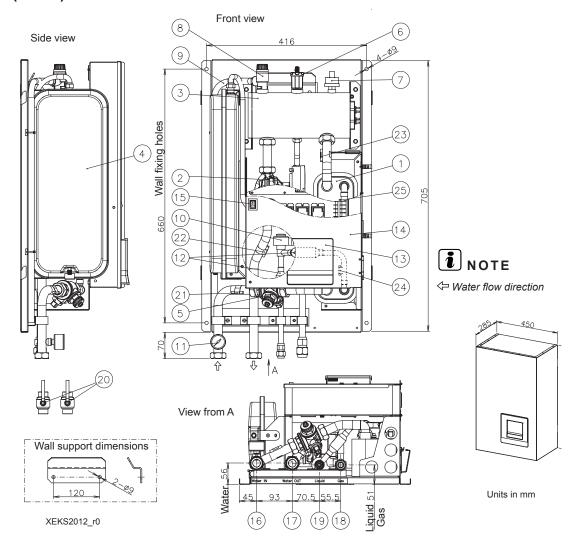


Number	Part name	Number	Part name
1	Plate heat exchanger	13	Unit controller
2	Water pump	14	Electrical box
3	Electric water heater	15	Switch for DHW emergency operation
4	Expansion vessel 6L	16	Water inlet pipe connection - G 1" Female
5	Water strainer	17	Water outlet pipe connection - G 1" Female
6	Air purger	18	Refrigerant gas pipe connection - Ø15.88 (5/8")
7	Water pressure sensor	19	Refrigerant liquid pipe connection 2.0HP: Ø6.35 (1/4") / (2.5-3.0)HP: Ø9.52 (3/8")
8	Safety valve	20	Shut-down valve (Factory-supplied accessory)
9	Drain pipe for safety valve	21	Thermistor (Water inlet pipe)
10	Expansion valve	22	Thermistor (Water outlet pipe)
11	Manometer	23	Thermistor (Water outlet PHEX)
12	Refrigerant strainer (x2)	24	Thermistor (Liquid refrigerant pipe)
		25	Thermistor (Gas refrigerant pipe)

# ♦ RWM-(4.0-6.0)N1E

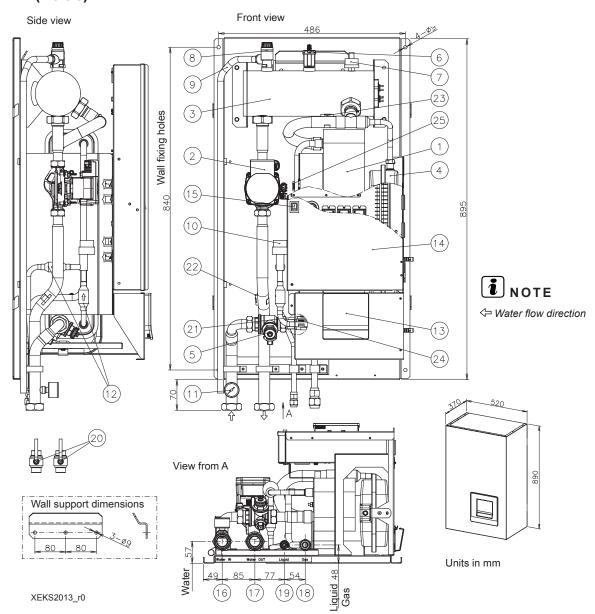

Number	Part name	Number	Part name
1	Plate heat exchanger	13	Unit controller
2	Water pump	14	Electrical box
3	Electric water heater	15	Switch for DHW emergency operation
4	Expansion vessel 6L	16	Water inlet pipe connection - G 1 1/4" female
5	Water strainer	17	Water outlet pipe connection - G 1 1/4" female
6	Air purger	18	Refrigerant gas pipe connection - Ø 15.88 (5/8")
7	Water pressure sensor	19	Refrigerant liquid pipe connection - Ø 9.52 (3/8")
8	Safety valve	20	Shut-down valve (Factory supplied accessory)
9	Drain pipe for safety valve	21	Thermistor (Water inlet pipe)
10	Expansion valve	22	Thermistor (Water outlet pipe)
11	Manometer	23	Thermistor (Water outlet PHEX)
12	Refrigerant strainer (x2)	24	Thermistor (Liquid refrigerant pipe)
		25	Thermistor (Gas refrigerant pipe)


# **♦ RWM-(8.0-10.0)N1E**

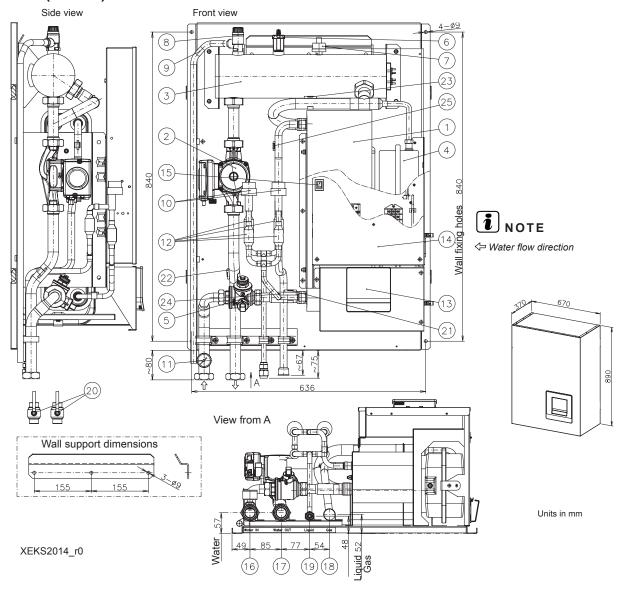

Number	Part name	Number	Part name
1	Plate heat exchanger	13	Unit controller
2	Water pump	14	Electrical box
3	Electric water heater	15	Switch for DHW emergency operation
4	Expansion vessel 10L	16	Water inlet pipe connection - G 1 1/4" Female
5	Water strainer	17	Water outlet pipe connection - G 1 1/4" Female
6	Air purger	18	Refrigerant gas pipe connection - Ø25.4 (1")
7	Water pressure sensor	19	Refrigerant liquid pipe connection 8HP: Ø9.52 (3/8") / 10HP: Ø12.7 (1/2")
8	Safety valve	20	Shut-down valve (factory-supplied accessory)
9	Drain pipe for safety valve	21	Thermistor (Water inlet pipe)
10	Expansion valve (x2)	22	Thermistor (Water outlet pipe)
11	Manometer	23	Thermistor (Water outlet PHEX)
12	Refrigerant strainer (x4)	24	Thermistor (Liquid refrigerant pipe)
		25	Thermistor (Gas refrigerant pipe)

## 6.1.2.2 YUTAKI S COMBI

# ◆ RWD-(2.0-6.0)(N/R)W1E-220S(-K)

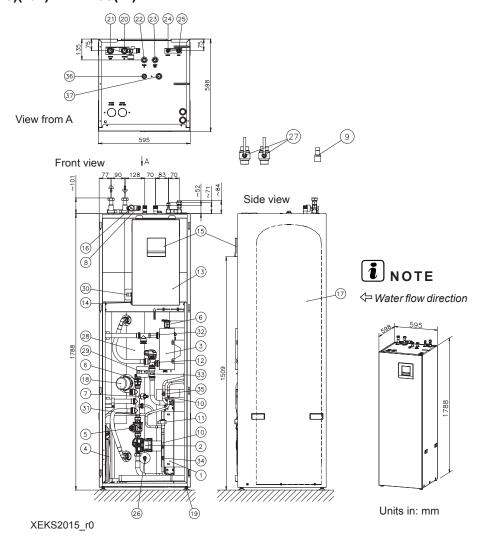



Number	Part name	Number	Part name
1	Plate heat exchanger	20	Water inlet pipe connection 2.0-6.0HP: G 1" female
2	Water pump	21	Water outlet pipe connection 2.0-6.0HP: G 1" female
3	Electric water heater	22	DHW inlet pipe connection - G 3/4" male
4	Expansion vessel 6L	23	DHW outlet pipe connection - G 3/4" male
5	Water strainer	24	Refrigerant liquid pipe connection
6	Air purger (x2)	24	2.0HP: Ø 6.35 (1/4") / (2.5-6.0)HP: Ø9.52 (3/8")
7	Water pressure sensor	25	Refrigerant gas pipe connection - Ø15.88 (5/8")
8	Safety valve	26	Drain port (For DHW) - G 3/8"
9	Drain pipe for safety valve	27	Shutdown valve (Factory supplied accessory)
10	Refrigerant strainer (x2)	28	Tank insulation
11	Expansion valve	29	DHW thermistor 1
12	3-way valve (for space heating and DHW)	30	DHW thermistor 2
13	Electrical box	31	Water inlet thermistor
14	Switch for DHW emergency operation	32	Water outlet thermistor
15	Unit controller	33	Water outlet PHEX thermistor
16	Manometer	34	Refrigerant liquid pipe thermistor
17	DHW tank (220L)	35	Refrigerant gas pipe thermistor
18	DHW tank heater+thermostat	36	P&T Valve (Only UK Models)
19	Mounting foot (x4)	37	Anode connection (accessory)


# **6.2 Service space**

# 6.2.1 Split system - Outdoor unit


# **♦** RAS-(2-3)WHVRP1

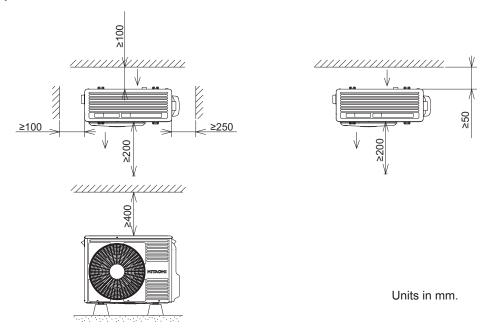

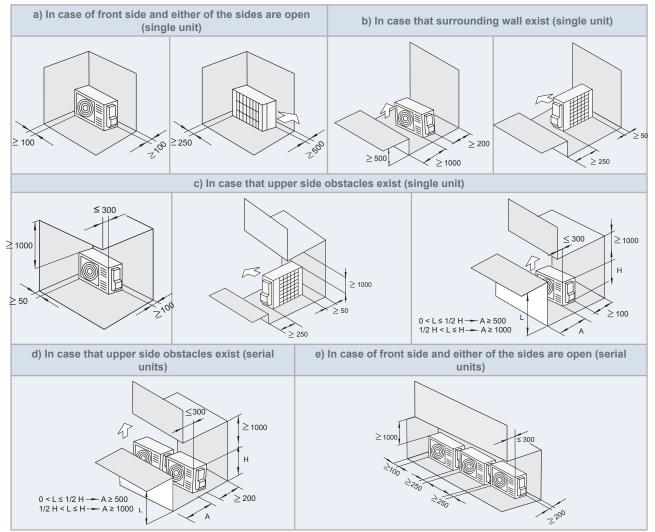


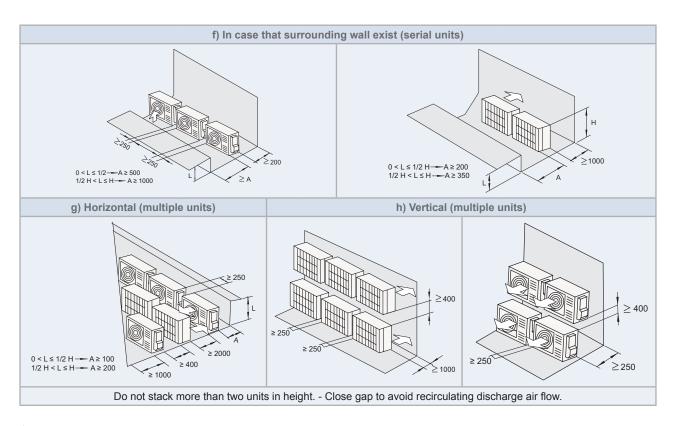


# ◆ RAS-(4-10)WH(V)NPE

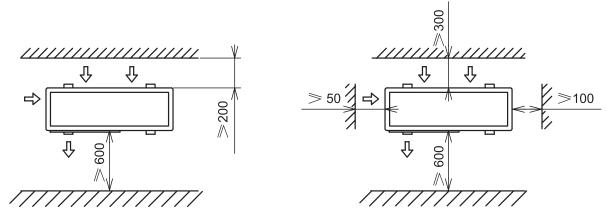


Units in mm.

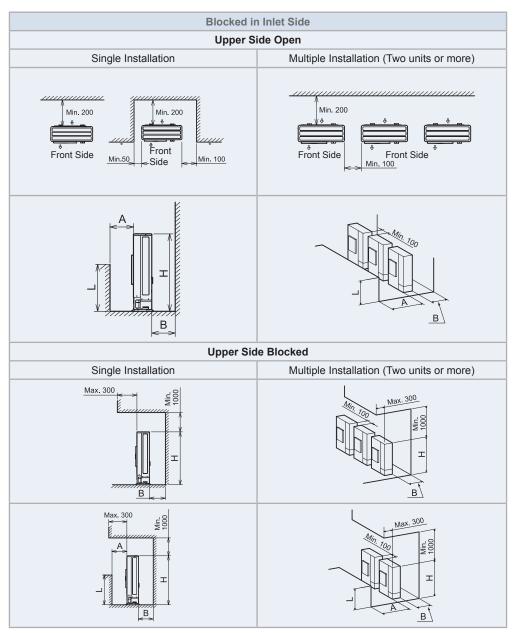

Outlet Side	Blocked
Upper Side	e Open
Single Installation	Multiple Installation (Two units or more)
Min. 100 Min. 50	*** **** *** *** *** *** *** *** *** *
	Allo, 150 B

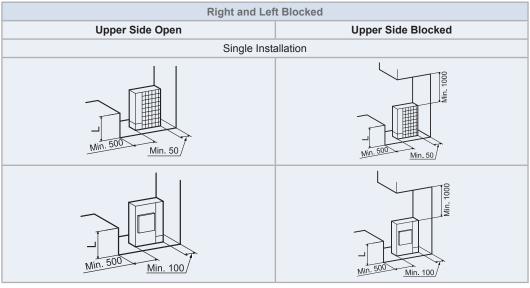

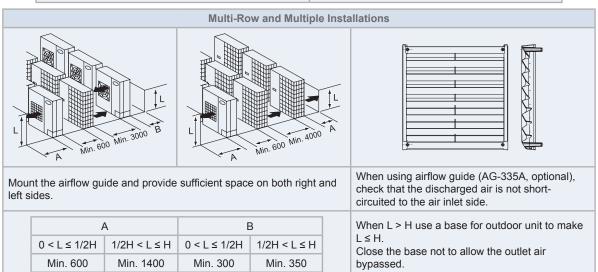

## 6.2.2 Split system - Indoor unit

## 6.2.2.1 YUTAKI S


## ◆ RWM-(2.0-10.0)(N/R)1E

# H: 1200~1500 mm

Recommended unit height for proper access to the control unit panel (Unit controller).

h: 350 mm


Minimum unit height for installing the shut-off valves and the first bending pipe line.

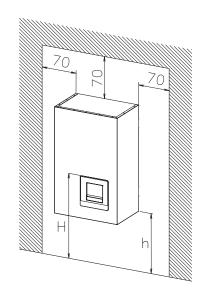


Units in mm.

# 6.2.2.2 YUTAKI S COMBI

# **♦** RWD-(2.0-6.0)(N/R)W1E-220S(-K)

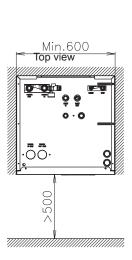

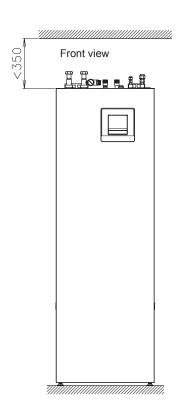

Units in mm.

# 7. Refrigerant cycle and hydraulic circuit


# Index

7.1	Refrigerant cycle and hydraulic circuit for Split system	. 98
	7.1.1 Outdoor units	. 98
	7.1.2 Indoor units	100

# 7.1 Refrigerant cycle and hydraulic circuit for Split system

# 7.1.1 Outdoor units

# **♦ RAS-(2-3)WHVRP1**

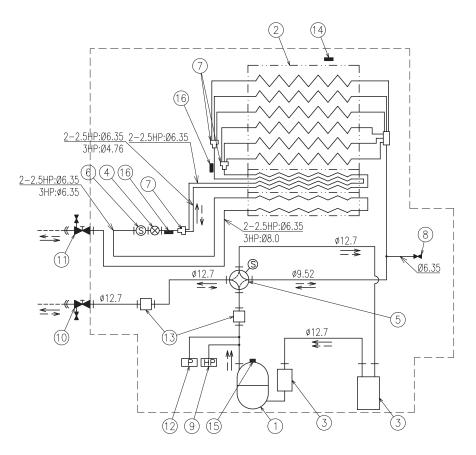


<del>-</del>		$\Rightarrow$		<b>→</b>	-	Refrigerant
Heating refrigerant flow	Cooling refrigerant flow	Water flow (Heating/Cooling)	Field supplied piping line	Flare nut connection	Brazed connection	R32

Nº	Part name		
1	Compressor		
2	Air side heat exchanger		
3	Accumulator		
4	OU electronic expansion valve		
5	4-way valve		
6	Refrigerant strainer		
7	Distributor		
8	Refrigerant check joint		

Nº	Part name			
9	High pressure switch for protection			
10	Stop valve for gas line			
11	Stop valve for liquid line			
12	Pressure switch for control			
13	Silencer (only for 3 HP)			
14	Ambient thermistor			
15	Discharge gas thermistor			
16	Pipe thermistor			

### **♦** RAS-(4-10)WH(V)NPE

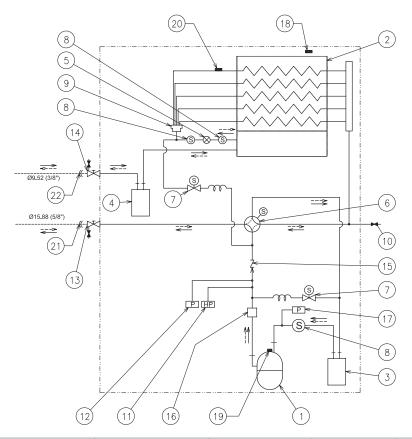

-		$\Rightarrow$		<b>→</b> )—	-	Refrigerant
Heating refrigerant flow	Cooling refrigerant flow	Water flow (Heating/Cooling)	Field supplied piping line	Flare nut connection	Brazed connection	R410A


N1	Part name			
1	Compressor			
2	Air side heat exchanger			
3	Accumulator			
4	Receiver			
5	OU electronic expansion valve			
6	4-way valve			
7	Solenoid gas for by-pass			
8	OU refrigerant strainer			
9	Distributor			
10	Refrigerant check joint			
11	High pressure switch for protection			

N1	Part name
12	Sensor for refrigerant pressure
13	Stop valve for gas line
14	Stop valve for liquid line
15	Check valve
16	Silencer
17	Pressure switch for control
18	Ambient thermistor
19	Discharge gas thermistor
20	Pipe thermistor
21 OU refrigerant gas connection	
22	OU refrigerant liquid connection

### 7.1.2 Indoor units

### **♦ YUTAKI S**

### RWM-(2.0-3.0)R1E

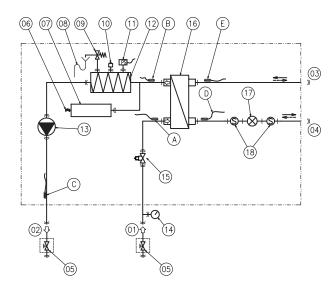


<del>-</del>		$\Rightarrow$		<b>→</b>	-	Refrigerant
Heating refrigerant flow	Cooling refrigerant flow	Water flow (Heating/Cooling)	Field supplied piping line	Flare nut connection	Brazed connection	R32

Nº	Part name				
1	Water inlet connection (1-1/4")				
2	Water outlet connection (1-1/4")				
3	IU refrigerant gas connection				
4	IU refrigerant liquid connection				
5	Shut-off valve (1-1/4")				
6	Drain for expansion vessel				
7	Expansion vessel				
8	Drain pipe (field supplied)				
9	Safety valve				
10	Air purger				
11	Water pressure sensor				
12	Water Electric Heater				

Nº	Part name
13	Water pump
14	Manometer
15	Filter Valve
16	Water side heat exchanger
17	Indoor Electronic Expansion valve (EVI)
18	Refrigerant strainer
Α	Water inlet thermistor (THM <sub>wi</sub> )
В	Water outlet heat pump thermistor (THM <sub>whp</sub> )
С	Water outlet thermistor (THM <sub>wo</sub> )
D	Liquid pipe thermistor (Heating)
Е	Gas pipe thermistor (Heating)

### RWM-(4.0-10.0)N1E

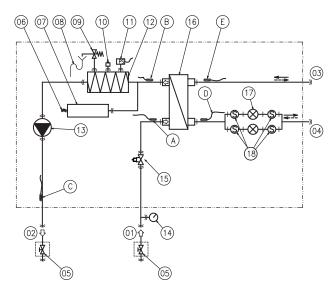


-		$\Rightarrow$		——————————————————————————————————————	-	Refrigerant	
Heating refrigerant flow	Cooling refrigerant flow	Water flow (Heating/Cooling)	Field supplied piping line	Flare nut connection	Brazed connection	R410A	

Nº	Part name					
1	Water inlet connection (1")					
2	Water outlet connection (1")					
3	IU refrigerant gas connection					
4	IU refrigerant liquid connection					
5	Shut-off valve (1")					
6	Drain for Expansion vessel					
7	Expansion vessel					
8	Drain pipe (field supplied)					
9	Safety valve					
10	Air purger					
11	Water pressure sensor					
12	Water Electric Heater					

Nº	Part name
13	Water pump
14	Manometer
15	Filter Valve
16	Water side heat exchanger
17	Indoor Electronic Expansion valve (EVI)
18	Refrigerant strainer
Α	Water inlet thermistor (THM <sub>wi</sub> )
В	Water outlet heat pump thermistor (THM <sub>whp</sub> )
С	Water outlet thermistor (THM <sub>wo</sub> )
D	Liquid pipe thermistor (Heating)
Е	Gas pipe thermistor (Heating)

### **♦ YUTAKI S COMBI**

### RWD-(2.0-6.0)(N/R)W1E-220S(-K)

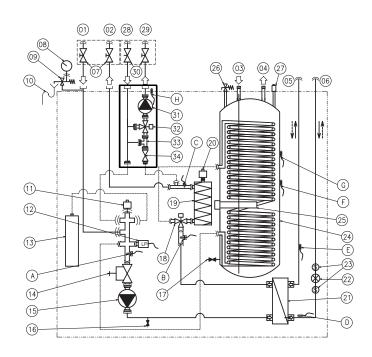

-	_		ightharpoonup		<b>→</b> )–	-	Refrigerant
Heating refrig	gerant flow	Cooling refrigerant flow	Water flow (Heating/Cooling)	Field supplied piping line	Flare nut connection	Brazed connection	R32 R410A

Nº	Part name				
1	Water inlet connection (1")				
2	2 Water outlet connection (1")				
3	Water inlet (DHW)				
4	Water outlet (DHW)				
5	IU refrigerant gas connection				
6	IU refrigerant liquid connection				
7	Shut-off valve (1")				
8	Manometer				
9	Safety valve				
10	Drain pipe (field supplied)				
11	Air purger				
12	Water pressure sensor				
13	Expansion vessel				
14 Filter Valve					
15	Water pump				
16	Drain port (for IU water)				

Nº	Part name
17	Drain port (for DHW)
18	3-way valve
19	Water Electric Heater
20	Air purger
21	Water side heat exchanger
22	Indoor Electronic Expansion valve (EVI)
23	Refrigerant strainer
24	Domestic hot water tank (DHWT)
25	DHWT electric heater
26	P & T relief valve (For UK market)
27	Active Anode (Accessory)
28	2nd Zone Water inlet connection (quick connection)
29	2nd Zone Water outlet connection (quick connection)

Nº	Part name			
30	Shut-off valve (1") (field accessory)			
31	Water pump 2 (accessory)			
32	Mixing Valve (accessory)			
33	T-branch (accessory)			
34	Detentor (accessory)			
Α	Water inlet thermistor (THM <sub>wi</sub> )			
В	Water outlet heat pump thermistor (THM <sub>whp</sub> )			
С	Water outlet thermistor (THM <sub>wo</sub> )			
D	Liquid pipe thermistor (Heating)			
Е	Gas pipe thermistor (Heating)			
F	DHW thermistor 1 (Bottom)			
G	DHW thermistor 2 (Top)			
Н	Water outlet 2nd Zone thermistor (THM <sub>wo2</sub> ) (accessory)			

# 8. Refrigerant and water piping

### Index

8.1	General notes before performing piping work	104
	8.1.1 Piping work	104
	8.1.2 Suspension of refrigerant and water pipes	104
8.2	R32 refrigerant circuit	105
	8.2.1 General notes R32 refrigerant	105
	8.2.2 Refrigerant piping	105
	8.2.3 Refrigerant charge	107
	8.2.3.1 Refrigerant charge amount	107
	8.2.3.2 Refrigerant charge before shipment (W <sub>0</sub> (kg))	107
8.3	R410A refrigerant circuit	107
	8.3.1 Refrigerant charge	107
	8.3.2 Refrigerant piping	107
	8.3.3 Refrigerant charge	108
	8.3.3.1 Refrigerant charge amount	108
	8.3.3.2 Refrigerant charge before shipment (W <sub>0</sub> (kg))	108
	8.3.4 Precautions in the event of gas refrigerant leaks	108
8.4	Space heating and DHW	110
	8.4.1 Additional hydraulic necessary elements for space heating	110
	8.4.2 Additional hydraulic necessary elements for DHW	111
	8.4.3 Additional hydraulic optional elements (For DHW)	113
	8.4.4 Additional hydraulic necessary elements for DHW (only for UK market)	113
	8.4.5 Requirements and recommendations for the hydraulic circuit	114
	8.4.6 Water piping	115
	8.4.7 Water quality	116

### 8.1 General notes before performing piping work


### 8.1.1 Piping work

- · Prepare locally-supplied copper pipes.
- · Select the piping size with the correct thickness and correct material able to withstand sufficient pressure.
- Select clean copper pipes. Make sure that there is no dust or moisture inside the pipes. Blow the inside of the pipes
  with oxygen free nitrogen to remove any dust and foreign materials before connecting them.



A system with no moisture or oil contamination will give maximum performance and lifecycle compared to that of a poorly prepared system. Take particular care to ensure that all copper piping is clean and dry internally.


- Cap the end of the pipe when pipe is to be inserted through a wall hole.
- · Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe.




- If piping installation is not completed until next day or over a longer period of time, braze off the ends of the piping and charge with oxygen free nitrogen through a Schrader valve type access fitting to prevent moisture and particle contamination.
- It is advisable to insulate the water pipes, joints and connections in order to avoid heat loss and dew condensation on the surface of the pipes or accidental injures due to excessive heat on piping surfaces.
- Do not use insulation material that contains NH<sub>3</sub>, as it can damage copper pipe material and become a source of future leakage.
- · It is recommended to use flexible joints for the water piping inlet and outlet in order to avoid vibration transmission.
- Refrigerant circuit and Water circuit must be performed and inspected by a licensed technician and must comply with all relevant European and national regulations.
- Proper water pipe inspection should be performed after piping work to assure there is no water leakage in the space heating or DHW circuits.

### 8.1.2 Suspension of refrigerant and water pipes

Suspend the refrigerant and water piping at certain points and prevent the refrigerant and water piping from being
in direct contact with the building: walls, ceilings, etc.. If there is direct contact between pipes, abnormal sound may
occur due to the vibration of the piping. Pay special attention in cases of short piping lengths.

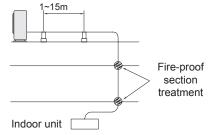

Do not fix the refrigerant and water pipes directly with the metal fittings (refrigerant piping may expand and contract). Some examples for suspension method are shown below.



### 8.2 R32 refrigerant circuit

### 8.2.1 General notes R32 refrigerant

This appliance is filled with R32, an odourless flammable refrigerant gas with low burning velocity (A2L class pursuant to ISO 817). If the refrigerant is leaked, there is a possibility of ignition if it enters in contact with an external ignition source.

Make sure that unit installation and refrigerant piping installation comply with applicable legislation in each country. Also, in Europe, EN378 must be complied, as it is the applicable standard.

### 8.2.2 Refrigerant piping

### Refrigerant piping length between indoor unit and outdoor unit

The unit installation and refrigerant piping should comply with the relevant local and national regulations for the designed refrigerant.

Due to R32 refrigerant and depending on final refrigerant charge amount, a minimum floor area for installation must be considered.

- If total refrigerant charge amount <1.84kg, there are no additional minimum floor area requirements.
- If total refrigerant charge amount ≥1.84kg, there are additional minimum floor area requirements to be checked.

New YUTAKI R32 range (2-3)HP due to low refrigerant charge amount and due to low additional charge needed, unit installation can achieve up to 30m (\*27m for 3HP) without any minimum floor area requirement.

		2HP	2.5HP	3НР	
Factory Charge	kg	1.20	1.30	1.30	
Charge-less piping length		m	10	10	10
Additional Charge needed		g/m	15	15	30
Maximum piping	m	30	30	27	
Maximum total refrigerant charg	kg	1.50	1.60	1.81	
Minimum room area requiremen	t (Amin)	m <sup>2</sup>	No requirement is needed		
Minimum piping length between	outdoor unit and indoor unit (Lmin)	m		3	
Maximum height difference between indoor and outdoor unit (H)					
Outdoor unit higher than indoor unit		m		0 (2/2.5HP) 27 (3HP)	
Indoor unit higher than outdoor unit m 20		20			

In case of increasing more than 30m (27m for 3HP) a minimum floor area requirement must be considered.

		2HP	2.5HP	3HP (*)	
Factory Charge	kg	1.20	1.30	1.30	
Charge-less piping length		m	10	10	10
Additional Charge needed		g/m	15	15	30
Maximum piping		m	50	50	40
Maximum total refrigerant charg	kg	1.80	1.90	2.20	
Minimum room area requiremen	m²	No requirement is needed	Minimur requ	n area is uired	
Minimum piping length between	m		3		
Maximum height difference betw	veen indoor and outdoor unit (H)				
	m		30		
	m		20		




(\*) In case of 3HP with piping length >27m, refrigerant piping diameter and additional charge quantity must be considered.



### ◆ Minimum area requirements

In case of total refrigerant amount ≥1.84 kg, the unit should be installed, operated and stored in a room with a floor area larger than the minimum criteria. Use following graphic and table to determine these minimum criteria:

Refrigerant Amount (kg)	Minimum Area (m²) (H:2.2m)
1.84	28.81
1.9	30.72
2.0	34.09
2.1	37.53
2.2	41.19
2.3	45.02
2.4	49.02
2.5	53.19
2.6	57.53
2.7	62.04
2.8	66.72
2.9	71.58

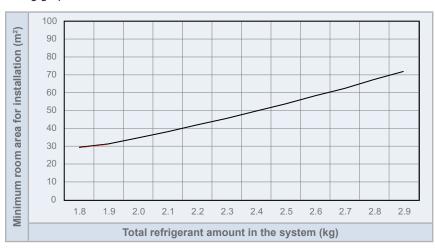



In case of not achieving the minimum floor area, contact with your dealer.

### **♦** Refrigerant piping size

Piping connection size of outdoor unit & indoor unit

		Outdoo	Outdoor unit		Refrigerant pipe		r Unit
Model	Piping	Pipe Conne	ection size	(Between Out Indoo		Pipe Conne	ection size
	length	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
2HP	3~50m	Ø 40 7 (4/0")	Ø 6.35 (1/4")	Ø 12.7	Ø 6.35	Ø 45 00 (5/0") (*)	Ø 6.35 (1/4")
2.5HP	3~50m	Ø 12.7 (1/2")	Ø 6.35 (1/4 )	Ø 12.7	9 6.35	Ø 15.88 (5/8") (*)	Ø 9.52 (3/8") (*)
3HP	3~27m	Ø 15.88 (5/8") (*)	Ø 9.52 (3/8") (*)	Ø 15.88	Ø 6.35	Ø 15.88 (5/8")	Ø 9.52 (3/8") (*)
SHP	27~40m	Ø 15.88 (5/8")	Ø 9.52 (3/8")	Ø 15.88	Ø 9.52	Ø 15.88 (5/8")	Ø 9.52 (3/8") (*)



(\*): The refrigerant gas and liquid piping size for 2/2.5/3HP are different between outdoor and indoor unit, so refrigerant pipe adapters are required. These pipe adapters are factory supplied with the outdoor unit:

Model	Pipe adapter		
Model	Gas pipe	Liquid pipe	
2 HP	Ø15.88→Ø12.7	-	
2.5 HP	Ø15.88→Ø12.7	Ø9.52→Ø6.35	
3 HP	-	Ø9.52→Ø6.35 (x2)	

### 8.2.3 Refrigerant charge

### 8.2.3.1 Refrigerant charge amount

The R32 refrigerant is factory charged in the outdoor unit with a refrigerant charge amount for 10 m of piping length between outdoor and indoor unit.

### 8.2.3.2 Refrigerant charge before shipment (W<sub>0</sub> (kg))

Outdoor unit model	W <sub>o</sub> (kg)
RAS-2WHVRP1	1.2
RAS-2.5WHVRP1	1.3
RAS-3WHVRP1	1.3

### 8.3 R410A refrigerant circuit

### 8.3.1 Refrigerant charge

The R410A refrigerant is factory charged in the outdoor unit.




Refer to the outdoor unit Installation and operation manual to charge the R410A refrigerant.

### 8.3.2 Refrigerant piping

### ◆ Refrigerant piping length between indoor unit and outdoor unit

The refrigerant piping length between indoor unit and outdoor unit should be designed using the following chart.

Keep the design point within the area of the chart, which is showing the applicable height difference according to piping length.

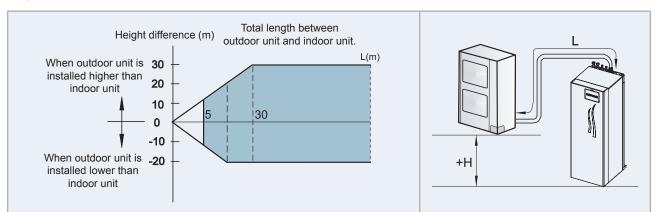

Outdoor Unit (HP)			5	6	8	10
Maximum piping length between	Maximum piping length between Actual piping length (L)		75 m		70	m
outdoor unit and indoor unit (Lmax)	Equivalent piping length		95 m		90	m
Minimum piping length between outdoor unit and indoor unit (Lmin)  Actual piping length (L)  5 m		5 m				
Maximum height difference between	Outdoor unit higher than indoor unit	it 30 m				
indoor and outdoor unit (H)	Indoor unit higher than outdoor unit			20 m		



### Refrigerant piping size

Piping connection size of outdoor unit & indoor unit

Outdoor unit				Indoor unit	
Model	Pipe size		Model	Pipe size	
Model	Gas pipe	Liquid pipe	Model	Gas pipe	Liquid pipe
(4-6) HP	Ø 15.88 (5/8")	Ø 9.52 (3/8")	(4.0-6.0) HP	Ø 15.88 (5/8")	Ø 9.52 (3/8")
8 HP	Ø 25 4 (4")	Ø 9.52 (3/8")	8 HP	Ø 25 4 (4")	Ø 9.52 (3/8")
10 HP	Ø 25.4 (1")	Ø 12.7 (1/2")	10 HP	Ø 25.4 (1")	Ø 12.7 (1/2")



For 8 and 10 HP, the gas pipe accessory with a flare nut (factory-supplied silencer) shall be brazed to the field supplied gas line, and connected to the gas valve.

### 8.3.3 Refrigerant charge

### 8.3.3.1 Refrigerant charge amount

The R410A refrigerant is factory charged in the outdoor unit with a refrigerant charge amount for 15 m of piping length between outdoor and indoor unit.

### 8.3.3.2 Refrigerant charge before shipment (W<sub>0</sub> (kg))

Outdoor unit model	W <sub>o</sub> (kg)
RAS-4WH(V)NPE	3.3
RAS-(5/6)WH(V)NPE	3.4
RAS-8WHNPE	5.0
RAS-10WHNPE	5.3

### 8.3.4 Precautions in the event of gas refrigerant leaks

The installers and those responsible for drafting the specifications are obliged to comply with local safety codes and regulations in the case of refrigerant leakage.



- Check for refrigerant leakage in detail. If a large refrigerant leakage occurred, it would cause difficulty with breathing or harmful gases would occur if a fire were in the room.
- If the flare nut is tightened too hard, it may crack over time and cause refrigerant leakage.

### **Maximum permitted concentration of HFCs**

The refrigerant R410A (charged in the outdoor unit) is incombustible and non-toxic gases. However, if leakage occurs and gas fills a room, it may cause suffocation.

The maximum permissible concentration of HFC gas according to EN378-1 is:

Refrigerant	Maximum permissible concentration (kg/m³)
R410A	0.44

The minimum volume of a closed room where the system is installed to avoid suffocation in case of leakage is:

System	Minimum volume (m³)	
YUTAKI (S / S COMBI)	4 HP	7.5
	5/6 HP	7.8
YUTAKI S	8 HP	11.4
	10 HP	12.1

The formula used for the calculation of the maximum allowed refrigerant concentration in case of refrigerant leakage is the following:

R —= C	R: Total quantity of refrigerant charged (kg) V: Room volume (m³)
V	C: Refrigerant concentration

If the room volume is below the minimum value, some effective measure must be taken account after installing to prevent suffocation in case of leakage.

### Countermeasure in the event of possible refrigerant leakage


The room must have the following features to prevent suffocation in case a refrigerant leakage occurs:

- 1 Provide a shutterless opening which will allow fresh air to circulate into the room.
- 2 Provide a doorless opening of 0.15% or more size to the floor area.
- 3 There must be a ventilator fan connected to a gas leak detector, with a ventilator capacity of 0.4 m³/min or higher per Japanese refrigeration ton (= compressor displacement volume / (5.7 m³/h (R410A)) of the air conditioning system using the refrigerant.

Model	Tonnes
RAS-(4-6)WH(V)NPE	2.27
RAS-8WHNPE	3.16
RAS-10WHNPE	4.11

4 Pay special attention to the place, such as a basement, etc., where the refrigerant can stay, since refrigerant is heavier than air.

Example:

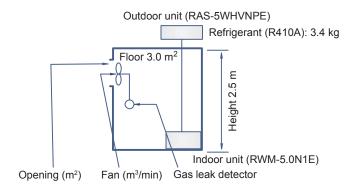

R (kg)	V (m³)	C (kg/m³)	Countermeasure
3.4	7.5	0.46	1.0 m³/min fan linked with gas leak detector or 0.5 m² opening


### 8.4 Space heating and DHW



### DANGER

Do not connect the power supply to the indoor unit prior to filling the space heating and DHW circuits with water and checking water pressure and the total absence of any water leakage.

### 8.4.1 Additional hydraulic necessary elements for space heating

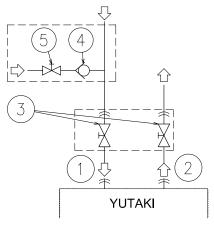

Туре	Nº	Part name
Piping connections	1	Water inlet (Space heating)
Piping connections	2	Water outlet (Space heating)
Factory supplied	3	Shut-off valve (factory-supplied)
Accessories	4	Water check valve (ATW-WCV-01 accessory)
Field supplied	5	Shut-off valve

The following hydraulic elements are necessary to correctly perform the space heating water circuit:


- Two shut-off valves (factory supplied accessory) (3) must be installed in the indoor unit. One at the water inlet connection (1) and the other at the water outlet connection (2) in order to make easier any maintenance work.
- A water check valve (ATW-WCV-01 accessory) (5) with 1 shut-off valve (field supplied) (4) must be connected to the water filling point when filling the indoor unit. The check valve acts as a safety device to protect the installation against back pressure, back flow and back syphon of non-potable water into drinking water supply net.

### 8.4.2 Additional hydraulic necessary elements for DHW

The next hydraulic elements are necessary to correctly perform the domestic hot water circuit:

### **◆** COMMON

The following elements are required for all YUTAKI units.

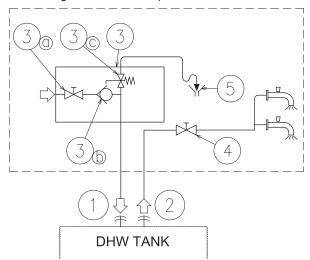


Туре	Nº	Part name			
Piping	1	Water inlet (DHW)			
connections	2	2 Water outlet (DHW)			
	3	Press	Pressure and temperature relief valve		
		3a	Shut-off valve		
Field aupplied		3b	Water check valve		
Field supplied		3c	Pressure relief valve		
	4	Shut-off valve			
	5	Draini	ng		

- 1 Shut-off valve (field supplied): one shut-off valve (4) must be connected after the DHW outlet connection of the DHW tank (2) in order to make easier any maintenance work.
- A Security water valve (Field-supplied): this accessory (3) is a pressure and temperature relief valve that must be installed as near as possible to the DHW inlet connection of the DHW tank (1). It should ensure a correct draining (5) for the discharge valve of this valve. This security water valve should provide the following:
  - Pressure protection
  - Non-return function
  - Shut-off valve
  - Filling
  - Draining



The discharge pipe should always be open to the atmosphere, free of frost and in continuous slope to the down side in case that water leakage exists.

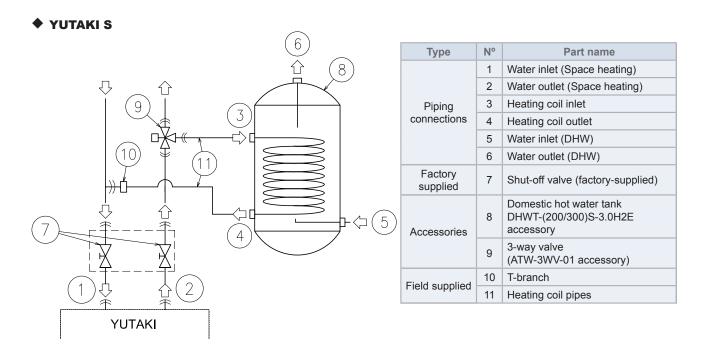

YUTAKI S is not factory-supplied ready for DHW operation, but they can be used for the production of DHW if the following elements are installed:


- A domestic hot water tank (DHWT-(200/300)S-3.0H2E accessory) (8) has to be installed in combination with the indoor unit.
- A 3-way valve (ATW-3WV-01 accessory) (9) must be connected at one point of the water outlet pipe of the installation.
- A T-branch (field supplied) (10) must be connected at one point of the water inlet pipe of the installation.
- Two water pipes (field supplied) (11). One pipe between 3-way valve and the heating coil inlet (3) of the DHW tank, the other one between the T-branch and the heating coil outlet (4) of the DHW tank.

### **♦ YUTAKI S COMBI**

YUTAKI S COMBI is factory-supplied ready for DHW operation (Fitted with DHW tank and 3-way valve). Only the "Common" elements are required.

### 8.4.3 Additional hydraulic optional elements (For DHW)


In case of a recirculation circuit for the DHW circuit:

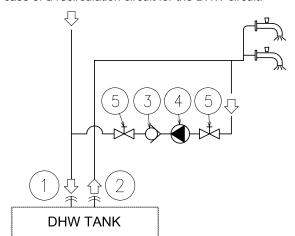

Type	Nº	Part name
Dining connections	1	Water inlet (DHW)
Piping connections	2	Water outlet (DHW)
Accessories 3		Water check valve (ATW-WCV-01 accessory)
Field econolised	4	Water pump
Field supplied	5	Shut-off valve

- 1 Recirculation water pump (field supplied): this water pump (3) will help to correctly recirculate the hot water to the DHW inlet.
- 1 Water check valve (ATW-WCV-01 accessory): this Hitachi accessory (4) is connected after the recirculation water pump (31) in order to ensure the non-return of water.
- 2 Shut-off valves (field supplied) (5): one before the recirculation water pump (3) and other after the water check valve accessory (4).

### 8.4.4 Additional hydraulic necessary elements for DHW (only for UK market)

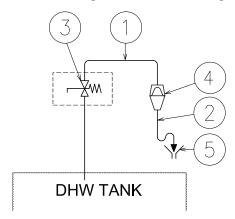

Туре	Nº	Part name
Piping connections	1	T&P relief valve outlet pipe Ø15 (factory supplied)
	2	Tundish outlet pipe (Field supplied)
Accessories	3	Pressure and Temperature relief valve (Factory supplied)
Field aupplied	4	Tundish (Field supplied)
Field supplied	5	Drain (Field supplied)

The following accessories are necessary for the compliance of the YUTAKI S COMBI for UK market with the UK requirements referred in the UK Building Regulations 2000.

- 1 temperature and pressure relief valve (factory supplied), fitted at the hottest part of the DHW tank. This device protects the unit of excessive temperature (>96° C) and excessive pressure (>7 bar) in the DHW tank. Additionally, a Ø15 diameter pipe (factory supplied) is fitted to the outlet of the relief valve and drives the discharge to the tundish (4).
- 1 Tundish(4)(field supplied), installed in a vertical position, with no more than 600 mm of pipe between the valve outlet and the tundish.
- 1 Tundish outlet pipe (2)(field supplied) with a vetical section at least 300 mm long below the tundish(4), before any elbows or bends in the pipework. This pipe should be made of metal or other material that has been demonstrated to be capable of safety withstanding temperatures and pressure of the water discharged, as it is refferred in the UK Building Regulations.
- The discharge pipe from the tundish (2) must terminate in a safe place where is no risk to persons in the vicinity of the discharge. the discharge will consist of high water temperature and pressure.

### 8.4.5 Requirements and recommendations for the hydraulic circuit

- The maximum piping length depends on the maximum pressure availability in the water outlet pipe. Please check the pump curves.
- The indoor unit is equipped with an air purger (factory supplied) at the highest location of the Indoor Unit. If this location is not the highest of the water installation, air might be trapped inside the water pipes, which could cause system malfunction. In that case additional air purgers (field supplied) should be installed to ensure no air enters the water circuit.
- · For heating floor system, the air should be purged by means of an external pump and an open circuit to avoid air
- When the unit is stopped during shut-off periods and the ambient temperature is very low, the water inside the pipes and the circulating pump may freeze, thus damaging the pipes and the water pump. In these cases, the installer shall ensure that the water temperature inside the pipes does not fall below the freezing point. In order to prevent this, the unit has a self-protection mechanism which should be activated (refer to the Service manual, "Optional functions" chapter).
- Check that the water pump of the space heating circuit works within the pump operating range and that the water flow is over the pump's minimum. If the water flow is below 6 litres/minute for 2.0/2.5/3.0HP units or 12 litres/minute for 4.0/5.0/6.0 units, alarm is displayed on the unit.
- An additional special water filter is highly recommended to be installed on the space heating (field installation), in order to remove possible particles remaining from brazing which cannot be removed by the indoor unit water strainer.
- When selecting a DHW tank, take into consideration the following points:
  - The storage capacity of the tank has to meet with the daily consumption in order to avoid stagnation of water.
  - Fresh water must circulate inside the DHW tank water circuit at least one time per day during the first days after the installation has been performed. Additionally, flush the system with fresh water when there is no consumption of DHW during long periods of time.
  - Try to avoid long runs of water piping between the tank and the DHW installation in order to decrease possible temperature losses.
  - If the domestic cold water entry pressure is higher than the equipment's design pressure (6 bar), a pressure reducer must be fitted with a nominal value of 7 bar.
- Ensure that the installation complies with applicable legislation in terms of piping connection and materials, hygienic measures, testing and the possible required use of some specific components like thermostatic mixing valves, Differential pressure overflow valve, etc.
- The maximum water pressure is 3 bar (nominal opening pressure of the safety valve). Provide adequate reduction pressure device in the water circuit to ensure that the maximum pressure is NOT exceeded.
- Ensure that the drain pipes connected to the safety valve and to the air purger are properly driven to avoid water being in contact with unit components.
- Make sure that all field supplied components installed in the piping circuit can withstand the water pressure and the water temperature range in which the unit can operate.
- YUTAKI units are conceived for exclusive use in a closed water circuit.
- The internal air pressure of the expansion vessel tank will be adapted to the water volume of the final installation (factory supplied with 0.1 MPa of internal air pressure).
- Do not add any type of glycol to the water circuit.
- Drain taps must be provided at all low points of the installation to permit complete drainage of the circuit during servicing.

### 8.4.6 Water piping

### **♦** Water piping length

Consider the following guidelines when designing the water circuit.

Item	YUTAKI S	YUTAKI S COMBI
Maximum water piping length between indoor unit and DHW tank	10 m	
Maximum water piping length between indoor unit and 3-way valve	3 m	
Maximum water piping length between 3-way valve and DHW tank	10 m	



DHW Piping length. It is recommended to avoid long runs of piping between the domestic hot water tank and hot water outlet side in order to avoid heat losses.

### **♦** Water piping size

### **YUTAKI S**

(inches)

	Space heating pipes connection					
Model	Inlet connection	Outlet connection	Shut-off valves			
(2.0-3.0)HP	G 1"	G 1"	G 1" (male) -			
	(female)	(female)	G 1" (male)			
(4.0-10.0)HP	G 1-1/4"	G 1-1/4"	G 1-1/4" (male) -			
	(female)	(female)	G 1-1/4" (male)			

### YUTAKI S COMBI

(inches)

	Spa	ce heating co	nnection	DHW connection		
Model	Inlet connection	Outlet connection	Shut-off valves	Inlet connection	Outlet connection	P & T relief valve (*)
(2.0-3.0)HP	G 1" (female)	G 1" (female)	G 1" (male) - G 1" (male)	G 3/4" (female)	G 3/4" (female)	Ø15 mm
(4.0-6.0)HP	G 1-1/4" (female)	G 1-1/4" (female)	G 1-1/4" (male) - G 1-1/4" (male)	G 3/4" (female)	G 3/4" (female)	Ø15 mm

(\*): Only for models for UK market.

### 8.4.7 Water quality



- Water quality must be according to EU council directive 98/83 EC.
- Water should be subjected to filtration or to a softening treatment with chemicals before application as treated water.
- It is also necessary to analyse the quality of water by checking pH, electrical conductivity, ammonia ion content, sulphur content, and others. Should the results of the analysis be not good, the use of industrial water would be recommended.
- No antifreeze agent shall be added to the water circuit.
- To avoid deposits of scale on the heat exchangers surface it is mandatory to ensure a high water quality with low levels of CaCO<sub>x</sub>.

### **Recommendations for the DHW circuit**

The following is the recommended standard water quality.

Item	DHW space	Tendency (1)		
item	Water supplied (3)	Corrosion	Deposits of scales	
Electrical Conductivity (mS/m) (25°C) {µS/cm} (25 °C) (2)	100~2000	•	•	
Chlorine Ion (mg Cl-/I)	max. 250	•		
Sulphate (mg/l)	max. 250	•		
Combination of chloride and sulphate (mg/l)	max. 300	•	•	
Total Hardness (mg CaCO <sub>3</sub> /I)	60~150		•	



- (1): The mark "o" in the table means the factor concerned with the tendency of corrosion or deposits of scales.
- (2): The value shown in "{}" are for reference only according to the former unit.
- (3): Water range will be according s/UNE 112076:2004 IN.

# 9. Electrical and control settings

### Index

9.1	General check	118
	9.1.1 Split system - Outdoor unit	118
	9.1.2 Split system - Indoor unit	118
9.2	System wiring diagram	120
9.3	Electrical connection	121
	9.3.1 Wiring size	121
	9.3.2 Minimum requirements of the protection devices	122
9.4	Transmission wiring	125
	9.4.1 YUTAKI units	125
9.5	Optional indoor unit wiring (accessories)	126
	9.5.1 Summary of the terminal board connections for YUTAKI units	126
9.6	Setting of DIP switches and RSW switches	132
	9.6.1 Outdoor unit	132
	9.6.1.1 Location of DIP switches and rotary switches	132
	9.6.1.2 Function of DIP switches and rotary switches	132
	9.6.1.3 LED indication	135
	9.6.2 YUTAKI unit	136
	9.6.2.1 Location of DIP switches and rotary switches	136
	9.6.2.2 Function of DIP switches and rotary switches	136
	9.6.2.3 LED indication	130

### 9.1 General check

- Make sure that the following conditions related to power supply installation are satisfied:
  - The power capacity of the electrical installation is large enough to support the power demand of the YUTAKI system (outdoor unit + indoor unit + DHW tank (if apply)).
  - The power supply voltage is within ±10% of the rated voltage.
  - The impedance of the power supply line is low enough to avoid any voltage drop of more than 15% of the rated voltage.
- Following the Council Directive 2014/30/EU, relating to electromagnetic compatibility, the table below indicates the Maximum permitted system impedance  $Z_{\text{max}}$  at the interface point of the user's supply, in accordance with EN 61000-3-11.

### 9.1.1 Split system - Outdoor unit

Model	Power supply	Z <sub>max</sub> (Ω)
RAS-2WHVRP1		-
RAS-2.5WHVRP1		-
RAS-3WHVRP1	1~ 230V 50Hz	0.43
RAS-4WHVNPE		0.25
RAS-5WHVNPE		0.25
RAS-6WHVNPE		0.25

Model	Power supply	Z <sub>max</sub> (Ω)
RAS-4WHNPE		-
RAS-5WHNPE		-
RAS-6WHNPE	6WHNPE 3N~ 400V 50Hz	-
RAS-8WHNPE		-
RAS-10WHNPE		-

### 9.1.2 Split system - Indoor unit

### **♦ YUTAKI S**

Model	Power supply	Operation mode	Z <sub>max</sub> (Ω)
		Without electric heaters	-
	4 000\/ 50\	With electric heater	-
	1~ 230V 50Hz	With DHW tank heater	-
RWM-(2.0-3.0)R1E		With electric and DHW tank heaters	0.28
KVVIVI-(2.0-3.0)KTE		Without electric heaters	-
	3N~ 400V 50Hz	With electric heater	-
	3N~ 400V 50H2	With DHW tank heater	-
		With electric and DHW tank heaters	-
		Without electric heaters	-
	1~ 230V 50Hz	With electric heater	0.28
	1~ 230V 50HZ	With DHW tank heater	-
RWM-(4.0-6.0)N1E		With electric and DHW tank heaters	0.19
KVVIVI-(4.0-0.0)IVIL		Without electric heaters	-
	3N~ 400V 50Hz	With electric heater	-
	311 400 7 30112	With DHW tank heater	-
		With electric and DHW tank heaters	-
		Without electric heaters	-
RWM-(8.0-10.0)N1E	3N~ 400V 50Hz	With electric heater	-
1 ( V V IVI- ( O. O- 1 O. O ) I V I L	314 400 7 30112	With DHW tank heater	-
		With electric and DHW tank heaters	-

- The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".
- In case of three phases connection,  $Z_{\max}$  is not considered.

### **♦ YUTAKI S COMBI**

Model	Power supply	Operation mode	Z <sub>max</sub> (Ω)
		Without electric heaters	-
	1~ 230V 50Hz	With electric heater	-
	1~ 230V 50H2	With DHW tank heater	-
RWD-(2.0-3.0)		With electric and DHW tank heaters	0.29
RW1E-220S(-K)		Without electric heaters	-
	3N~ 400V 50Hz	With electric heater	-
	3IN~ 400V 50H2	With DHW tank heater	-
		With electric and DHW tank heaters	-
		Without electric heaters	-
	1~ 230V 50Hz	With electric heater	0.28
	1~ 230V 50H2	With DHW tank heater	-
RWD-(4.0-6.0)		With electric and DHW tank heaters	0.19
NW1E-220S(-K)		Without electric heaters	-
	3N~ 400V 50Hz	With electric heater	-
	31V~ 400V 30HZ	With DHW tank heater	-
		With electric and DHW tank heaters	-

## **i** NOTE

The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".

The status of Harmonics for each model, regarding compliance with EN 61000-3-2 and EN 61000-3-12, is as follows:

Status regarding		Models			
Status regarding compliance with		Split system	Split system		
EN 61000-3-2 and EN 61000-3-12	Outdoor unit	Indoo	or unit		
EN 61000-3-12	Outdoor unit	YUTAKI S	YUTAKI S COMBI		
Equipment complying with EN 61000-3-2 (*): Professional use	RAS-2WHVRP1(*) RAS-2.5WHVRP1(*) RAS-3WHVRP1 (*) RAS-4WHNPE (*) RAS-5WHNPE (*) RAS-6WHNPE (*)	RWM-2.0R1E (1~, 3N~) RWM-2.5R1E (1~, 3N~) RWM-3.0R1E (1~, 3N~) RWM-4.0N1E (3N~) RWM-5.0N1E (3N~) RWM-6.0N1E (3N~) RWM-6.0N1E (3N~) RWM-8.0N1E RWM-10.0N1E	-		
Equipment complying with EN 61000-3-12	RAS-4WH(V)NPE RAS-5WH(V)NPE RAS-6WH(V)NPE	RWM-4.0N1E (1~) RWM-5.0N1E (1~) RWM-6.0N1E (1~)	RWD-2.0R1WE-220S(-K) RWD-2.5R1WE-220S(-K) RWD-3.0R1WE-220S(-K) RWD-4.0NW1E-220S(-K) RWD-5.0NW1E-220S(-K) RWD-6.0NW1E-220S(-K)		
Installation restrictions may be applied by supply authorities in relation to harmonics	RAS-8WHNPE RAS-10WHNPE	-	-		

- Check to ensure that existing installation (mains power switches, circuit breakers, wires, connectors and wire terminals) already complies with the national and local regulations.
- The use of the DHW tank heater is disabled as factory setting. If it is desired to enable the DHW tank heater operation during normal indoor unit operation, adjust the DSW4 pin 3 of the PCB1 to the ON position and use the adequate protections. Refer to the section "9.3 *Electrical connection*" for the detailed information.

### 9.2 System wiring diagram


Connect the units according to the following electric diagram:

TB: Terminal board Field wiring CB : Circuit breaker સુક Field-supplied

ELB : Earth leakage breaker Outdoor-Indoor communication

--- : Internal wiring

### YUTAKI (S / S COMBI)

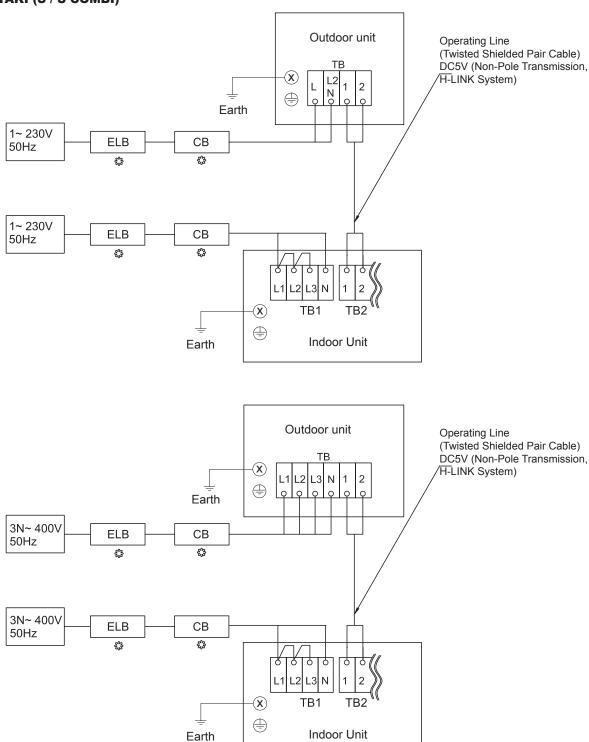



## **A** CAUTION

- Check to ensure that the field supplied electrical components (mains power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated on this chapter and they comply with national and local codes. If it is necessary, contact with your local authority in regards to standards, rules, regulations, etc.
- Use a dedicated power circuit for the indoor unit. Do not use a power circuit shared with the outdoor unit or any other appliance.

### 9.3.1 Wiring size

Use wires which are not lighter than the polychloroprene sheathed flexible cord (code designation 60245 IEC 57).

### ♦ Split system - Outdoor unit

Model	Power supply	Power supply cables	Transmitting cables	Actuator cables
wodei	i ower suppry	EN 60335-1	EN 60335-1	EN 60335-1
RAS-2WHVRP1		2 x 2.5 mm <sup>2</sup> + GND		
RAS-2.5WHVRP1		2 x 2.5 mm <sup>2</sup> + GND		
RAS-3WHVRP1	1~ 230V 50Hz	2 x 4.0 mm <sup>2</sup> + GND		
RAS-4WHVNPE	1~ 230V 30H2	2 x 10.0 mm <sup>2</sup> + GND	2 x 0.75 mm <sup>2</sup> (Shielded cable)	2 x 0.75 mm <sup>2</sup> + GND
RAS-5WHVNPE		2 x 10.0 mm <sup>2</sup> + GND		
RAS-6WHVNPE		2 x 10.0 mm <sup>2</sup> + GND		
RAS-4WHNPE		4 x 4.0 mm² + GND		
RAS-5WHNPE		4 x 4.0 mm² + GND		
RAS-6WHNPE	3N~ 400V 50Hz	4 x 4.0 mm² + GND		
RAS-8WHNPE		4 x 6.0 mm² + GND		
RAS-10WHNPE		4 x 6.0 mm² + GND		

### ◆ Split system - Indoor unit

### **YUTAKI S**

Model	Power supply	Operation mode	Power supply cables	Transmitting cables	Actuator cables
	cappiy		EN 60335-1	EN 60335-1	EN 60335-1
		Without electric heaters	2 x 0.75 mm² + GND		
	1~ 230V	With electric heater	2 x 2.5 mm² + GND		
	50Hz	With DHW tank heater	2 x 2.5 mm² + GND		
DWM (2.0.2.0)D4E		With electric and DHW tank heaters	2 x 6.0 mm² + GND		
RWM-(2.0-3.0)R1E		Without electric heaters	4 x 0.75mm² + GND		
	3N~ 400V	With electric heater	4 x 2.5 mm² + GND		
	50Hz	With DHW tank heater	4 x 4.0 mm² + GND		2 x 0.75mm² +
		With electric and DHW tank heaters	4 x 6.0 mm² + GND		
		Without electric heaters	2 x 0.75 mm² + GND		
	1~ 230V	With electric heater	2 x 6.0 mm² + GND	2 0 75	
	50Hz	With DHW tank heater	2 x 2.5 mm² + GND	2 x 0.75 mm <sup>2</sup>	GND
		With electric and DHW tank heaters	2 x 10.0 mm² + GND		
RWM-(4.0-6.0)N1E		Without electric heaters	4 x 0.75 mm² + GND		
	3N~ 400V	With electric heater	4 x 2.5 mm² + GND		
	50Hz	With DHW tank heater	4 x 2.5 mm² + GND		
		With electric and DHW tank heaters	4 x 6.0 mm² + GND		
		Without electric heaters	4 x 0.75 mm² + GND		
RWM-(8.0-10.0)	3N~ 400V	With electric heater	4 x 4.0 mm² + GND		
N1E	50Hz	With DHW tank heater	4 x 4.0 mm² + GND		
		With electric and DHW tank heaters	4 x 10.0 mm² + GND		



The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300) S-3.0H2E".



### YUTAKI S COMBI

Model	Power supply	Operation mode	Power supply cables	Transmitting cables	Actuator cables
	ouppi)		EN 60335-1	EN 60335-1	EN 60335-1
		Without electric heaters	2 x 0.75 mm <sup>2</sup> + GND		
	1~ 230V	With electric heater	2 x 2.5 mm <sup>2</sup> + GND		cables
	50Hz	With DHW tank heater	2 x 2.5 mm <sup>2</sup> + GND		
RWD-(2.0-3.0)		With electric and DHW tank heaters	2 x 6.0 mm <sup>2</sup> + GND		
RW1E-220S(-K)		Without electric heaters	4 x 0.75 mm <sup>2</sup> + GND		cables  EN 60335-1  2 x 0.75 mm <sup>2</sup>
	3N~ 400V	With electric heater	4 x 2.5 mm <sup>2</sup> + GND		
	50Hz	With DHW tank heater	4 x 2.5 mm <sup>2</sup> + GND		
	W	With electric and DHW tank heaters	4 x 2.5 mm <sup>2</sup> + GND	2 x 0.75 mm <sup>2</sup>	
		Without electric heaters	2 x 0.75 mm <sup>2</sup> + GND		
	1~ 230V	With electric heater	2 x 6.0 mm <sup>2</sup> + GND		
	50Hz	With DHW tank heater	2 x 2.5 mm <sup>2</sup> + GND		
RWD-(4.0-6.0)		With electric and DHW tank heaters	2 x 10.0 mm <sup>2</sup> + GND		EN 60335-1  2 x 0.75 mm <sup>2</sup>
NW1E-220S(-K)		Without electric heaters	4 x 0.75 mm <sup>2</sup> + GND		
	3N~ 400V	With electric heater	4 x 6.0 mm <sup>2</sup> + GND		
	50Hz	With DHW tank heater	4 x 2.5 mm² + GND		cables EN 60335-1  2 x 0.75 mm <sup>2</sup>
		With electric and DHW tank heaters	4 x 6.0 mm <sup>2</sup> + GND		



The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".

### 9.3.2 Minimum requirements of the protection devices



### ⚠ CAUTION

- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (outdoor and indoor unit).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (outdoor and indoor unit).



- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

### **Split system - Outdoor unit**

Model	Dower ounnly	Applicab	e voltage	СВ	ELB
Model	Power supply	U max. (V)	U min. (V)	(A)	(n° of poles/A/mA)
RAS-2WHVRP1				16	
RAS-2.5WHVRP1		253		16	2/40/30
RAS-3WHVRP1	1~ 230V 50Hz		207	20	
RAS-4WHVNPE				32	
RAS-5WHVNPE				32	
RAS-6WHVNPE				32	
RAS-4WHNPE		440	440 360	15	
RAS-5WHNPE				15	
RAS-6WHNPE	3N~ 400V 50Hz			20	
RAS-8WHNPE				25	
RAS-10WHNPE				25	

MC: Maximum current; CB: Circuit breaker; ELB: Earth leakage breaker

### ◆ Split system - Indoor unit

### **YUTAKI S**

	Power	Applicabl	le voltage		СВ	ELB (nº of poles/A/ mA) 2/40/30
Model	supply	U max. (V)	U min. (V)	Operation mode	(A)	
				Without electric heaters	5	
	1~ 230V	253	207	With electric heater	16	(nº of poles/A/mA)
	50Hz	200	207	With DHW tank heater	16	2/40/30
DWM (2.0.2.0)D4E				With electric and DHW tank heaters	32	
RWM-(2.0-3.0)R1E				Without electric heaters	5	(n° of poles/A/mA)  2/40/30  4/40/30  2/63/30  4/40/30
	3N~ 400V	440	360	With electric heater	10	
	50Hz	440	300	With DHW tank heater	20	
				With electric and DHW tank heaters	25	
				Without electric heaters	5	2/40/30 2/40/30 2/63/30
	1~ 230V	253	207	With electric heater	32	
	50Hz	253	207	With DHW tank heater	16	
DWM (4.0.6.0)NI4E				With electric and DHW tank heaters	50	2/63/30
RWM-(4.0-6.0)N1E				Without electric heaters	5	
	3N~ 400V	440	360	With electric heater	15	4/40/20
	50Hz	440	360	With DHW tank heater	15	4/40/30
				With electric and DHW tank heaters	25	
				Without electric heaters	5	
RWM-(8.0-10.0)	3N~ 400V	440	360	With electric heater	20	4/40/20
N1E	50Hz	440	300	With DHW tank heater	20	4/40/30
				With electric and DHW tank heaters	30	



The data corresponding to DHW tank heater is calculated in combination with the domestic hot water tank accessory "DHWT-(200/300)S-3.0H2E".

### **⚠**CAUTION

- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (outdoor and indoor unit).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (outdoor and indoor unit)

# *i* NOTE

- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

### **YUTAKI S COMBI**

	Power	Applicabl	le voltage		СВ	ELB
Model	supply	U max. (V)	U min. (V)	Operation mode	(A)	ELB (nº of poles/A/mA)  2/40/30  4/40/30  2/63/30  4/40/30
				Without electric heaters	5	
	1~ 230V	253	207	With electric heater	16	2/40/20
	50Hz	200	207	With DHW tank heater	16	2/40/30
RWD-(2.0-3.0)-				With electric and DHW tank heaters	32	
RW1E-220S(-K)				Without electric heaters	5	
	3N~ 400V	440	360	With electric heater	15	4/40/30
	50Hz	440	300	With DHW tank heater	15	4/40/30
				With electric and DHW tank heaters	15	
				Without electric heaters	5	(nº of poles/A/mA)  2/40/30  4/40/30  2/40/30  2/63/30
	1~ 230V	253	207	With electric heater	32	
	50Hz	200	207	With DHW tank heater	16	
RWD-(4.0-6.0)				With electric and DHW tank heaters	50	2/63/30
NW1E-220S(-K)				Without electric heaters	5	
	3N~ 400V	440	360	With electric heater	25	4/40/20
	50Hz	440	300	With DHW tank heater	15	(nº of poles/A/mA)  2/40/30  4/40/30  2/40/30  2/63/30
				With electric and DHW tank heaters	25	

# **A**CAUTION

- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (outdoor and indoor unit).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (outdoor and indoor unit)


# i NOTE

- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

### 9.4 Transmission wiring

### 9.4.1 YUTAKI units

- This is the transmission wiring between outdoor and indoor unit, ATW-RTU communication and Central devices.
- The transmission is wired to terminals 1-2.
- The H-LINK II wiring system requires only two transmission cables that connect the indoor unit and the outdoor unit.





- Use twist pair wires (0.75 mm²) for operation wiring between outdoor unit and indoor unit. The wiring must consist of 2-core wires (Do not use wire with more than 3 cores).
- Use shielded wires for intermediate wiring to protect the units from noise interference, with a length of less than 300m and a size in compliance with local codes.
- In the event that a conduit tube for field-wiring is not used, fix rubber bushes to the panel with adhesive.




Ensure that the transmission wiring is not wrongly connected to any live part that could be damaged the PCB.

### 9.5 Optional indoor unit wiring (accessories)

### 9.5.1 Summary of the terminal board connections for YUTAKI units

### **♦ YUTAKI S**

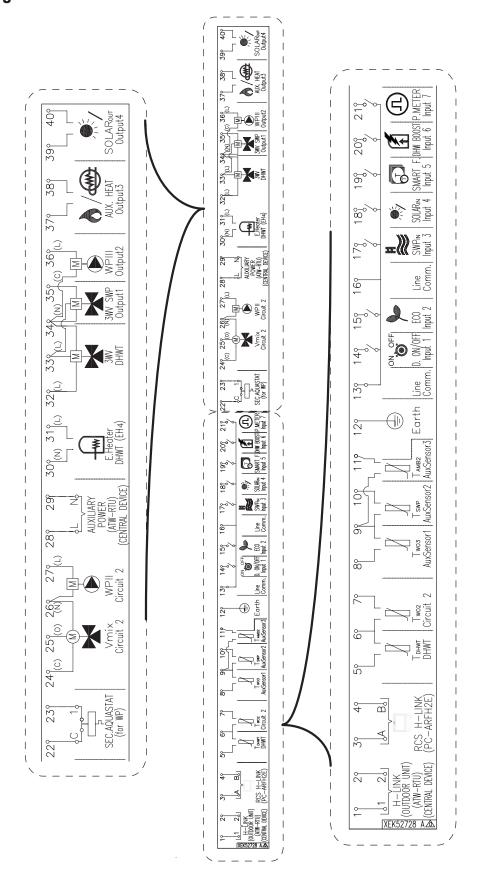


Mark	ark Part name		Description	
			TERMINAL BOARD 1 (TB1)	
N L1	1~ 230V 50Hz			
L2 L3	3N~ 400V 50Hz		Main power supply connection	
LO			TERMINAL BOARD 2 (TB2)	
1	H-LINK commu	tation	The H-LINK transmission has to be done between the indoor unit and the terminals 1-2 of either outdoor unit, ATW-RTU or any other central device.	
3 4	H-LINK commu		Terminals for the connection of the YUTAKI unit controller.	
5	DHW tank's the		The DHW sensor is used to control the temperature of the domestic hot water tank.	
6	Common therm		Common terminal for thermistor.	
7	Thermistor for v		The sensor is used for the second temperature control and should be positioned after the mixing valve and the circulation pump.	
8	Thermistor for v temperature aft separator		Water sensor for hydraulic separator, buffer tank or boiler combination.	
9	Common therm	istor	Common terminal for thermistors.	
10	Thermistor for swater temperate	0.	The sensor is used for the swimming pool temperature control and should be positioned inside plate heat exchanger of the swimming pool.	
11	Thermistor for stemperature	second ambient	The sensor is used for the second ambient temperature control and it should be positioned outdoors.	
12	Earth		Earth connection for the 3 way valve and water pump NEW	
13	Common line		Terminal Line common for input 1 and input 2.	
14	Input 1 (Demand ON/OFF) (*)		The air to water heat pump system has been designed to allow the connection of a remote thermostat to effectively control your home's temperature. Depending on the rotemperature, the thermostat will turn the split air to water heat pump system ON and O	
15	Input 2 (ECO m	ode) (*)	Available signal which allows to reduce the water setting temperature of circuit 1, circuit 2 or both.	
16	Common line		Terminal Line common for inputs 3, 4, 5, 6, 7.	
17	Input 3 (Swimm	ing pool) (*)	Only for swimming pool installations: It is necessary to connect an external input to the air to water heat pump to provide signal when the water pump of swimming pool is ON.	
18	Input 4 (Solar) (	(*)	Available input for Solar combination with Domestic Hot Water Tank.	
19	Input 5 (Smart f	unction) (*)	For the connection of an external tariff switch device to switch OFF the heat pump during peak electricity demand period. Depending on the setting, the heat pump or DHWT will be blocked when signal is open/closed.	
20	Input 6 (DHW b	oost) (*)	Available input for an instantaneous heating of the domestic hot water of the tank.	
21	Input 7 (Power	meter)	The measuring of the real power consumption can be done connecting an external power meter. The number of pulses of the power meter is a variable which must be set. By this, every pulse input is added into corresponding operation mode (Heating, Cooling, DHW Operation). Two possible options:  - One power meter for all installation (IU+OU).	
			- Two separated power meters (one for IU and one for OU).	
22	Aquastat securi (WP1)	ty for circuit 1	Terminals intended for the connection of the Aquastat security accessory (ATW-AQT-01) for controlling water temperature of the circuit 1.	
24(C)	Mixing valve clo	ose		
25(O)	Mixing valve op		When a mixing system is required for a second temperature control, these outputs are necessary to control the mixing valve.	
26(N)	N Common		necessary to control the mixing valve.	
27(L)	Water Pump 2 (	WP2)	When there is a second temperature application, a secondary pump is the circulating pump for the secondary heating circuit.	
28	Auxiliary power		Power supply for ATW-RTU and central device NEW	

Mark	Part name	Description	
30(N)	Electrical Heater DHW Output	If DHW tank contains an electric heater, the air to water heat pump can activate it if the heat pump cannot achieve the required DHW temperature by itself.	
31(L)	Electrical neater Drivy Output		
32(C)	Common line	Common terminal for the 3-way valve for DHW tank.	
33(L)	3-way valve for DHW tank	The air to water heat pump can be used to heat DHW. This output will be on when DHW is activated.	
34(N)	N common	Neutral terminal common for 3-way valve of DHW tank and outputs 1 and 2.	
35(L)	Output 1 (3-way valve for swimming pool) (*)	The air to water heat pump can be use to heat swimming pool. This output will be ON when swimming pool is activated.	
36(L)	Output 2 (Water pump 3 (WP3)) (*)	When there is a hydraulic separator or buffer tank, additional water pump (WP3) is needed.	
37		The boiler can be used to alternate with the heat pump when the heat pump cannot	
	Output 3 (Auxiliary boiler or	achieve the required temperature by itself.	
38	electric heater) (*)	A water electric heater (as accessory) can be used to provide the additional heating required on the coldest days of the year.	
39	Output 4 (Solar) (*)	Output for solar combination with Domestic Hot Water Tank.	
40	Output 4 (Oolal) ( )		



(\*): Inputs and outputs explained in the table are the factory-set options. By means of the unit controller, some other inputs and outputs functions can be configured and used. Please, refer to the Service Manual for detailed information.

### **♦ YUTAKI S COMBI**

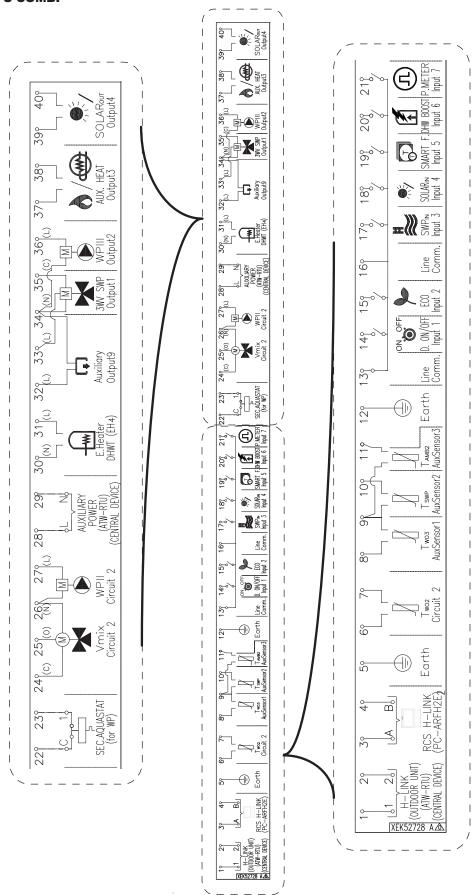

Mark	Part	name	Description		
			TERMINAL BOARD 1 (TB1)		
N L1	1~ 230V 50Hz	3N~ 400V 50Hz	Main power supply connection		
L2 L3	-				
			TERMINAL BOARD 2 (TB2)		
2	H-LINK commu	tation	The H-LINK transmission has to be done between the indoor unit and the terminals 1-2 of either outdoor unit, ATW-RTU or any other central device.		
3	H-LINK commu remote control s		Terminals for the connection of the YUTAKI unit controller.		
5	Earth		Earth connection for the 3 way valve and water pump.		
6	Common therm	istor	Common terminal for thermistor.		
7	Thermistor for v temperature of		The sensor is used for the second temperature control and should be positioned after the mixing valve and the circulation pump.		
8	Thermistor for v temperature afte separator		Water sensor for hydraulic separator, buffer tank or boiler combination.		
9	Common therm	istor	Common terminal for thermistors.		
10	Thermistor for s water temperate	0 1	The sensor is used for the swimming pool temperature control and should be positioned inside plate heat exchanger of the swimming pool.		
11	Thermistor for second ambient temperature		The sensor is used for the second ambient temperature control and it should be positioned outdoors.		
12	Earth		Earth connection for the 3 way valve and water pump. NEW		
13	Common line		Terminal Line common for input 1 and input 2.		
14	Input 1 (Demand ON/OFF) (*)		The air to water heat pump system has been designed to allow the connection of a remote thermostat to effectively control your home's temperature. Depending on the room temperature, the thermostat will turn the split air to water heat pump system ON and OFF.		
15	Input 2 (ECO m	ode) (*)	Available signal which allows to reduce the water setting temperature of circuit 1, circuit 2 or both.		
16	Common line		Terminal Line common for inputs 3, 4, 5, 6, 7.		
17	Input 3 (Swimm	ing pool) (*)	Only for swimming pool installations: It is necessary to connect an external input to the air to water heat pump to provide signal when the water pump of swimming pool is ON.		
18	Input 4 (Solar) (	(*)	Available input for Solar combination with Domestic Hot Water Tank.		
19	Input 5 (Smart f	unction) (*)	For the connection of an external tariff switch device to switch OFF the heat pump during peak electricity demand period. Depending on the setting, the heat pump or DHWT will be blocked when signal is open/closed.		
20	Input 6 (DHW b	oost) (*)	Available input for an instantaneous heating of the domestic hot water of the tank.		
21	Input 7 (Power meter)		The measuring of the real power consumption can be done connecting an external power meter. The number of pulses of the power meter is a variable which must be set. By this, every pulse input is added into corresponding operation mode (Heating, Cooling, DHW Operation). Two possible options:		
			- One power meter for all installation (IU+OU).		
			- Two separated power meters (one for IU and one for OU).		
22 23	Aquastat securi (WP1)	ty for circuit 1	Terminals intended for the connection of the Aquastat security accessory (ATW-AQT-01) for controlling water temperature of the circuit 1.		
24(C)	Mixing valve clo	ose	William and have been been been been been been been be		
25(O)	Mixing valve op	en	When a mixing system is required for a second temperature control, these outputs are necessary to control the mixing valve.		
26(N)	N Common		, and the second		
27(L)	Water Pump 2 (	WP2)	When there is a second temperature application, a secondary pump is the circulating pump for the secondary heating circuit.		
28	Auxiliary power		Power supply for ATW-RTU and central device. NEW		

Mark	Part name	Description
30(N) 31(L)	Electrical Heater DHW Output	If DHW tank contains an electric heater, the air to water heat pump can activate it if the heat pump cannot achieve the required DHW temperature by itself.
32	Output 9	NEW
33(L)	L common	Power supply for valve accessories NEW
34(N)	N common	Neutral terminal common for outputs 1, 2 and 9.
35(L)	Output 1 (3-way valve for swimming pool) (*)	The air to water heat pump can be use to heat swimming pool. This output will be ON when swimming pozol is activated.
36(L)	Output 2 (Water pump 3 (WP3)) (*)	When there is a hydraulic separator or buffer tank, additional water pump (WP3) is needed.
37		The boiler can be used to alternate with the heat pump when the heat pump cannot
38	Output 3 (Auxiliary boiler or electric heater) (*)	achieve the required temperature by itself.  A water electric heater (as accessory) can be used to provide the additional heating required on the coldest days of the year.
39 40	Output 4 (Solar) (*)	Output for solar combination with Domestic Hot Water Tank.



(\*): Inputs and outputs explained in the table are the factory-set options. By means of the unit controller, some other inputs and outputs functions can be configured and used. Please, refer to the Service Manual for detailed information.

### 9.6 Setting of DIP switches and RSW switches


### 9.6.1 Outdoor unit


### 9.6.1.1 Location of DIP switches and rotary switches

The PCB in the outdoor unit is operating with DIP switches and push switches. The location is as follows:

### **RAS-(2/2.5/3)WHVRP1**


PCB1

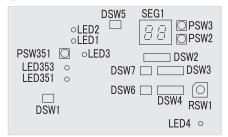

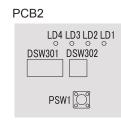

### RAS-(4-10)WH(V)NPE

PCB

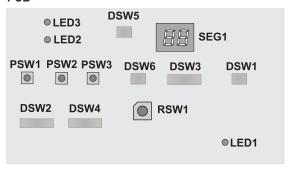



DIP-IPM or PCB2 (depending on model) has a DSW1. When pin number 1 is set to ON position, the electrical current detections is cancelled. Pin number 1 should be to OFF position after electrical work.

### 9.6.1.2 Function of DIP switches and rotary switches



- The mark "" indicates the position of dips switches.
- No mark "■" indicates pin position is not affecting.
- The figures show the settings before shipment or after selection.



### **DANGER**

Before setting dips switches, first turn the power source off and then set the position of the dips switches. In case of setting the switches without turning the power source off, the contents of the setting are invalid.

### ◆ DSW1 (Only RAS-(2/2.5/3)WHVRP1): No setting is required

When set pin number 1 to ON, the electric current detection is cancelled. Pin number 1 should be set back to OFF after electrical work



### ◆ DSW1 (RAS-(4-10)WH(V)NPE): For Test run

Factory setting	ON 1 2 3 4
Test run for pump down	ON 1 2 3 4
Test run for heating	ON 12 3 4
Test run for cooling intermediate season (Not used)	ON 1 2 3 4
Test run for heating for intermediate season (Not used)	ON 12 3 4
Forced stoppage of compressor	ON 1234

# i NOTE

- This operation is reset once the compressor is in Thermo-ON mode.
- During the test run operation the units will operate continuously during 2 hours without Thermo-OFF and the 3-minute guard for compressor protection will be effective.
- Test run will start within 20 seconds after setting DSW1 pin 1 to ON position

### DSW301 (Only RAS-(2/2.5/3)WHVRP1): Test run mode

Setting before shipment	ON 1 2 3 4
Test run for pump down	ON 1 2 3 4
Test run for heating	ON 1 2 3 4
Forced stoppage of compressor	ON 1 2 3 4

### **◆ DSW2: Optional Function setting**


Factory setting	ON 1 2 3 4 5 6
Control to support existing pipes or when using Ø19,05 gas pipe (soft-annealed), switch ON DSW2 pin 4 in the outdoor unit PCB (for RAS-(4-10)WH(V) NPE)	ON 1 2 3 4 5 6
Optional function setting mode (The optional function selection mode becomes available)	ON 1 2 3 4 5 6
External output setting mode (The output signals selection mode becomes available).	ON 1 2 3 4 5 6

### ◆ DSW3: Capacity Setting (No setting is required)

Outdoor unit Factory setting

RAS-2WHVRP1	RAS-2.5WHVRP1	RAS-3WHVRP1	RAS-4WHVNPE	RAS-5WHVNPE	RAS-6WHVNPE
ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	1 2 3 4 5 6
RAS-4WHNPE	RAS-5WHNPE	RAS-6WHNPE	RAS-8WHNPE	RAS-10WHNPE	
ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	1 2 3 4 5 6	ON 1 2 3 4 5 6	

### ◆ DSW4 / RSW1: No setting is required (Do not change)



### ◆ DSW5: End terminal resistance (No setting is required)

	ON
Setting before shipment	
	1 2

### ◆ DSW6: No setting is required (Do not change)

Factory setting (for RAS-(2-3)WHVRP1)	ON 1 2
Factory setting (for RAS-(4-10)WH(V)NPE)	ON 1 2

### DSW7: No setting is required (Do not change)

Factory setting	ON 1 2
-----------------	-----------

### ◆ DSW302: Piping Length Setting (Only RAS-(2/2.5/3)WHVRP1) (Setting is required)

Setting before shipment	ON 1 2
Pipe length (<5m)	ON 1 2
Pipe length (≥30m)	ON 1 2

#### 9.6.1.3 LED indication

# **♦** RAS-(2-3)WHVRP1


Name	Colour	Indication	
	PCB1		
LED1	Red	Power	
LED2	Green	Communication with inverter	
LED3	Yellow	H-Link transmission	
LED4	Yellow	Not used	
LED351	Red	For inspection	
LED353	Red	For inspection	
PCB2			
LD1	Red	For inspection	
LD2	Red	For inspection	
LD3	Red	For inspection	
LD4	Red	For inspection	

# **♦** RAS-(4-10)WH(V)NPE

	LED Indication		
	LED1 Red This LED indicates the transmission status between the indoor unit and the unit controller		
LED2 Yellow This LED indicates the transmission status between the indoor unit and the outdoor unit			
	LED3	Green	Power source for the PCB

#### 9.6.2 YUTAKI unit

#### 9.6.2.1 Location of DIP switches and rotary switches

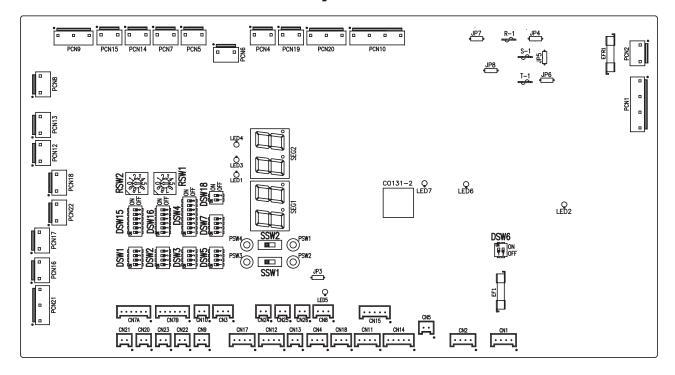

# 9.6.2.2 Function of DIP switches and rotary switches




- The mark "■" indicates the dip switches positions.
- No mark "■" indicates pin position is not affected.
- The figures show the settings before shipment or after selection.
- "Not used" means that the pin must not be changed. A malfunction might occur if changed.

# **A** CAUTION

Before setting dip switches, first turn the power supply OFF and then set the position of dip switches. If the switches are set without turning the power supply OFF, the contents of the setting are invalid.

#### ◆ DSW1: Additional setting 0

Factory setting. No setting is required.

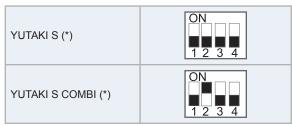



(\*): In case of installing the "Cooling kit" accessory, set the pin 4 of DSW1 to ON in order to enable the cooling operation.

#### **◆ DSW2: Unit capacity setting**


Factory setting. No setting is required.


2.0 HP	2.5 HP	3.0 HP	4.0 HP	5.0 HP	6.0 HP	8.0 HP	10.0 HP
ON	ON	ON	ON	ON	ON	ON	ON
1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4

#### ◆ DSW3: Additional setting 1

Setting before shipment	ON 1 2 3 4
1-step heater for 3-phase unit	ON 1 2 3 4

#### DSW4: Additional setting 2

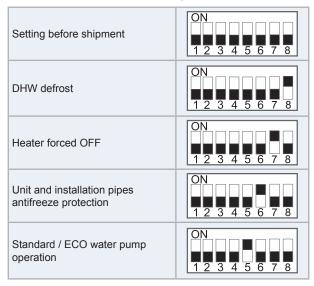

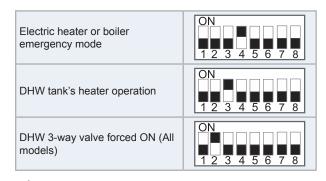

# CAUTION

- Never turn all DSW4 dip switch pins ON. If this happens, the software of the unit will be removed.
- Never activate "Heater Forced OFF" and "Electric heater or boiler emergency mode" at the same time.



#### ◆ DSW5: Additional setting 3

In the cases where the outdoor unit is installed into a location where its own outdoor ambient temperature sensor can not give a suitable temperature measurement to the system, it is available the 2nd outdoor ambient temperature sensor as accessory. By means of DSW1&2 setting, the preferable sensor for each circuit can be selected.

Factory setting	1 2 3 4
Outdoor unit sensor for circuits 1 and 2	ON 1 2 3 4
Outdoor unit sensor for circuit 1; Auxiliary sensor for circuit 2	ON 1 2 3 4
Auxiliary sensor for circuit 1; Outdoor unit sensor for circuit 2	ON 1 2 3 4
Auxiliary sensor instead of outdoor unit sensor for both circuits	1 2 3 4
Use the maximum temperature value between $T_{wo3}$ (boiler / heater thermistor) and $T_{wo}$ (water outlet thermistor) for water control	ON 1234

#### ◆ DSW6: Not used

Factory setting	ON
(Do not change)	12

#### ◆ DSW7: Additional setting 4

Factory setting	ON 1 2 3 4
Compatibility with ATW-RTU-04 (When cooling mode operation is needed)	ON 1 2 3 4

#### ◆ DSW15 & RSW2 / DSW16 & RSW1: Not used

	DSW16	RSW1
Factory setting	ON 1 2 3 4 5 6	007 100 100 100 100 100 100 100 100 100

Don't change this setting, otherwise malfunction will be occur.

#### ◆ DSW18: Not used (only for YUTAKI S COMBI)

Factory setting (Do not change)	ON
(20 not onango)	12

# ♦ SSW1: Remote/Local

Factory setting Remote operation	Remote	
Local operation	Remote Local	

# ◆ SSW2: Heat/Cool (when SSW1 is in local setting)

Factory setting Heat operation	Heat Cool	
Cooling operation (when cooling kit installed)	Heat Cool	

#### 9.6.2.3 LED indication

Name	Colour	Indication
LED1	Green	Power indication
LED2	Red	Power indication
LED3	Red	Heat pump operation (thermo ON/OFF)
LED4	Yellow	Alarm (flickering with 1 sec interval)
LED5	Green	Not used
LED6	Yellow	H-Link transmission
LED7	Yellow	H-Link transmission for unit controller

# 10.LCD Controller

# Index

10.1	General information	142
10.2	Display	142
	10.2.1 Main view	142
	10.2.2 Dual view	143
	10.2.3 Menu display	143
10.3	New features	144
	10.3.1 Live view	144
	10.3.2 Operational data list	145
	10.3.3 Lock controller	145
	10.3.4 Communication status menu	145
	10.3.5 Serial number	146
	10.3.6 Alarm description	146
	10.3.7 Alarm history	146
	10.3.8 Pump down procedure	146
	10.3.9 DHW tank position	147
	10.3.10 Water pump operation	147
	10.3.11 Electrical Heater limitation	147
	10.3.12 Energy consumption data	148
	10.3.13 Wizard start up	148
	10.3.14 Fan coils control	149
	10.3.15 Wizard to timer set	151
	10.3.16 Weekly timer	152
	10.3.17 Override function	152
	10.3.18. Display theme	152


#### 10.1 General information

Model	Available languages	Information	Figure
PC-ARFH2E	26 languages: EN, FR, ES, DE, IT, NL, SL, DA, SV, FI, PT, HR, EL, PL, UK, HU, RO, SK, CS, TR, BG, LT, RU, ET, LV, SR	This unit controller can be detached from the indoor unit and used as both: unit controller and wired room thermostat. Exclusive for YUTAKI RWM-(2.0-10.0)(N/R)1E and RWD-(2.0-6.0)(N/R)W1E-220S(-K) units	HENCH SECULATION OF THE SECULA

# 10.2 Display


#### 10.2.1 Main view

The device is composed by a bottom tab widget to move around the different views.

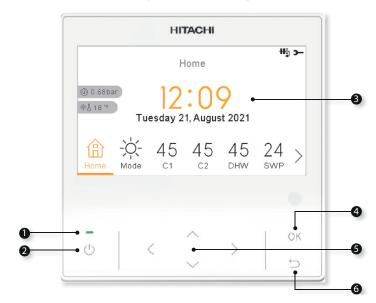

Nº	Description
1	Run / Stop
2	LED status indicator
3	Liquid Crystal Display
4	OK button
5	Arrow keys
6	Return

Featuring a new screen layout and new icons.

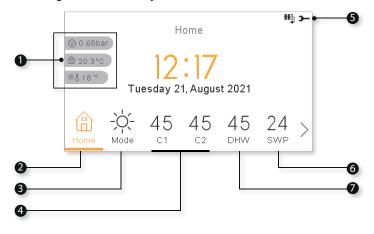

Nº	Description
1	Water pressure, room temperature and
<u>'</u>	outdoor temperature indicators
2	Home view
3	Mode selection ( Heating / Cooling / Auto)
4	Circuit 1 or 2 status
5	General icons about unit operations (Alarm,
5	timer, compressor, defrost, etc)
6	Domestic Hot Water status
7	Swimming Pool status

# i NOTE

With the swimming pool mode activated, SWP status is displayed.

#### **10.2.2 Dual view**

This new unit controller can be used as a wired room thermostat.



Nº	Description
1	Setting temperatures
2	Circuit temperatures

#### 10.2.3 Menu display

Same current menu structure, with a more intuitive display and some improvement on the menus.



Colour display inside menu



New scrolling indication



New indication (colour + tick) showing you can revise the setting. Grey line equals option disabled


#### 10.3 New features

A new set of features that increase installer support on the field to check system operation and improve the customer experience.


#### 10.3.1 Live view

Live view is a summary of system status information shown on operation information. Data available depends on system and usage (Heating, Cooling, Heater, etc).


#### Refrigerant cycle

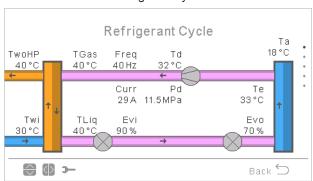


#### Water generation

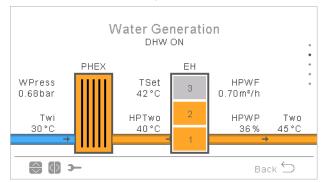


Circuit 1

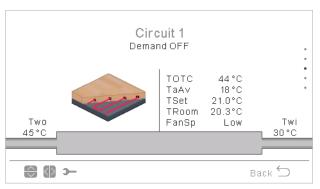


Circuit 2

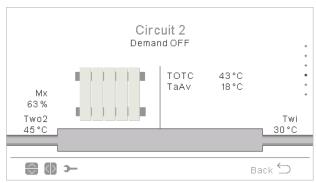

Hot Water Tank

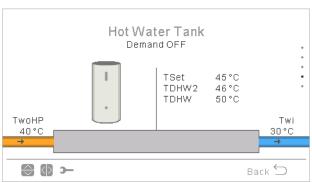


Swimming pool

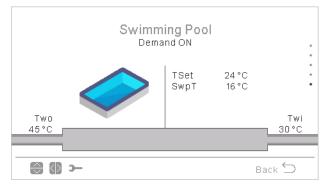

#### 10.3.2 Operational data list


Recent Status Register is an historical data that displays the main variables during the last hours. Specifically 23 parameters are recorded every 5 min and available on the LCD controller for the 2 last running hours. Data resets when the unit is powered off.

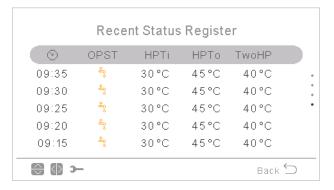

#### 10.3.3 Lock controller

This function is only visible for the installer and allows to lock the menu in case of exhibition. This action can also be launched from central.



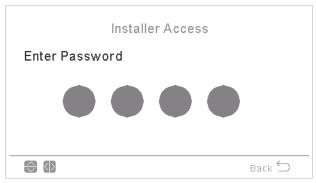


#### 10.3.4 Communication status menu


Detailed information about Communication status for H-Link, H-Link Central, RCS Central and CASCADE CONTROLLER.



#### 10.3.5 Serial number


IDU serial number of installation units in system information menu.

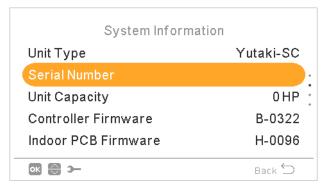


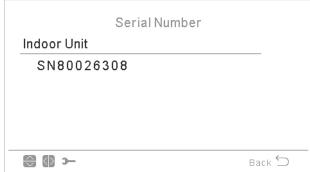

#### 10.3.6 Alarm description


Short description down to each alarm code.

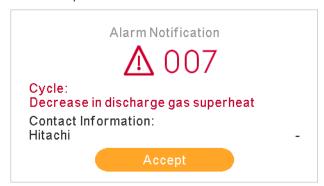

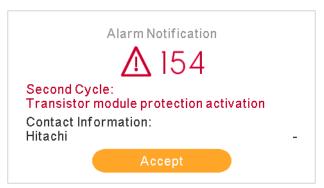

#### 10.3.7 Alarm history


Shows a list of the alarm history of the system.

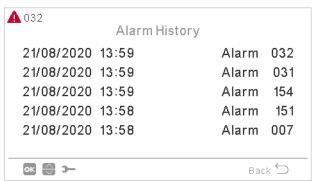

#### 10.3.8 Pump down procedure

Pump Down Procedure configuration in the commissioning menu.




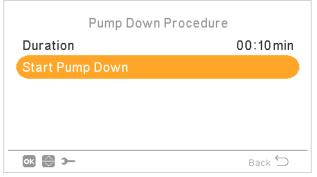

#### 10.3.9 DHW tank position


Configuration of the Domestic Hot Water tank position before or after the hydraulic separator.



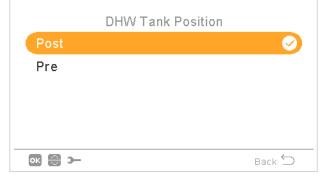

#### 10.3.10 Water pump operation

Enable / Disable water pumps for space heating during Domestic Hot Water operation.

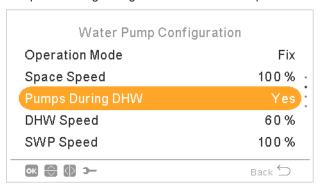

#### 10.3.11 Electrical Heater limitation


Maximum heater step configuration (only in cas of backup option).






#### 10.3.12 Energy consumption data


Consumption information can be switched between Total / Space heating / Space cooling / DHW / SWP, with a comparison between Months / Weeks / Days. Without power meter installed the controller shows an estimation of outdoor unit and indoor unit consumption. With the power meter installed pulses information are automatically available into the controller, which allows a live reading of the consumption.

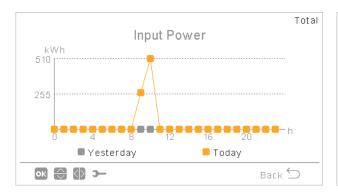

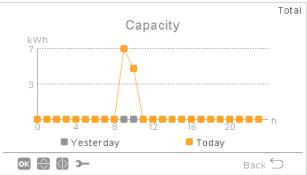


#### 10.3.13 Wizard start up


When the controller is initiated from factory default, it shows up the wizard configuration start up.

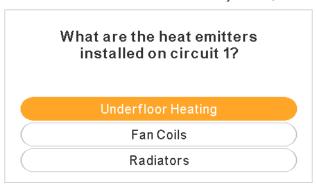

The Configuration Assistant asks 4 questions to declare the emitters for each Circuit and mode.

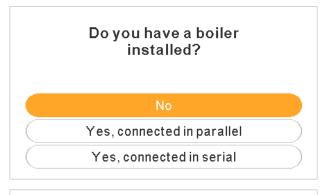

Boiler installation definition: Parallel / Serial.

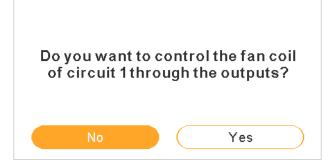

When selecting a fan coil as emitter, Configuration Assistant ask wheter it must be controller from YUTAKI's output.


#### 10.3.14 Fan coils control


#### Selecting fan speed outputs


Main controller allow to configure 2 different emitters (emitter for heating and emitter for cooling) within same circuit. So, as an example, Circuit 1 can be configured with radiators for Heating and fan coils for Cooling while Circuit 2 can be configured only with fan coils for both modes.

When one circuit has fan coils as an emitter, YUTAKI unit allows to manage 3 speed of the fan coil (Low / Med / High) directly from each room controller and use YUTAKI outputs to send a 230V signal to each motor fan speed. It is possible to independently manage 3 speeds of 2 different fan coils located at Circuit 1 and Circuit 2.

Since YUTAKI S has 4 outputs as standard and YUTAKI S COMBI has 5 outputs as standard, it may be necessary to use external accessory ATW-AOS-02 to reach up to 8 outputs for YUTAKI S and up to 9 outputs in case of YUTAKI S COMBI. Output configuration for the 3 speeds of each fan coil is done using the unit controller.

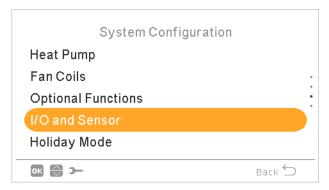

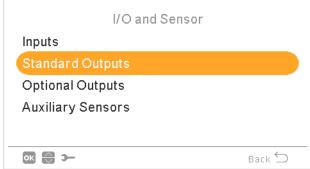


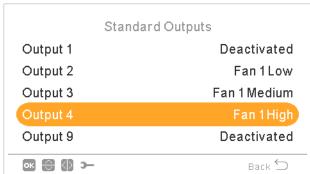



#### **♦** Fan speed control


Fan AUTO mode can be selected as well. High, Medium or Low fan speed will be decided according to the temperature difference between the room setting temperature and real ambient temperature.

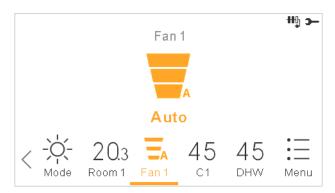


#### **♦** Control options

#### **Controlled Fan Zones**


The fan-coil use for every circuit can be readjusted. Using the Controlled Fan Zones menu is possible to change the initial fan coil declaration at any moment to adapt YUTAKI control to the existing fan coil installation ( Disabled / Heating / Cooling / Heating and Cooling ).

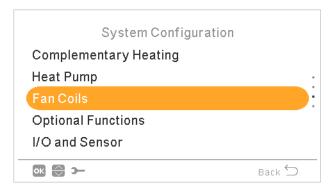

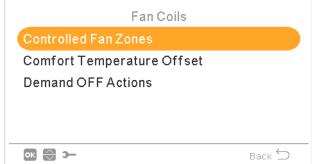

#### **Comfort temperature offset**

During the starting of the system, room Demand-off or defrost water temperature may not be high enough to provide a comfortable heating: blowing air at cold or even ambient temperature will cause discomfort. This function allow to define a water temperature offset below the set-point target in order to stop fan operation. Thanks to this, the cold draft that may be caused during start-up or defrost is avoided. Fan 1 and Fan 2 can be set with a different offset value. Circuit 1 is controlled by  $T_{wo}$  and Circuit 2 by  $T_{wo2}$  sensors. It does not apply for Cooling mode.

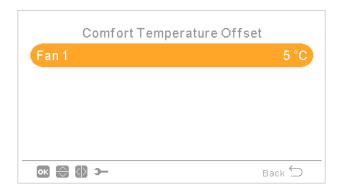





#### **Demand Off Actions**

There are 2 conditions where Room 1 and 2 may be switched to Demand OFF: Room temperature is satisfied, Heating / Cooling is not required at that moment or DHW operation is requested. Discomfort may happen sometimes during Demand OFF.

Demand OFF Actions menu is allowing to select if the Fan must stop or not for every Room and mode Heating / Cooling individually.

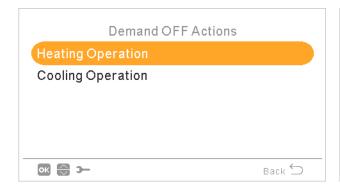


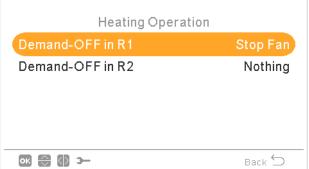


#### **Constant Heating / Cooling Output**

Additionally it can be configured Constant Heat / Constant Cool output. Constant Heating output remains in high state when YUTAKI LCD is in Heating mode (regardless Defrost, Thermo ON / OFF or Demand ON / OFF). Constant Cooling output remains in high state when YUTAKI LCD is in Cooling mode (regardless Thermo ON / OFF or Demand ON / OFF).

The purpose of this output is to control a 3 way valve able to drive water to different emitters depending on the LCD operation mode. For example, water is sent to radiant floor in winter and to fan coils in summer. Heating or constant cooling signal will depend on the default position of the 3-way valve.

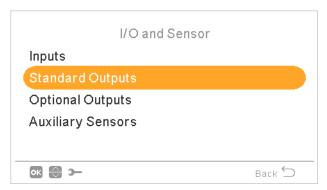

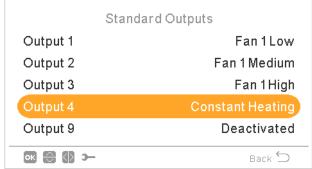



#### **Additional considerations**


YUTAKI software is based on 3-speed fan-coil output control and cannot be changed. In the eventual case that less than 3 speed are required, the fan coil wiring must be arranged so the 3 outputs are linked with the requested speed. When the Room Thermostat is switched off the fan coil is stopped as well. Fan only operation is available when selecting Circuit OFF and Fan ON.


#### 10.3.15 Wizard to timer set

It is possible to set the timer for Room thermostats with a timer assistant. Consists of 3 questions to help customer to set a weekly timer. 4 patterns per mode (Heating / Cooling) are defined . Schedule is automatically planned according to the answers.

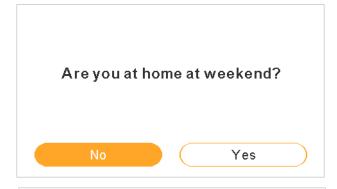

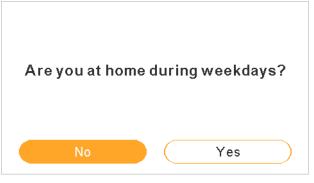


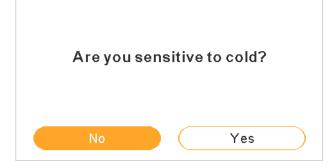

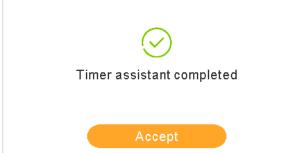

#### 10.3.16 Weekly timer


Allows to change the operation mode (ECO or Comfort) or change of operation state from ON to OFF for a defined period, after which operation returns to the previous settings. Manual operation of the unit controller has priority over schedule settings.

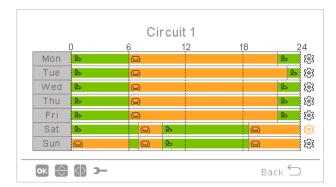



#### 10.3.17 Override function

When a different configuration from the defined by the timer of a zone is done, it is possible to override the timer configuration during a specific time.

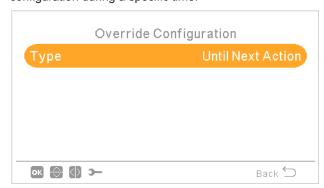



#### 10.3.18 Display theme



An automatic display mode can be set to switch between normal and dark mode according to a schedule.

# 11. Optional functions

# Index

11.1	Indoor unit	154
	11.1.1 Optional functions by DSW setting	. 154
	11.1.2 Optional functions by Unit controller (PC-ARFH2E)	. 156
	11.1.3 Optional external input/output configuration signals	. 158
11.2	Additional functions by accessory sensor	161
11.3	Change of defrost condition	162
11.4	Output/input signals for outdoor units	163

# 11.1 Indoor unit

# 11.1.1 Optional functions by DSW setting

Code	Optional function description	Explanation
DSW1#4:ON		
ON 1 2 3 4	Heating & Cooling (ON) Unit	In case of cooling operation, this DSW should be set to ON + Cooling kit accessory.
DSW3#3:ON		
ON 1 2 3 4	1 step heater for 3 phase unit option	This option can be used to switch all 3 steps of the electric heater at the same time, by means of a DIP-switch setting, in order to prevent 3-phase imbalance by the electric heater steps.
DSW4#8:ON		
ON 1 2 3 4 5 6 7 8	DHW Defrost	This function allows to perform the defrost operation at the DHW tank instead of at the indoor water installation.
DSW4#7:ON		
ON 1 2 3 4 5 6 7 8	Heating Heater forced OFF	This function forces a permanent OFF of the heater when selecting an installation configuration without the electric heater of the unit.
DSW4#6:ON		
ON 1 2 3 4 5 6 7 8	Unit and pipes installation freeze protection	This function allows to start water pump in very low water temperature conditions to avoid freezing.
DSW4#5:ON		This function allows to select conditions to stop pumps when not
ON 1 2 3 4 5 6 7 8	Standard / Economic water pump operation	required. Purpose of economic mode is to reduce pump operation when there is no need of Heating/Cooling operation. In case Standard is selected, pumps are only stopped when Circuits are in OFF state.
DSW4#4:ON		
ON 1 2 3 4 5 6 7 8	Emergency Heater operation manual option	In the event of outdoor unit failure, the required heating can be provided by an electric heater or by a boiler.
DSW4#3:ON		
ON 1 2 3 4 5 6 7 8	DHW Heater Operation	The electric heater of the domestic hot water tank is disabled by factory setting. This function allows to activate its operation if needed.
DSW4#2:ON		Activation of this DSW forces Unit to stop in order to open expansion
ON 1 2 3 4 5 6 7 8	DHW 3 way valve forced ON	valves. This can be useful for refrigerant recovery with an external equipment. At the same time, DHW 3WV is forced to commute to tank position. This can be used, for example for a quick water filling of the DHW tank's heating coil.

Code	Optional function description	Explanation
DSW5#1:OFF;2#OFF  ON 1 2 3 4	C1 : Average OU Sensor C2 : Average OU Sensor	
DSW5#1:OFF;2#ON ON 1 2 3 4	C1 : Average OU Sensor C2 : Average Aux Sensor	A 2nd outdoor ambient temperature sensor is available as an accessory, in case that the built-in ambient temperature sensor of the outdoor unit cannot provide a reliable temperature measurement to the system because of restraints of the installation location. The preferred sensor for each circuit can be selected by means of DSW setting.
DSW5#1:ON;2#OFF	C1 : Average Aux Sensor C2 : Average OU Sensor	
DSW5#1:ON;2#ON ON 1 2 3 4	C1 : Average Aux Sensor C2 : Average Aux Sensor	
DSW5#4:ON ON 1 2 3 4	Use max (T <sub>wo</sub> /T <sub>wo3</sub> ) for water control	Some installations need a big buffer tank in combination with auxiliary heating (boiler, pellets, solar panels. etc). The control of the water can be done by external temperature sensor (T <sub>wo3</sub> ) to heat this buffer tank. Refer to Service Manual.
Remote Local	Remote or Local operation (Manual)	Refer to Service Manual.
SSW2 Heat Cool	Cool and Heat operation in case of Local (Manual)	Refer to Service Manual.

# 11.1.2 Optional functions by Unit controller (PC-ARFH2E)

# 11.1.2.1 Optional functions for Space Heating or Space Cooling

Optional function	Explanation
	This function is used exclusively for the process of drying screed that has been newly applied to floor heating system.
Floor screed drying function (Circuits 1 & 2)	The water temperature set-point follows a predetermined schedule upon activation of the floor screed drying function.
	For more information refer to Water control chapter
Heating Auto ON/OFF	At higher outside temperatures it doesn't make sense to keep heating the building. The YUTAKI S System will switch the heating off when the daily average outdoor temperature of previously day rises above the Summer Switch Auto On/Off Activation Temperature.
	For more information refer to Service Manual.
	Only available for Cooling and Heating models and cooling mode enabled.  By using auto summer switch off average, user can use auto heat cool mode.  The end-user sets the desired operation mode on the user interface: Heating, Cooling or Automatic.  When Automatic is selected, the change of the operation mode is based on:
Auto Heat-Cool	Averaged outdoor temperature: the operation mode will be changed in order to always be within range determined by the space heating OFF temperature for heating and the space cooling ON temperature for cooling. If the outdoor temperature drops, the operation mode switches to heating and vice versa.
	For more information refer to "Service Manual.
Outdoor temperature average timer	The average timer corrects the influence of ambient temperature variations. The weather-dependent set point calculation is done on the average outdoor temperature. The outdoor temperature is averaged over the selected time period.
	For more information refer to Service Manual.

# 11.1.2.2 Optional functions for DHW

Optional function	Explanation
DHW anti-Legionella protection	A specific setting is available to protect the DHW system against Legionella, which raises up the DHW temperature over the normal DHW tank temperature setting (using the electric heater of the DHW tank and/or the heat pump) on a periodic basis.
·	For more information refer to Service Manual.
DHW re-circulation	This function allows the activation of the water pump for the re-circulation of the hot water from the DHW tank by means of the heat pump.  This function can also be used with the anti-legionella protection function.
	For more information refer to Service Manual.
DHW boost	With this function enabled, it is possible to request a heating up of the DHW when user requires an instantaneous delivery of DHW.
	For more information refer to Service Manual.
DHW Mode	<ul> <li>DHW operation has 3 different modes, ECONOMIC (only for SC units), STANDARD and HIGH DEMAND:</li> <li>ECONOMIC Mode: The heating of the domestic hot water shall be started when water temperature in tank is low enough for Heat Pump to be started measured with the top most tank thermistor. DHW is always started heated by Heat Pump. Usage of this mode, it is reduced the amount of heating up procedures.</li> <li>STANDARD Mode: Behaves the same as Economic mode but it is used the lowest tank sensor to judge water temperature inside tank. This functionality ensure higher quantity of water already heated inside of tank and heating-up process are more frequent.</li> <li>HIGH DEMAND Mode: The heating of the domestic hot water is started if differential is bigger than T<sub>DHWON</sub>. It will be started with water tank heater only unless water temperature in tank goes below Heat Pump starting temperature measured with the lowest sensor on tank. For more information refer to Service Manual.</li> <li>In case of YUTAKI S, it is only possible selection of Standard and High Demand modes.</li> </ul>

# 11.1.2.3 Optional functions for Heat pump

Optional function	Explanation
	In some cases, water pump of the YUTAKI unit is not sized for big heating installation (small water pump). In this case, a hydraulic separator or buffer tank and secondary water pump has to be used to ensure proper water pump dimensioning.
Hydraulic separator combination	The boiler is configured in parallel with the heat pump. A hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing. Additional Water pump (WP3) and water sensor $(T_{wo3})$ are needed for boiler combination control (automatic added when Boiler combination is enabled).
	For more information refer to Service Manual.
Pumps setup	This option allows to configure between 2 hydraulic schemes when hydraulic separator is used. Standard configuration forces WP3 to operate whenever there is demand from Circuit 2. On the other hand, Parallel configuration, allows to connect WP3 and WP2 to the buffer tank, and operation of WP3 is independent to the operation of WP2.
	For more information refer to Service Manual.
DHW tank location selection (only for YUTAKI S)	Whenever there is buffer tank or hydraulic separator, user can select position of DHW external tank with respect to the hydraulic separator. This means that it is possible to place 3WV and DHW tank before or after the hydraulic separator. In case 3WV valve and DHW tank is placed before buffer tank, it is not required to heat the whole buffer tank up to the coils temperature whenever DHW operation is performed.
	For the use of the electrical heater or boiler in case of outdoor unit fault, additional setting shall be applied into IU setting:
Electrical heater or boiler emergency mode	Electrical heater emergency can be both automatic or manual switched ON by the user and the configuration must be done from the Unit controller
	For more information refer to Service Manual.
	YUTAKI unit performs an estimation of the system consumption. For a real power consumption measure, it is necessary to connect an external power meter.
	No power meter connected: The estimation of the system consumption includes ODU unit, pumps, heaters and electronics. Such consumption estimation is showed on Unit controller. Since it is an estimation, consumption may differ from real measurements by means external power meter.
System consumption data control	Power meter connected: The number of pulses of the power meter is a variable which must be set through the unit controller. By this, every pulse input is added into its corresponding operation mode (Heating, Cooling, DHW Operation). Two possible options:
	- One power meter for all installation (IU+OU) Two separated power meters (one for IU and one for OU).
	For more information refer to Service Manual.
	Due to usage of Water temperature inlet and outlet + water flow leve, a estimation of capacity can be checked.
Capacity data control	This screens show the value of kWh for each zone (Heating, Cooling, DHW, swimming pool and its total) and also let to see the values month by month.
	For more information refer to Service Manual.
Smart Grid ready	This function can be used to block or limit the heat pump or increase demand due to electricity availability. Demand increase is configurable for heating and also for cooling operation.
	For more information refer to Service Manual.
Air Purge	Air purge function drives the pump in a way for evacuating air bubbles in the installation.
All I dige	For more information refer to Service Manual.
Unit Test Run	Test run is a working mode used when commissioning the installation. Some settings are made to let the installer an easy job.
	For more information refer to Service Manual.
	Night shift operation reduce compressor load in order to reduce environmental noise during night.
Night shift	It can be configured as a daily timer or launched from favourite button. For more information refer to Service Manual.
Fan coil management	In case fan coil is selected as a Heating/cooling emitter, fan speeds can be controlled from Room thermostat and fan coil's fan speeds are controlled from YUTAKI optional outputs
Pump down operation	By performing a pump down operation compressor starts in cooling mode regardless no configuration for cooling has been made with the purpose to collect refrigerant at the ODU unit.

# 11.1.2.4 Optional functions for Unit controller (PC-ARFH2E)

Optional function	Explanation
UTC Zone	UTC Zone: Europe spans 7 primary time zones (5 of them can be seen on the map in this article, while 2 other zones contain the European part of Kazakhstan and some very eastern territories of European Russia). Most of European countries use daylight saving time and switch to it at the same moment, which is 'harmonise' their summer time adjustment
European summer time	When European summer time is activated, it should change the time when the country / UTC zone is doing it.
Holidays	Holidays function is only available for room thermostat view of PC-ARFH2E. Holidays let the user specify a date and hour for the Room Setting to be OFF with the configured setting.

#### 11.1.3 Optional external input/output configuration signals

The system has 7 input and 4 output optional signals (+ 4 output signals when using accessory). The new YUTAKI series allow different ports to be configured for those I/O signals, as well.

The user can configure those input signal to perform different functions from the unit controller. This is briefly explained in the next tables:

#### Input signals and input ports

Code	Name	Port	Input
. 1	Input 1	TB2 #13&14	230 V
ı,2	Input 2	TB2 #13&15	230 V
ıΞ	Input 3	TB2 #16&17	230 V
<i>.</i> 4	Input 4	TB2 #16&18	230 V
ر5	Input 5	TB2 #16&19	230 V
ι5	Input 6	TB2 #16&20	230 V
יה	Input 7	TB2 #16&21	230 V

# Input functions (To be configured from the unit controller)

Function #	Input	Description
0	Deactivated	-
1	Demand ON/OFF	Send Demand ON or OFF Operation to Circuit 1 and Circuit 2
2	Smart Act./SG Ready Input 1	This function must be used to block or limit the heat pump when restricted by Electric company. It allows an external Smart switch device to switch off or reduce consumption of the heat pump during time of peak electricity demand.  In case of use of Smart Grid Ready application, this input is used as a digital input 2 and allows four different operating modes
3	Swimming pool	Input used to let YUTAKI know swimming pool is in demand On conditions.
4	Solar	In case of combine YUTAKI with solar panels, this input is used as a feedback for solar station ready operation.
5	Operation mode	Cool/Heat must be changed by an input of an external contact signal. Contact signal is edge detection; Cool/Heat changeover by unit controller is also available
6	DHW boost	With this function enabled, it is possible to request a heating up of the DHW when user requires an instantaneous delivery of DHW.
7	Power meter 1	Input used as kW/h pulse count for Energy data recording
8	Demand ON/OFF C1	Send Demand ON or OFF Operation only to Circuit 1
9	Demand ON/OFF C2	Send Demand ON or OFF Operation only to Circuit 2
10	Forced heating	Forced Heating Demand by input of contact signal from outside
11	Forced cooling	Forced Cooling Demand by input of contact signal from outside
12	Power meter 2	Input used as kW/h pulse count for Energy data recording
13	ECO mode C1 & C2	Water temperature setting for Circuit 1 and Circuit 2 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside
14	ECO mode C1	Water temperature setting for Circuit 1 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside
15	ECO mode C2	Water temperature setting for Circuit 2 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside
16	Force OFF	Force OFF operation for unit. RCS will continue as normally set but will show indication that operation is forbidden
17	SG Ready Input 2	In case of want to use Smart Grid Ready application, this input is used as a digital input 2 and allow four different operating modes
18	Drain pump	In case of configuring this input, alarm is triggered in case input contact is opened. This input can be linked to drain pump kit accessory located at drain pane which by means of a NC contact, notifies there is possibility of water overflow.

Indoor unit

# **Output signals and output ports**

Code	Name	Port	Output
اه	Output 1	TB2 #34 (N) & 35 (L)	230 V
٥٥	Output 2	TB2 #34 (N) & 36 (L)	230 V
60	Output 3	TB2 #37&38	Free voltage signal
۲۵	Output 4	TB2 #39&40	Free voltage signal
5م	Output 5	PCN20 #1-2	12Vdc signal
۵۵	Output 6	PCN21 #1-2	12Vdc signal
70	Output 7	PCN22 #1-2	12Vdc signal
o8	Output 8	PCN23 #1-2	12Vdc signal
٥٩	Output 9 (only for YUTAKI S COMBI)	PCN12 #1-2	230 V

# **Output functions (To be configured from the unit controller)**

Function #	Output	Description
0	Deactivated	
1	3WV SWP	In case of combine YUTAKI with swimming pool, this output is used to drive 3 way valve swimming pools.
2	WP3	In case of combine YUTAKI with boiler or hydraulic separator, this output is used to drive water pump 3.
3	Boiler combination	In case of combine YUTAKI with boiler, this output is used to switch ON it.
4	Solar pump	In case of combine YUTAKI with solar panel, this output is used to drive water pump station
5	Alarm signal	Output when an "Alarm Code" is received from Indoor Unit or outdoor unit.
6	Operation signal	Output in case that "Thermo-ON" signal in any condition.
7	Cooling signal	Output in case that "Thermo-ON" signal in Cooling operation.
8	Demand-ON signal circuit 1	Signal is enabled when circuit 1 is operating in Demand-ON.
9	Heating signal	Output in case that "Thermo-ON" signal in Heating operation.
10	DHW signal	Output in case that "Thermo-ON" signal in DHW operation.
11	Solar overheat	Output in case that solar temperature signal is active when solar overheat (only when solar combination status is total control).
12	Defrost	Output if the operation state of the outdoor unit when is defrosting.
13	DHW re-circulation pump	In case of re-circulation pump enabled for HSW tank.
14	Fan 1 Low speed	Output for fan coil speed.
15	Fan 1 Medium speed	Output for fan coil speed.
16	Fan 1 High speed	Output for fan coil speed.
17	Fan 2 Low speed	Output for fan coil speed.
18	Fan 2 Medium speed	Output for fan coil speed.
19	Fan 2 High speed	Output for fan coil speed.
20	Constant Heat	Output in high state whenever operation mode from Unit controller is in heating mode.
21	Constant cool	Output in high state whenever operation mode from Unit controller is in cooling mode

# 11.2 Additional functions by accessory sensor

Hitachi offers to its users the option to add more functions to the inputs from signals coming from some specific sensors. The configuration for this purpose is explained below:

I/O Terminal name		Port for setting	Factory default setting		Innut/Output turns
I/O	Display	(Connector number)	Setting contents	Function #	Input/Output type
Sensor 1	A1	CN26 #2	Deactivated	0	NTC
Sensor 2	A2	CN25 #1-2	Deactivated	0	NTC
Sensor 3	A3	CN5 #1	Deactivated	0	NTC

#### **Function of sensors**


Function #	Input	Description
0	Deactivated	
1	T <sub>wo3</sub> sensor	$T_{wo3}$ sensor is required when there is external heating source or useful to track better temperature when there is hydraulic separator or buffer tank.
2	Swimming pool	When combining YUTAKI with swimming pool, this sensor is used to read the temperature from the water of the swimming pool.
3	Solar panel sensor	When combining YUTAKI with solar panels, this sensor is used to read the temperature from the solar panel.
4	Zone 1 & 2 ambient sensor	If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the corresponding circuit.
5	Zone 1 ambient sensor	If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the circuit 1.
6	Zone 2 ambient sensor	If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the circuit 2.
7	Second outdoor ambient	An outside temperature sensor can be directly connected to the controller in case the heat pump is located in a position not suitable for this measurement.


# 11.3 Change of defrost condition

These optional function is available for being selected using the PSW switches and 7-segment on the PCB of the Outdoor Units:


Indication	Description	Application
Ja	Change of defrost condition	This function allows to shift the temperature conditions in order to cause an earlier defrosting.  It is useful in installations placed in very cold regions, where frost generates continuously; enabling an earlier defrosting operation results in a lower amount of accumulated frost, therefore keeping higher heating capacity values.
Fq	Defrost improvement (only for RAS-(2-3) WHVRP1, option available from udapte software H-0235)	In case F9 is set to 1, this optional function allows to perform defrost operation earlier in order to avoid excessive frost formation.  In case F9 is set to 2, same conditions than 1 are applied and also EVO control is smoothed to avoid frost formation.

#### Example for RAS-(2-3)WHVRP1

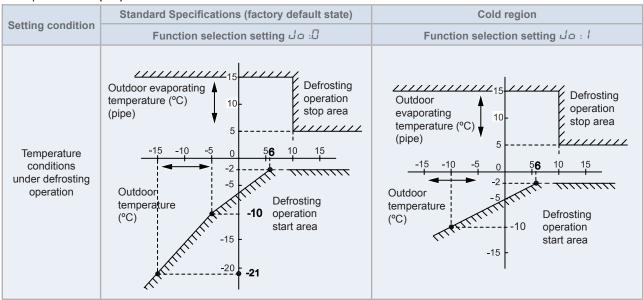

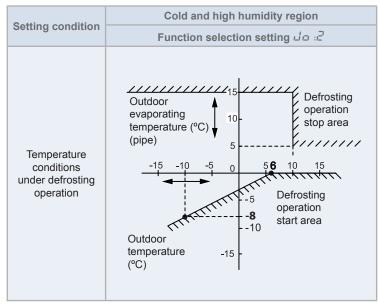

#### Example for RAS-(4-10)WH(V)NPE

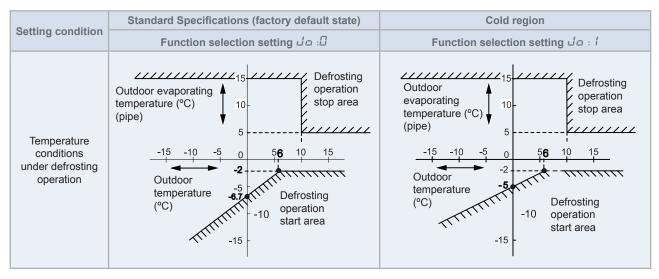

# 11.4 Output/input signals for outdoor units

#### ◆ Output signals through 7-segment display on the unit PCB

The system has several output signals, which can be selected using the following connectors of the outdoor unit:

Output connector CN7, which has two ports to configure two optional output signals.

The selection of these output signals represents the selection of some optional functions programmed in the PCB of the RAS unit through the 7-segment display.

# **i** NOTE

- Do not set same function to multiple output ports. If set, the setting of the higher output number is cleared to  $\Box\Box$ .
- Please refer to the Service Manual for detailed information of optional external input and output signals.

#### Output signals on outdoor units

Indication	Output signal	Application
П	No setting application	No setting.
1	Operation signal	This signal allows to notify that the unit is operating. It enables to start up additional systems such as humidifiers, fans and other additional air-conditioning systems.
2	Alarm signal	This signal allows to notify that protection devices have been activated and to transfer it to additional systems.
3	Compressor ON signal	This signal allows to notify that the compressor is activated. This function can be applied for situations such as checking signals during remote-control operation and for the interlock of the RAS unit.
4	Defrost operation signal	This signal allows to notify that the unit is under defrosting operation.

# 12. Complementary system CASCADE CONTROLLER

# Index

12.1	Main features	166
	12.1.1 Multi configurations	166
	12.1.2 Installation benefits	167
	12.1.3 Maintenance benefits	169
	12.1.4 Control features	169
	12.1.5 CASCADE control	171
	12.1.6 Rotary token control	172
	12.1.7 Synchronized defrost	173
12.2	General data	173
12.3	Electrical data	173
12.4	Name of parts	174
12.5	Service space	175
12.6	Electrical wiring	176
12.7	Transmission wiring	177
	12.7.3 Summary of the terminal board connections for YUTAKI CASCADE CONTROLLER	179
	12.7.4 Location of DIP switches and rotary switches	180
	12.7.4.1 Function of DIP switches and rotary switches	181
	12.7.4.2 LED indication	184
12.8	Optional functions.	185
	12.8.1 Optional functions by DSW setting	185
	12.8.2 Optional functions by Unit controller (PC-ARFH2E)	186
	12.8.2.1 Optional functions for Space Heating or Space Cooling	186
	12.8.2.2 Optional functions for DHW	186
	12.8.2.3 Optional functions for Heat pump	187
	12.8.2.4 Optional functions for Unit controller (PC-ARFH2E)	188
	12.8.3 Optional external input/output configuration signals	188
12.9	Additional functions by accessory sensor	190



#### 12.1 Main features

The YUTAKI CASCADE CONTROLLER is designed as an extension of the hydraulic control of YUTAKI range to establish a larger and efficient heating or cooling system. When YUTAKI CASCADE CONTROLLER function is active, system separate water generation (hot or cold) from water distribution and consumption.

Water generation is performed on YUTAKI Sub units, and water distribution and consumption is done on Main YUTAKI CASCADE CONTROLLER unit.

- Is a central control device capable to control Sub units that produce hot or cool water.
- Is capable to control up to 8 YUTAKI outdoor/indoor units.
- Allows to control the following heating indoor unit models:
  - YUTAKI S (from 4 to 10 HP)
  - YUTAKI S COMBI (from 4 to 6 HP)

#### 12.1.1 Multi configurations

The new CASCADE CONTROLLER has been designed so it can be easily installed in multiple types of system. The following examples and ilustrations are for illustrative purpose and not cover all the possible installations.


#### Individual Heating/Cooling household in combination with common DHW production

This installation is suitable in case a high amount of DHW at a specific setting temperature is required.

When YUTAKI CASCADE CONTROLLER is generating water for DHW tank, production of hot or chilled water for Space Heating/Cooling application is stopped until DHW production stops.

In this scenario, YUTAKI CASCADE CONTROLLER manage DHW tank and Water temperature production for Space Heating or Cooling:

- C1 buffer tank depicted in the picture is C1 circuit for YUTAKI CASCADE CONTROLLER.
- C1 buffer tank is managed by means YUTAKI CASCADE CONTROLLER unit without thermostat.
- Each C2 circuit of each YUTAKI Sub unit is assigned to a specific household.
- Each C2 mixing kit of each YUTAKI Sub unit guarantees C2 water temperature at each household.
- Each C2 circuit can have a wired or wireless thermostat which is connected to each Sub unit
- Each C2 circuit can have an Outdoor OTC Temperature by Outdoor unit or Wired Sensor accessory.

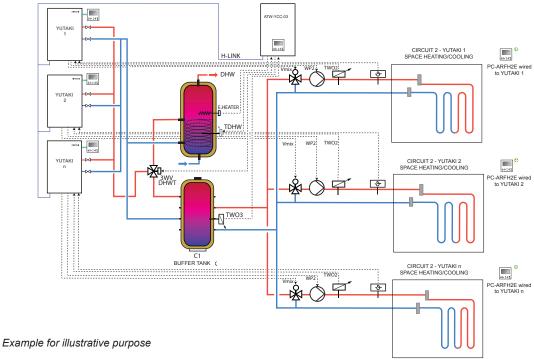




Refer to the installation manual for more installation examples.

#### 12.1.2 Installation benefits

#### ◆ H-LINK connection between YUTAKI Sub Units and the CASCADE CONTROLLER

The YUTAKI Units and the CASCADE CONTROLLER are interconnected through the H-LINK II bus, consisting of 2 non-polarity cables and accepting lengths of up to 1,000 m.

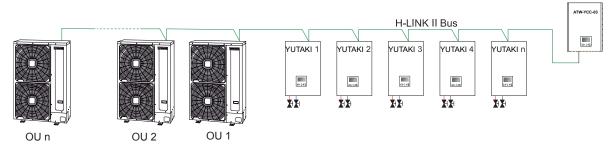


#### ◆ No additional device into each Sub unit

No additional devices need to be installed into individual heat pumps.

#### ♦ Universal mounting concept


The YUTAKI CASCADE CONTROLLER is designed for direct wall mounting.

The shape of the screw holes allows to preset the screws on the wall, then placing the electrical box and finally tightening the screws.

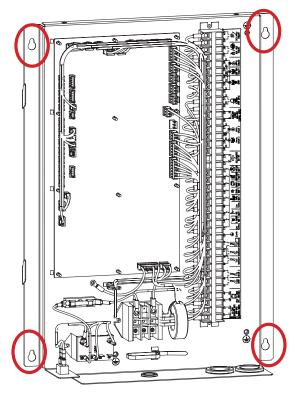


#### ♦ Connection by areas

The connections for power supply and optional function are placed in separate areas of the terminal board.

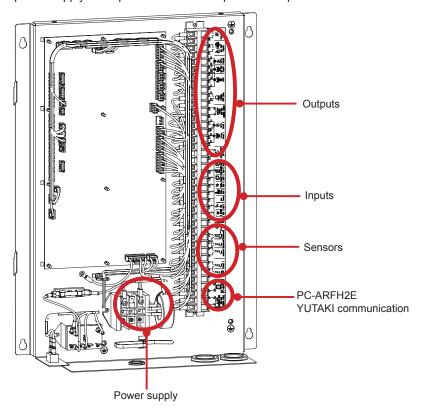

#### ◆ Electrical box with Easy Cover (Service cover)

The service cover can be easily placed by just fitting the holes in the cover with the tabs on the electrical box, then fixing two screws at the top side.

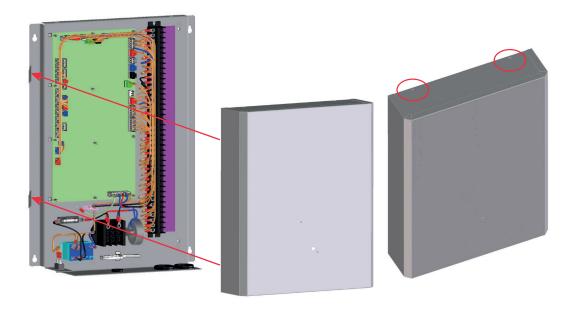

#### 12.1.3 Maintenance benefits

#### ◆ Checking of the operational data of the Sub unit

The CASCADE CONTROLLER allows monitoring the status of Sub units and therefore provides the user with information about the status of the whole system. The parameters that can be checked for each Sub module are the following:

- · Operation status for Sub unit "n"
- · Water inlet temperature for Sub unit "n"
- · Water outlet temperature for module "n"
- Outdoor unit compressor frequency for module "n"
- · Status of DHW for module "n"
- Type of DHW production (Main or Sub) in case that "Status of DHW" for module "n" is "Enabled"

#### **♦** Alarm control

The CASCADE CONTROLLER has been designed in order to manage alarm notifications generated at the CASCADE CONTROLLER side and also alarms generated at the Sub unit side. In any case, both types of alarms are displayed at the bottom-left corner of the display of the LCD controller as it is done on the YUTAKI Unit.

- CASCADE CONTROLLER alarms: These alarms are generated at the CASCADE CONTROLLER side. Alarms
  can be due to factors such as sensor abnormality, wrong setup of the CASCADE CONTROLLER, high temperature
  limitation, freeze protection or abnormalities related to wireless thermostats. Some of these alarms trigger protection
  controls allowing to continue the operation of the CASCADE CONTROLLER, while others stop the CASCADE
  CONTROLLER in order to protect the unit.
- Sub unit alarms: Alarms generated at the Sub unit side are displayed at the LCD controller with alarm code 21X, where X indicates the number of the Sub unit in which the alarm occurred. For instance, should an alarm of any kind (thermistor, flow, wireless thermostat...) occur in Sub module 3, it is displayed in the LCD controller as "Alarm 213". As a rule, operation of the CASCADE CONTROLLER is not stopped in the event of a Sub unit alarm. The only case in which the operation of the CASCADE CONTROLLER is stopped due to Sub unit alarms (and emergency operation starts as long as it is enabled) is when all the Sub units in the system are in alarm.


#### **12.1.4 Control features**

#### ♦ I/O and sensor functions

The terminal board of the new YUTAKI CASCADE CONTROLLER allows a wide range of configurations, just as in the YUTAKI units. In addition to factory presets, the unit controller offers the possibility to adjust the detailed settings of every input, output and sensor port.

The factory default functions of the controller are those indicated in the label of terminal 2, as shown below:



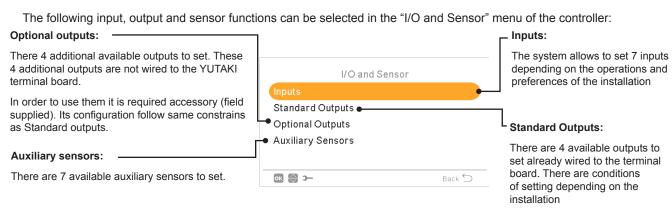



#### **♦** List of available inputs

- **Deactivated**
- Demand ON/OFF (by default in input 1): Consider both Circuit 1 and Circuit 2 in Demand ON when the signal is ON.
- Demand ON/OFF C1: Consider Circuit 1 in Demand ON when the signal is ON.
- Demand ON/OFF C2: Consider Circuit 2 in Demand ON when the signal is ON.
- Power Meter 2: To count any pulse received from the power meter 2 and sent to central control energy consumption calculation.
- ECO C1 + C2: Switch both Circuit 1 and Circuit 2 to ECO mode when input is closed.
- ECO C1 (by default in input 2, if there is circuit 1 in the installation): Switch Circuit 1 to ECO mode when input is closed.
- **ECO C2:** Switch Circuit 2 to ECO mode when input is closed.
- Forced Off: Forbid DHW, space heating and space cooling.
- Smart Act / SG1 (Fixed in input 5 if smart action is enabled): To active Smart Function.
- Swimming Pool (Fixed in input 3 if swimming pool is enabled): Consider Swimming pool in Demand ON when the signal is ON.
- Solar (Fixed in input 4 if solar is enabled): To let YUTAKI know that external Solar management system is ready to provide Solar energy.
- Operation: To switch between space cooling and space heating.
- DHW Boost (Fixed in input 6 if is DHW Boost is enabled): If it is set to open (NC), boost signal ON if circuit is open. If it is set to close (NO), boost signal ON if circuit is closed.
- Forced Heating: Force mode heating when input is closed
- Forced Cooling: Force mode cooling when input is closed.
- SG2: To active the different estates of Sm Grid Ready.

#### ♦ List of available outputs

- Deactivated
- SWP 3WV: (Fixed in output 1 if swimming pool is enabled): Signal control of the 3-way valve of the swimming pool.
- Water pump 3: (Fixed in output 2 if buffer tank is installed): Signal control of the water pump for buffer tank.
- **Boiler:** (Fixed in input 3 if boiler is enabled): Signal control of the boiler.
- Solar Pump: (Fixed in input 4 if solar pump is enabled): Signal control of the solar pump.
- Alarm: (By default in output 5): Signal is active if there is an alarm.
- Operation: (By default in output 6): Signal active in case Thermo ON in any condition.
- Cooling: (By default in output 7): Signal active when space cooling is operating.
- **Dem-ON C1:** (By default in output 8): Signal active when there is Demand in circuit 1.
- **Heating:** Signal active when space heating is operating.
- **DHW:** Signal active when DHW is operating.
- Solar overheat: Signal is active when solar overheat (only when solar combination status is total control)
- **Defrost:** Signal active when outdoor unit is defrosting.
- DHW Re-circulation: Signal active depending on option selected at chapter Circuit pump.
- Fan 1 Low: Signal is active when fan coil speed selected for Circuit 1 is set to Low.
- Fan 1 Medium: Signal is active when fan coil speed selected for Circuit 1 is set to Medium.
- Fan 1 High: Signal is active when fan coil speed selected for Circuit 1 is set to High.
- Fan 2 Low: Signal is active when fan coil speed selected for Circuit 2 is set to Low
- Fan 2 Medium: Signal is active when fan coil speed selected for Circuit 2 is set to Medium.
- Fan 2 High: Signal is active when fan coil speed selected for Circuit 2 is set to High.
- Constant Heating: Signal is active in case operation mode of LCD controller is set to Heating.
- Constant Cooling: Signal is active in case operation mode of LCD controller is set to Cooling.

#### **♦** List of available sensors:

- Deactivated
- T<sub>wo3</sub>: (Fixed in sensor 1 if boiler is installed): Use this sensor to monitor water temperature when boiler is used.




- Swimming Pool: (Fixed in sensor 2 if swimming pool is installed): Use this sensor when swimming pool is used in order to monitor swimming pool temperature.
- **Solar panel sensor:** Use this sensor when Total control is configured to monitor Solar Panel temperature.
- C1 + C2 Ambient: Use this sensor when auxiliary ambient temperature sensor is used for C1 and C2.
- C1 Ambient: Use this sensor when auxiliary ambient temperature sensor is used for C1.
- C2 Ambient: Use this sensor when auxiliary ambient temperature sensor is used for C2.
- Outdoor sensor (NTC): (By default sensor 3) To connect to the controller an auxiliary outside temperature sensor in case the heat pump is located in a position not suitable for this measurement.

#### 12.1.5 CASCADE control

The new CASCADE control determines whether a YUTAKI Sub unit has to be switched ON or OFF according to heating demand (Water temperature and Water setting temperature).

Up to 8 basic modules can be connected to the YUTAKI CASCADE CONTROLLER.

The combination of these modules operates as a single system, and allows to achieve higher capacities.

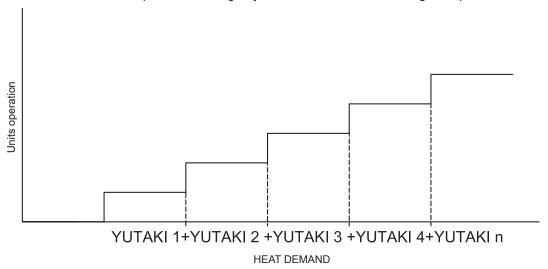

When this control determines that a unit has to be switched ON or OFF, it is the rotary token control which determines the concrete unit to be switched ON or OFF.

### 12.1.6 Rotary token control


A different Sub unit is started first in each heating up process, in order to balance operation between them.

In case that the CASCADE PID Control determines that a unit has to be switched ON in order to satisfy capacity requirements, the Rotary Control switches ON the "Next available Unit".

In case that the CASCADE PID Control determines that a unit has to be switched OFF as it is no longer required to satisfy capacity requirements, the Rotary Control switches OFF the unit that had been switched ON in first place.

Example of Rotary Token Control diagram:

	Time line (1 min)	SU-1	SU-2	SU-3	SU-4	SU-5	SU-6	SU-7	SU-8
1	All Units OFF	0	0	0	0	0	0		0
2	PID determine to switch ON module. YCC switches ON next available Sub Unit	1	0	0	0	0	0		0
3	PID determine to switch ON module. YCC switches ON next available Sub Unit	1	2	0	0	0	0		0
4	PID determine to switch ON module. YCC switches ON next available Sub Unit	1	2	3	0	0	0		0
5	PID determine to switch ON module. YCC switches ON next available Sub Unit	1	2	3	4	0	0		0
6	PID determine to switch ON module. YCC switches ON next available Sub Unit	1	2	3	4	5	0		0
7	Heat Demand. PID does not determine new Unit to be started	1	2	3	4	5	0		0
8	Module 3 is in alarm. YCC switches ON new module instead	1	2		3	4	5		0
9	PID determines to switch OFF a module. YCC switches OFF first module started	0	1		2	3	4		0
10	PID determines to switch OFF a module. YCC switches OFF first module started	0	0	_	1	2	3		0
11	PID determines to switch ON Module. YCC switches ON next available Unit	0	0	0	1	2	3		4
12	PID determine to switch ON module. YCC switches ON next available Sub Unit	5	0	0	1	2	3		4
13	Sub Unit switches to DHW operation. DHW Sub Unit also. YCC switches ON same amount of Units	3	4	5			1	0	2
14	PID determines to switch OFF a module. YCC switches OFF first module started	2	3	4			0	0	1
15	PID determines to switch OFF a module. YCC switches OFF first module started	1	2	3	0	0	0	0	0
16	In case of Thermo OFF or Demand OFF, YCC switches OFF all modules	0	0	0	0	0	0	0	0

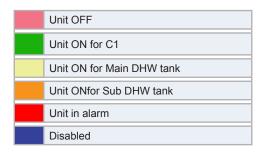



### 12.1.7 Synchronized defrost

The defrosting process of the YUTAKI Sub units operating with the Cascade Controller as a group has been improved in order to avoid the drop of heating capacity by not defrosting units at the same time.

The defrost operation of YUTAKI outdoor units connected to a Cascade Controller operating as a group is timed in order to limit the effect of the drop in heating capacity caused by simultaneous defrost. This improvement results in a more stable capacity and better comfort.

The beginning of defrosting operation of each YUTAKI outdoor unit is established according to the total number of units connected to the Cascade Controller and the individual need to defrost of each YUTAKI outdoor unit.

Number of YUTAKI units	Number of units in concurrent defrost
2 or 3	Only 1 YUTAKI can defrost
4 or 5	Only 1 YUTAKI can defrost
5 or 6	Up to 2 YUTAKI can defrost at the same time
6 or 7	Up to 2 YUTAKI can defrost at the same time
7 or 8	Up to 2 YUTAKI can defrost at the same time


### 12.2 General data

YUTAKI CASCADE CONTROLLER - ATW-YCC-03				
Power supply	1~ 230 V 50 Hz			
Maximum current (with DHWT Electrical Heater) / Maximum current (Only Electrical BOX)	19 A / 5 A			
Maximum input (with DHWT Electrical Heater) / Maximum input (Only Electrical BOX)	3.2 kW / 0.8 kW			
Ambient temperature range in operation	0 to 40 °C			
Humidity range in operation	0 to 80% RH non-condensing			
Product dimensions	490 x 360 x 100 mm			
Packaging dimensions	510 x 380 x 150 mm			
Net weight	5.45 kg			
Colour of the cover	White, RAL 9016			
Maximum diameter of power wiring harness	12 mm			

### 12.3 Electrical data

Model		Main unit power			Applicab	MC [A]	
	Wodel	U [V]	PH	F [Hz]	U max [V]	U min [V]	MC [A]
	ATW-YCC-03 (with DHW E.Heater)	230	1~	50	253	207	16
	ATW-YCC-03 (only EBOX)	230	1~	50	253	207	5

## 12.4 Name of parts

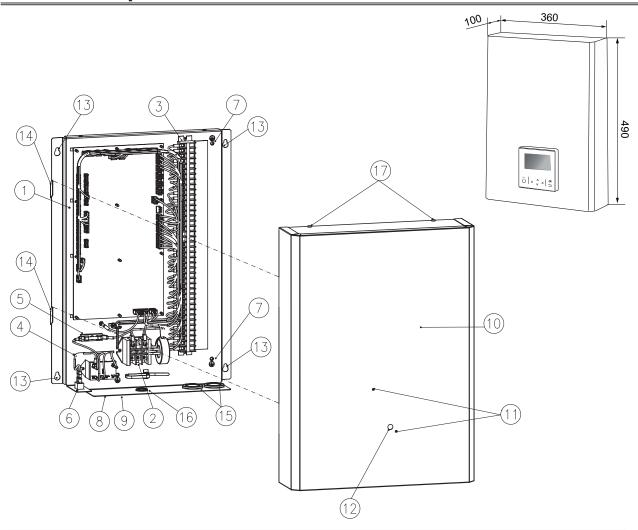


Nº	Part name
1	Electrical Box
2	Terminal Board (TB1)
3	Terminal Board (TB2)
4	Relay (AR1)
5	Fuse (EF1) and Fuse holder
6	Switch for DHW emergency operation
7	Earth screw
8	Model Label (Bottom)
9	Electrical data label (Bottom)
10	Service cover
11	LCD unit controller assembly holes (x2)
12	LCD unit controller routing hole
13	Wall mounting holes (x4)
14	Service cover assembly hooks (x2)
15	Rubber bushing for control wiring (x2)
16	Rubber bushing for power supply wiring
17	Service cover fixation screws (x2)




## 12.5 Service space



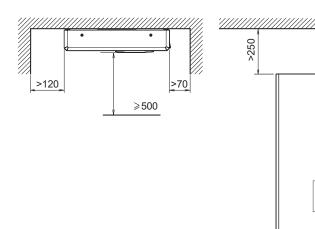


Keep a minimum distance for the installation of cables

Examples for placement

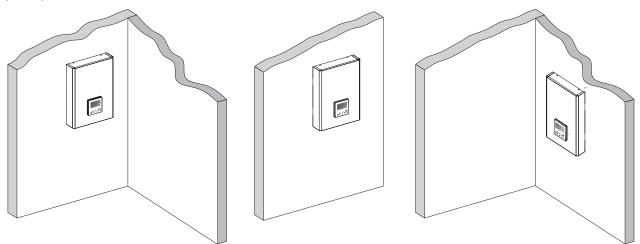

>20


## 12.6 Electrical wiring

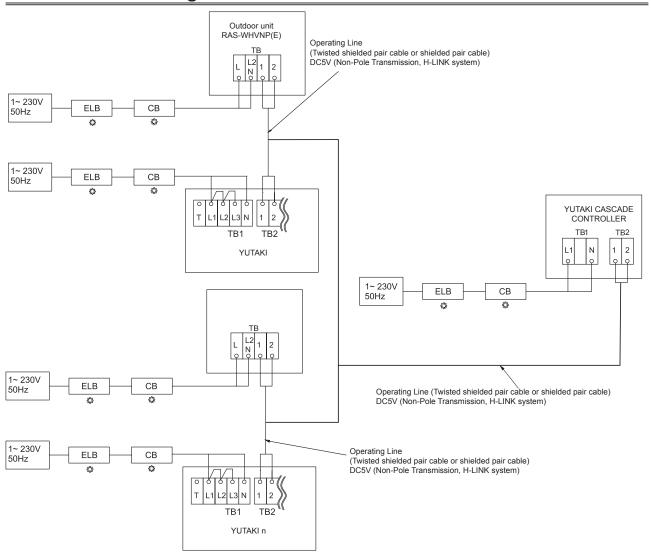


## 12.7 Transmission wiring

### 12.7.1 Connections on the Terminal board 1 (TB1)

The followings connections on the Terminal board 1 of the YUTAKI CASCADE CONTROLLER are required:

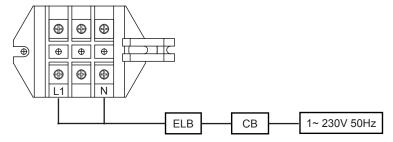

## 12.7.2 Connections on the Terminal board 2 (TB2)




## ⚠ CAUTION

When installing the YUTAKI CASCADE CONTROLLER (ATW-YCC-03) electrical connections for the control of the system must be done on the terminal board 2 of the YUTAKI CASCADE CONTROLLER rather than perform those connections on the terminal board of the YUTAKI.


#### **H-LINK** connection

The YUTAKI units, YUTAKI CASCADE CONTROLLER and outdoor units are interconnected via bus called H-LINK II, consisting of 2 non-polarity cables and accepting lengths of up to 1000 m. All YUTAKI and Outdoor units which are controlled by the same YUTAKI CASCADE CONTROLLER unit must be connected at the same H-LINK II line:

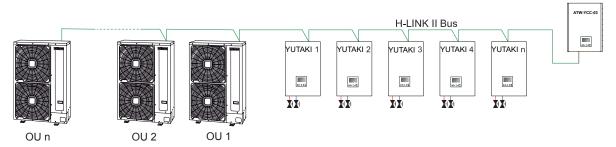


## Setting of End Terminal Resistance

When connecting outdoor units to an H-LINK II line, it is necessary to set the end terminal resistance as active (DSW5-1 ON) in only one of the units. Pin 1 of DSW5 is factory set to ON in all the outdoor units. Therefore, when connecting multiple outdoor units to an H-LINK II line, please check and make sure that only one of the units has pin 1 of DSW5 set to ON, and the rest of the units have pin 1 of DSW5 set to OFF.



The H-LINK II connection must be done as it is shown in the figure below:

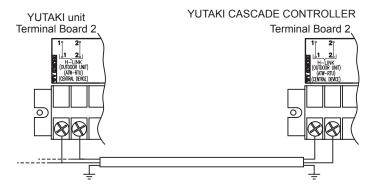


- The H-LINK wiring system requires only two transmission cables that connect the indoor unit and the outdoor unit.
- Use twist pair wires (0.75 mm²) for operation wiring between outdoor unit and indoor unit. The wiring must consist of 2-core wires (Do not use wire with more than 3 cores).
- Use shielded wires for intermediate wiring to protect the units from noise interference. Total H-LINK circuit length shall not exceed 1000m and a size in compliance with local codes.
- In the event that a conduit tube for field-wiring is not used, fix rubber bushes to the panel with adhesive.

## ⚠ CAUTION

Ensure that the transmission wiring is not wrongly connected to any live part that could be damaged the PCB.

## ◆ LCD unit controller (PC-ARFH2E) connection

Connection for the LCD unit controller PC-ARFH2E should be done on the Terminal Board 2 of the YUTAKI CASCADE CONTROLLER as shown in the next figure:

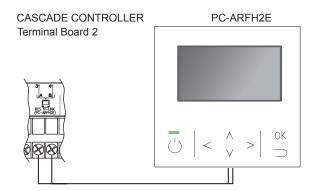


For this purpose, a H-LINK cable (accessory) is necessary.

The torque for the tightening of the screws of each Terminal board is explained in the table below

Terminal board	Tightening Torque (Nm/cm²)
TB1	2.0~2.5
TB2	1.0~1.3



## 12.7.3 Summary of the terminal board connections for YUTAKI CASCADE CONTROLLER

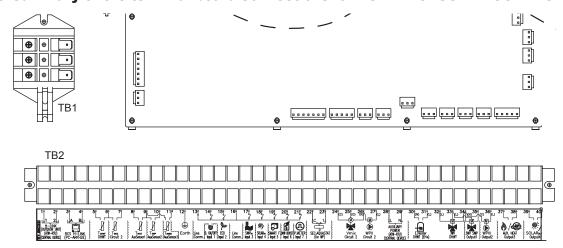

Mark	Part name	Description		
TERMINAL BOARD 2 (TB2)				
1 2	H-LINK commutation	The H-LINK transmission has to be done between the indoor unit and the terminals 1-2 of either outdoor unit, ATW-RTU or any other central device.		
3	H-LINK communication for remote control switch	Terminals for the connection of the YUTAKI unit controller.		
5	DHW tank's thermistor	The DHW sensor is used to control the temperature of the domestic hot water tank.		
6	Common thermistor	Common terminal for thermistor.		
7	Thermistor for water outlet temperature of second cycle	The sensor is used for the second temperature control and should be positioned after the mixing valve and the circulation pump.		
8	Thermistor for water outlet temperature after hydraulic separator	Water sensor for hydraulic separator, buffer tank or boiler combination.		
9	Common thermistor	Common terminal for thermistors.		
10	Thermistor for swimming pool water temperature	The sensor is used for the swimming pool temperature control and should be positioned inside plate heat exchanger of the swimming pool.		
11	Thermistor for second ambient temperature	The sensor is used for the second ambient temperature control and it should be positioned outdoors.		
12	Earth	Earth connection for the 3 way valve and water pump.		
13	Common line	Terminal Line common for input 1 and input 2.		
14	Input 1 (Demand ON/OFF) (*)	The air to water heat pump system has been designed to allow the connection of a remote thermostat to effectively control your home's temperature. Depending on the room temperature, the thermostat will turn the split air to water heat pump system ON and OFF.		
15	Input 2 (ECO mode) (*)	Available signal which allows to reduce the water setting temperature of circuit 1, circuit 2 or both.		
16	Common line	Terminal Line common for inputs 3, 4, 5, 6, 7.		
17	Input 3 (Swimming pool) (*)	Only for swimming pool installations: It is necessary to connect an external input to the air to water heat pump to provide signal when the water pump of swimming pool is ON.		
18	Input 4 (Solar) (*)	Available input for Solar combination with Domestic Hot Water Tank.		
19	Input 5 (Smart function) (*)	For the connection of an external tariff switch device to switch OFF the heat pump during peak electricity demand period. Depending on the setting, the heat pump or DHWT will be blocked when signal is open/closed.		
20	Input 6 (DHW boost) (*)	Available input for an instantaneous heating of the domestic hot water of the tank.		
21 Input 7 (Power meter)		The measuring of the real power consumption can be done connecting an external power meter. The number of pulses of the power meter is a variable which must be set. By this, every pulse input is added into corresponding operation mode (Heating, Cooling, DHW Operation). Two possible options:		
		- One power meter for all installation (IU+OU).		
		- Two separated power meters (one for IU and one for OU).		
22	Aquastat security for circuit 1 (WP1)	Terminals intended for the connection of the Aquastat security accessory (ATW-AQT-01) for controlling water temperature of the circuit 1.		




Mark	Part name	Description	
24(C)	Mixing valve close		
25(O)	Mixing valve open	When a mixing system is required for a second temperature control, these outputs are necessary to control the mixing valve.	
26(N)	N Common	are necessary to control the mixing valve.	
27(L)	Water Pump 2 (WP2)	When there is a second temperature application, a secondary pump is the circulating pump for the secondary heating circuit.	
28			
29	Auxiliary power	Power supply for ATW-RTU and central device.	
30(N)	Electrical Heater DHW Output		
31(L)			
32(C)	Common line	Common terminal for the 3-way valve for DHW tank.	
33(L)	3-way valve for DHW tank	The air to water heat pump can be used to heat DHW. This output will be on when DHW is activated.	
34(N)	N common	Neutral terminal common for 3-way valve of DHW tank and outputs 1 and 2.	
35(L)	Output 1 (3-way valve for swimming pool) (*)	The air to water heat pump can be use to heat swimming pool. This output will be ON when swimming pool is activated.	
36(L)	Output 2 (Water pump 3 (WP3)) (*)	When there is a hydraulic separator or buffer tank, additional water pump (WP3) is needed.	
37		The boiler can be used to alternate with the heat pump when the heat pump cannot	
	Output 3 (Auxiliary boiler or electric	achieve the required temperature by itself.	
38	heater) (*)	A water electric heater (as accessory) can be used to provide the additional heating required on the coldest days of the year.	
39	Output 4 (Color) (*)	Output for color combination with Domostic Llet Water Tonk	
40	Output 4 (Solar) (*)  Output for solar combination with Domestic Hot Water Tank.		

# i NOTE

(\*): Inputs and outputs explained in the table are the factory-set options. By means of the unit controller, some other inputs and outputs functions can be configured and used. Refer to the YUTAKI CASCADE CONTROLLER and the PC-ARFH2E technical documentation and operation manual for detailed information.

## 12.7.4 Location of DIP switches and rotary switches

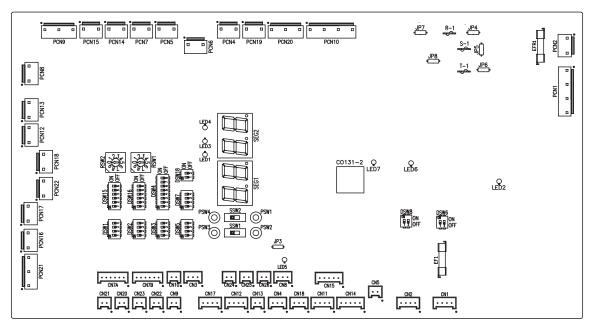



## 12.7.4.1 Function of DIP switches and rotary switches




- The mark "•" indicates the dip switches positions.
- No mark "■" indicates pin position is not affected.
- The figures show the settings before shipment or after selection.
- "Not used" means that the pin must not be changed. A malfunction might occur if changed.

## ⚠ CAUTION

Before setting dip switches, first turn the power supply OFF and then set the position of dip switches. If the switches are set without turning the power supply OFF, the contents of the setting are invalid.

#### DSW1: Model setting

Setting is required in order to match with the model of the Sub YUTAKI installed.

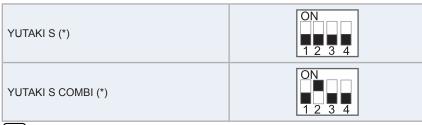


 $oxedsymbol{i}$  note

(\*): In case of installing the "Cooling kit" accessory, set the pin 4 of DSW1 to ON in order to enable the cooling operation.

#### DSW2: Unit capacity setting

Setting is required in order to match with the model of the Sub YUTAKI installed.



#### DSW3: Additional setting 1

Setting before shipment	ON 12 3 4
1-step heater for 3-phase unit	ON 12 3 4

#### DSW4: Additional setting 2

Setting before shipment	1 2 3 4 5 6 7 8
DHW defrost	ON 1 2 3 4 5 6 7 8
Heater forced OFF	ON 1 2 3 4 5 6 7 8
Unit and installation pipes antifreeze protection	ON 1 2 3 4 5 6 7 8



# **A** CAUTION

- Never turn all DSW4 dip switch pins ON. If this happens, the software of the unit will be removed.
- Never activate "Heater Forced OFF" and "Electric heater or boiler emergency mode" at the same time.

## ◆ DSW5: Additional setting 3

In the cases where the outdoor unit is installed into a location where its own outdoor ambient temperature sensor can not give a suitable temperature measurement to the system, it is available the 2nd outdoor ambient temperature sensor as accessory. By means of DSW1&2 setting, the preferable sensor for each circuit can be selected.

Factory setting	ON 1 2 3 4
Outdoor unit sensor for circuits 1 and 2.	ON 1 2 3 4
Outdoor unit sensor for circuit 1; Auxiliary sensor for circuit 2.	ON 1 2 3 4
Auxiliary sensor for circuit 1; Outdoor unit sensor for circuit 2.	ON 12 3 4
Auxiliary sensor instead of outdoor unit sensor for both circuits.	ON 1 2 3 4

#### ◆ DSW6: Not used

Factory setting (Do not change)	ON 1 2

#### ◆ DSW7: Additional setting 4

Factory setting	ON 1 2 3 4
Compatibility with ATW-RTU-04 (When cooling mode operation is needed)	ON 1 2 3 4


#### DSW8: Not used

Factory setting (Do not change)	ON 1 2
---------------------------------	-----------

### ◆ DSW15 & RSW2: Refrigerant cycle number setting for YUTAKI CASCADE CONTROLLER

Set and assign to each outdoor unit a different refrigerant cycle number through DSW4 and RSW1 on the outdoor units

Set for each unit the same refrigerant cycle than its outdoor unit (DSW15 and RSW2).



It is recommended to set the refrigerant cycle number from 0 and correlatively (1,2,3,....) per each module in order to match whit the address number shown in the LCD remote controller. If a different rule is used for assign the refrigerant cycle number it is necessary to set the is set the same refrigerant cycle number in the LCD remote controller.



#### ♦ DSW16 & RSW1: Not used

	DSW16	RSW1
Factory setting	ON 1 2 3 4 5 6	00 7 2 0 0 7 2 0 0 0 0 0 0 0 0 0 0 0 0 0



Don't change this setting, otherwise malfunction will be occur.

#### ♦ SSW1: Remote/Local





(\*) Don't change this setting, otherwise malfunction will be occur.

### ◆ SSW2: Heat/Cool (when SSW1 is in local setting)

Factory setting	Heat	
Heat operation	Cool(*)	Ш



(\*) Don't change this setting, otherwise malfunction will be occur.

### 12.7.4.2 LED indication

Name	Colour	Indication	
LED1	Green	Power indication	
LED2	Red	Power indication	
LED3	Red	Heat pump operation (thermo ON/OFF)	
LED4	Yellow	Alarm (flickering with 1 sec interval)	
LED6	Yellow	H-Link transmission	
LED7	Yellow	H-Link transmission for unit controller	

## 12.8 Optional functions

Optional functions

## 12.8.1 Optional functions by DSW setting

Code	Optional function description	Explanation	
DSW1#4:ON	Optional function description	Explanation	
ON 1 2 3 4	Heating & Cooling (ON) Unit	In case of cooling operation, this DSW should be set to ON + Coolin kit accessory.	
DSW3#3:ON ON 1 2 3 4	1 step heater for 3 phase unit option	This option can be used to switch all 3 steps of the electric heater at the same time, by means of a DIP-switch setting, in order to prevent 3-phase imbalance by the electric heater steps.	
DSW4#7:ON ON 1 2 3 4 5 6 7 8	Heating Heater forced OFF	This function forces a permanent OFF of the heater when selecting an installation configuration without the electric heater of the unit.	
DSW4#6:ON ON 1 2 3 4 5 6 7 8	Unit and pipes installation freeze protection	This function allows to start water pump in very low conditions.	
DSW4#5:ON  ON 1 2 3 4 5 6 7 8	Standard / Economic water pump operation	This function allows to stop water pumps when zone is in Demand OFF conditions in case mode selected is economic. Otherwise, pumps are always ON regardless zone is in Demand OFF conditions.	
DSW4#4:ON ON 1 2 3 4 5 6 7 8	Emergency Heater operation manual option	In the event of outdoor unit failure, the required heating can be provided by an electric heater or by a boiler.	
DSW4#3:ON  ON 1 2 3 4 5 6 7 8	DHW Heater Operation	The electric heater of the domestic hot water tank is disabled by factor setting. This function allows to activate its operation if needed.	
DSW5#1:OFF;2#OFF	C1 : Average OU Sensor C2 : Average OU Sensor		
DSW5#1:OFF;2#ON ON 1 2 3 4	C1 : Average OU Sensor C2 : Average Aux Sensor	A 2nd outdoor ambient temperature sensor is available as an accessory, in case that the built-in ambient temperature sensor of the	
DSW5#1:ON;2#OFF ON 1 2 3 4	C1 : Average Aux Sensor C2 : Average OU Sensor	outdoor unit cannot provide a reliable temperature measurement to the system because of restraints of the installation location. The preferred sensor for each circuit can be selected by means of DSW setting.	
DSW5#1:ON;2#ON ON 1 2 3 4	C1 : Average Aux Sensor C2 : Average Aux Sensor		



Co	ode	Optional function description	Explanation	
ON 1 2	5#4:ON 3 4	Use max (T <sub>wo</sub> /T <sub>wo3</sub> ) for water control	Some installation needs big buffer tank and in combination with auxiliary heating (boiler, pellets, solar panels. Etc), the control of the water can be done by external temperature sensor $(T_{wo3})$ to heat this buffer tank. Refer to Service Manual.	

## **12.8.2 Optional functions by Unit controller (PC-ARFH2E)**

## 12.8.2.1 Optional functions for Space Heating or Space Cooling

Optional function	Explanation	
Floor screed drying function (Circuits 1 & 2)	This function is used exclusively for the process of drying screed that has been newly applied to floor heating system.  The water temperature set-point follows a predetermined schedule upon activation of the floor screed drying function. For more information refer to Water control	
	chapter.	
Heating Auto ON/OFF  At higher outside temperatures it doesn't make sense to keep heating the bound the YUTAKI S System will switch the heating off when the daily average outemperature of previously day rises above the Summer Switch Auto On/Off Activation Temperature. For more information refer to Service Manual.		
Auto Heat-Cool	Only available for Cooling and Heating models and cooling mode enabled.  By using auto summer switch off average, user can use auto heat cool mode.  The end-user sets the desired operation mode on the user interface: Heating, Cooling or Automatic. When Automatic is selected, the change of the operation mode is based on:	
Auto Heat-Cool	Averaged outdoor temperature: the operation mode will be changed in order to always be within range determined by the space heating OFF temperature for heating and the space cooling ON temperature for cooling. If the outdoor temperature drops, the operation mode switches to heating and vice versa. For more information refer to Service Manual.	
Outdoor temperature average timer	The average timer corrects the influence of ambient temperature variations.  The weather-dependent set point calculation is done on the average outdoor temperature. The outdoor temperature is averaged over the selected time period. For more information refer to Service Manual.	

## 12.8.2.2 Optional functions for DHW

Optional function	Explanation
DHW anti-Legionella protection	A specific setting is available to protect the DHW system against Legionella, which raises up the DHW temperature over the normal DHW tank temperature setting (using the electric heater of the DHW tank and/or the heat pump) on a periodic basis.  For more information refer to Service Manual.
DHW re-circulation	This function allows the activation of the water pump for the re-circulation of the hot water from the DHW tank by means of the heat pump.  This function can also be used with the anti-legionella protection function.  For more information refer to Service Manual.
DHW boost	With this function enabled, it is possible to request a heating up of the DHW when user requires an instantaneous delivery of DHW.  For more information refer to Service Manual.
DHW Mode	DHW operation has 2 different modes, STANDARD and HIGH DEMAND:  • STANDARD Mode: Behaves the same as Economic mode but it is used the lowest tank sensor to judge water temperature inside tank. This functionality ensure higher quantity of water already heated inside of tank and heating-up process are more frequent.  • HIGH DEMAND Mode: The heating of the domestic hot water is started if differential is bigger than TDHWON. It will be started with water tank heater only unless water temperature in tank
	goes below Heat Pump starting temperature measured with the lowest sensor on tank. For more information refer to Service Manual.

## 12.8.2.3 Optional functions for Heat pump

Optional function	Explanation	
	In some cases, water pump of the YUTAKI unit is not sized for big heating installation (small water pump). In this case, a hydraulic separator or buffer tank and secondary water pump has to be used to ensure proper water pump dimensioning.	
Hydraulic separator combination	The boiler is configured in parallel with the heat pump. A hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing. Additional Water pump (WP3) and water sensor $(T_{wo3})$ are needed for boiler combination control (automatic added when Boiler combination is enabled).	
	For more information refer to Service Manual.	
Pumps setup	This option allows to configure between 2 hydraulic schemes when hydraulic separator is used. Standard configuration forces WP3 to operate whenever there is demand from Circuit 2. On the other hand, Parallel configuration, allows to connect WP3 and WP2 to the buffer tank, and operation of WP3 is independent to the operation of WP2.	
	For more information refer to Service Manual.	
Electrical heater or boiler emergency mode	For the use of the electrical heater or boiler in case of outdoor unit fault, additional setting shall be applied into IU setting:	
	Electrical heater emergency can be both automatic or manual switched ON by the user and the configuration must be done from the Unit controller	
	For more information refer to Service Manual.	
Smart Grid ready	This function can be used to block or limit the heat pump or increase demand due to electricity availability. Demand increase is configurable for heating and also for cooling operation.	
	For more information refer to Service Manual.	
Fan coil management  In case fan coil is selected as a Heating/cooling emitter, fan speeds can be controlled from thermostat and fan coil's fan speeds are controlled from YUTAKI optional outputs.		



## 12.8.2.4 Optional functions for Unit controller (PC-ARFH2E)

Optional function	Explanation
UTC Zone	UTC Zone: Europe spans 7 primary time zones (5 of them can be seen on the map in this article, while 2 other zones contain the European part of Kazakhstan and some very eastern territories of European Russia). Most of European countries use daylight saving time and switch to it at the same moment, which is 'harmonise' their summer time adjustment.
European summer time When European summer time is activated, it should change the time when the zone is doing it.	
Holidays	Holidays function is only available for room thermostat view of PC-ARFH2E. Holidays let the user specify a date and hour for the Room Setting to be OFF with the configured setting.

### 12.8.3 Optional external input/output configuration signals

The system has 7 input and 4 output optional signals (+ 4 output signals when using accessory). The new YUTAKI series allow different ports to be configured for those I/O signals, as well.

The user can configure those input signal to perform different functions from the unit controller. This is briefly explained in the next tables:

#### Input signals and input ports

Code	Name	Port	Input
. 1	Input 1	TB2 #13&14	230 V
ı,2	Input 2	TB2 #13&15	230 V
ıΞ	Input 3	TB2 #16&17	230 V
<i>,</i> 4	Input 4	TB2 #16&18	230 V
ر5	Input 5	TB2 #16&19	230 V
ι5	Input 6	TB2 #16&20	230 V
יה	Input 7	TB2 #16&21	230 V

Optional functions

## Input functions (To be configured from the unit controller)

Function #	Input	Description			
0	Deactivated	-			
1	Demand ON/OFF	Send Demand ON or OFF Operation to Circuit 1 and Circuit 2.			
2	Smart Act./SG Ready Input 1	This function must be used to block or limit the heat pump when restricted by Electric company. It allows an external Smart switch device to switch off or reduce consumption of the heat pump during time of peak electricity demand.  In case of use of Smart Grid Ready application, this input is used as a digital input 2 and allows four different operating modes.			
3	Swimming pool	When YUTAKI model is used to warm th swimming pool water, this input is used as a feedback for swimming pool water pump.			
4	Solar	In case of combine YUTAKI with solar panels, this input is used as a feedback for solar station ready operation.			
5	Operation mode	Cool/Heat must be changed by an input of an external contact signal. Contact signal is edge detection; Cool/Heat changeover by unit controller is also available.			
6	DHW boost	With this function enabled, it is possible to request a heating up of the DHW when user requires an instantaneous delivery of DHW.			
8	Demand ON/OFF C1	Send Demand ON or OFF Operation only to Circuit 1.			
9	Demand ON/OFF C2	Send Demand ON or OFF Operation only to Circuit 2.			
10	Forced heating	Forced Heating Demand by input of contact signal from outside.			
11	Forced cooling	Forced Cooling Demand by input of contact signal from outside.			
13	ECO mode C1 & C2	Water temperature setting for Circuit 1 and Circuit 2 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside.			
14	ECO mode C1	Water temperature setting for Circuit 1 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside.			
15	ECO mode C2	Water temperature setting for Circuit 2 it is reduced by ECO operation mode (Default 3°C) by input of contact signal from outside.			
16	Force OFF	Force OFF operation for unit. RCS will continue as normally set but will show indication that operation is forbidden.			
17	SG Ready Input 2	In case of want to use Smart Grid Ready application, this input is used as a digital input 2 and allow four different operating modes.			

## **Output signals and output ports**

Code	Name	Port	Output
ا م	Output 1	TB2 #34 (N) & 35 (L)	230 V
02	Output 2	TB2 #34 (N) & 36 (L)	230 V
εa	Output 3	TB2 #37&38	Free voltage signal
۲۵	Output 4	TB2 #39&40	Free voltage signal
5م	Output 5	PCN20 #1-2	12Vdc signal
۵5	Output 6	PCN21 #1-2	12Vdc signal
70	Output 7	PCN22 #1-2	12Vdc signal
o8	Output 8	PCN23 #1-2	12Vdc signal
٩۵	Output 9	PCN12 #1-2	230 V



## **Output functions (To be configured from the unit controller)**

Function #	Output	Description		
0	Deactivated	-		
1	3WV SWP	In case of combine YUTAKI with swimming pool, this output is used to drive 3 way valve swimming pools.		
2	WP3	In case of combine YUTAKI with boiler or hydraulic separator, this output is used to drive water pump 3.		
3	Boiler combination	In case of combine YUTAKI with boiler, this output is used to switch ON it.		
4	Solar pump	In case of combine YUTAKI with solar panel, this output is used to drive water pump station		
5	Alarm signal	Output when an "Alarm Code" is received from Indoor Unit or outdoor unit.		
6	Operation signal	Output in case that "Thermo-ON" signal in any condition.		
7	Cooling signal	Output in case that "Thermo-ON" signal in Cooling operation.		
8	Demand-ON signal circuit 1	Signal is enabled when circuit 1 is operating in Demand-ON.		
9	Heating signal	Output in case that "Thermo-ON" signal in Heating operation.		
10	DHW signal	Output in case that "Thermo-ON" signal in DHW operation.		
11	Solar overheat	Output in case that solar temperature signal is active when solar overheat (only when so combination status is total control).		
12	Defrost	Output if the operation state of the outdoor unit when is defrosting.		
13	DHW re-circulation pump	In case of re-circulation pump enabled for HSW tank.		
14	Fan 1 Low speed	Output for fan coil speed.		
15	Fan 1 Medium speed	Output for fan coil speed.		
16	Fan 1 High speed	Output for fan coil speed.		
17	Fan 2 Low speed	Output for fan coil speed.		
18	Fan 2 Medium speed	Output for fan coil speed.		
19	Fan 2 High speed	Output for fan coil speed.		
20	Constant Heat	Output in high state whenever operation mode from Unit controller is in heating mode.		
21	Constant cool	Output in high state whenever operation mode from Unit controller is in cooling mode.		

## 12.9 Additional functions by accessory sensor

Hitachi offers to its users the option to add more functions to the inputs from signals coming from some specific sensors. The configuration for this purpose is explained below:

I/O Terminal name		Port for setting	Factory default setting		In most Octoor to the con-
I/O	Display	(Connector number)	Setting contents	Function #	Input/Output type
Sensor 1	A1	CN26 #2	T <sub>wo3</sub>	0	NTC
Sensor 2	A2	CN25 #1-2	Disabled	0	NTC
Sensor 3	A3	CN5 #1	Disabled	0	NTC



### **Function of sensors**

Function #	Input	- T <sub>wo3</sub> sensor is used when there is external heating source or useful to track better temperature when there is hydraulic separator or buffer tank.	
0	Disabled		
1	T <sub>wo3</sub> sensor		
2	Swimming pool	When combining YUTAKI with swimming pool, this sensor is used to read the temperature from the water of the swimming pool.	
3	Solar panel sensor	When combining YUTAKI with solar panels, this sensor is used to read the temperature from the solar panel.	
4	Zone 1 & 2 ambient sensor	If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the corresponding circuit.	
5	Zone 1 ambient sensor	If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the circuit 1.	
Zone 2 ambient sensor configuration, the detection of ambient temperature value is carried out. The ambient temperature setting for each circuit is set from the unit configuration.		If Aux1 and Aux2 sensors are both connected and enabled at the unit controller configuration, the detection of ambient temperature value is carried out by these sensors. The ambient temperature setting for each circuit is set from the unit controller or central platform. The temperature value detected by each sensor is applied to the circuit 2.	
7	Second outdoor ambient	An outside temperature sensor can be directly connected to the controller in case the heat pump is located in a position not suitable for this measurement.	





Hitachi certifies that our products have met EU consumer safety, health and environmental requirements.





Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. is certified with: ISO 9001 of AENOR, Spain for its Quality Management accordance with the standard. ISO 14001 of AENOR Spain for its Environmental Management systems accordance with the standard.

ER-0198/1996

GA-1999/0044



FC97J1107

Hitachi air conditioning products are manufactured according to: ISO 9001 of JQA, Japan for its Quality Management accordance with the standard. ISO 14001 of JACO, Japan for its Environmental Management accordance with the standard.

## Cooling & Heating

Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. Ronda Shimizu, 1 - Políg. Ind. Can Torrella 08233 Vacarisses (Barcelona) Spain

© Copyright 2021 Johnson Controls-Hitachi Air Conditioning Spain, S.A.U. – All rights reserved.

TCGB0138 rev.0 - 09/2021 **Printed in Spain**